

# **DrayTek**

## VigorSwitch FX2120

L2+ Managed Switch



DrayTek



# User's Guide

**V1.3**

# VigorSwitch FX2120

---

L2+ Managed Switch

User's Guide

Version: 1.3

Firmware Version: V3.7.4

Date: September 4, 2023

# Intellectual Property Rights (IPR) Information

---

## Copyrights

© All rights reserved. This publication contains information that is protected by copyright. No part may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language without written permission from the copyright holders.

## Trademarks

The following trademarks are used in this document:

- Microsoft is a registered trademark of Microsoft Corp.
- Windows 8, 10, 11 and Explorer are trademarks of Microsoft Corp.
- Apple and Mac OS are registered trademarks of Apple Inc.
- Other products may be trademarks or registered trademarks of their respective manufacturers.

# Safety Instructions and Approval

---

## Safety Instructions

- Read the installation guide thoroughly before you set up the device.
- The switch is a complicated electronic unit that may be repaired only by authorized and qualified personnel. Do not try to open or repair the switch yourself.
- Do not place the switch in a damp or humid place, e.g. a bathroom.
- The switch should be used in a sheltered area, within a temperature range of +5 to +40 Celsius.
- Do not expose the switch to direct sunlight or other heat sources. The housing and electronic components may be damaged by direct sunlight or heat sources.
- Do not deploy the cable for LAN connection outdoor to prevent electronic shock hazards.
- Do not power off the device when saving configurations or firmware upgrades. It may damage the data in a flash. Please disconnect the Internet connection on the device before powering it off when a TR-069/ ACS server manages the device.
- Keep the package out of reach of children.
- When you want to dispose of the modem, please follow local regulations on conservation of the environment.

## Warranty

We warrant to the original end user (purchaser) that the switch will be free from any defects in workmanship or materials for a period of two (2) years from the date of purchase from the dealer. Please keep your purchase receipt in a safe place as it serves as proof of date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, we will, at our discretion, repair or replace the defective products or components, without charge for either parts or labor, to whatever extent we deem necessary to restore the product to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal value, and will be offered solely at our discretion. This warranty will not apply if the product is modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions. The warranty does not cover the bundled or licensed software of other vendors. Defects which do not significantly affect the usability of the product will not be covered by the warranty. We reserve the right to revise the manual and online documentation and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

## Be a Registered Owner

Web registration is preferred. You can register your Vigor router via <https://myvigor.draytek.com>.

## Firmware & Tools Updates

Due to the continuous evolution of DrayTek technology, all modems will be regularly upgraded. Please consult the DrayTek web site for more information on newest firmware, tools and documents.

<https://www.draytek.com>

# Table of Contents

---

<b>Chapter I Introduction.....</b>	<b>IX</b>
I-1 Introduction.....	1
I-1-1 Key Features.....	1
I-1-2 LED Indicators and Connectors.....	2
I-2 Installation .....	3
I-2-1 Network Connection.....	3
I-2-2 Rack-Mounted Installation.....	4
I-2-3 Typical Applications .....	4
I-2-4 Configuring the Management Agent of Switch.....	8
I-2-5 IP Address Assignment.....	8
I-3 Accessing Web Page of VigorSwitch.....	13
I-4 Dashboard .....	14
<b>Chapter II Configuration .....</b>	<b>15</b>
II-1 General Setup.....	16
II-1-1 Mirroring.....	16
II-1-2 Link Aggregation.....	17
II-1-3 Multicast .....	20
II-1-4 STP .....	21
II-1-5 QoS.....	23
II-1-6 Jumbo Frame .....	26
II-1-7 LLDP .....	27
II-2 VLAN Setup .....	29
II-2-1 Existion VLAN.....	29
II-2-1-1 Default VLAN .....	29
II-2-1-2 Voice VLAN.....	30
II-2-1-3 Surveillance VLAN.....	32
II-2-2 MAC/Protocol VLAN Group .....	34
II-2-2-1 MAC Group .....	34
II-2-2-2 Protocol Group .....	36
II-2-3 GVRP.....	38
II-3 MAC Address Table.....	39
II-4 L3 Network .....	41
II-4-1 IP Network.....	41
II-4-2 Bind IP to MAC.....	43
II-4-2-1 MAC-IP Binding List .....	43
II-4-2-2 DHCP Table.....	44
II-4-3 VLAN Routing .....	45
II-5 Port Setup .....	47
II-5-1 General .....	47
II-5-2 VLAN Interface.....	49
II-5-3 GVRP.....	53
II-5-4 Multicast .....	55
II-5-5 STP .....	57
II-5-6 QoS.....	60
II-6 Multicast.....	63
II-6-1 IGMP Snooping .....	63
II-6-1-1 IGMP Snooping .....	64
II-6-1-2 VLAN Setting.....	64
II-6-1-3 Group Table.....	67
II-6-1-4 Filtering Profile.....	67


II-6-2 MVR .....	69
II-6-2-1 Port Setting.....	71
II-6-2-2 Static Group.....	72
II-6-3 MLD Snooping .....	74
II-6-3-1 MLD Snooping.....	75
II-6-3-2 VLAN Setting.....	76
II-6-3-3 Group Table.....	78
II-6-3-4 Filtering Profile.....	79
II-6-4 MLD Snooping Statistics.....	81
II-7 ONVIF Surveillance .....	82
II-7-1 Topology .....	82
II-7-2 Snapshot Stream.....	86
II-7-3 Device Maintenance .....	87
II-8 RADIUS/TACACS+ .....	91
II-8-1 RADIUS.....	91
II-8-2 TACACS+ .....	93
<b>Chapter III Security .....</b>	<b>95</b>
III-1 802.1x/MAC Authentication .....	96
III-1-1 Authentication Settings .....	96
III-1-2 Local/MAC Account .....	99
III-1-3 Authentication Hosts .....	100
III-2 Access Control List.....	102
III-2-1 Access Control List .....	102
III-1-2 Apply to Port .....	111
III-3 IP Source Guard .....	113
III-4 Port Security.....	115
III-5 Storm Control.....	117
III-6 DoS.....	119
III-6-1 Properties.....	119
III-6-2 Port Setting .....	121
III-7 Dynamic ARP Inspection.....	122
III-7-1 Properties.....	122
III-7-2 Statistics.....	123
III-8 DHCP Snooping.....	124
III-8-1 DHCP Snooping .....	124
III-8-2 Option82.....	125
III-8-3 Statistics.....	127
III-9 IP Conflict Prevention.....	128
III-10 Loop Protection .....	133
III-11 Port Recovery .....	135
<b>Chapter IV Utilities.....</b>	<b>137</b>
IV-1 Device Check .....	138
IV-2 Ping Test.....	139
IV-3 Fan Test .....	140
IV-4 SFP Vendor Info .....	141
IV-5 sFlow.....	142
<b>Chapter V Monitoring .....</b>	<b>145</b>

V-1 Log Center .....	146
V-1-1 System Log Information.....	146
V-1-2 System Log Settings.....	147
V-1-2-1 Local .....	147
V-1-2-2 Remote.....	149
V-2 Bandwidth Utilization.....	151
V-3 DHCP Table.....	152
V-4 Routing Table .....	153
V-5 CLI Sessions.....	154
V-6 LLDP Status.....	155
V-6-1 General Statistics.....	155
V-6-2 LLDP Device .....	156
V-6-2-1 Local .....	156
V-6-2-2 Remote.....	157
V-6-3 LLDP Overloading .....	158
V-7 GVRP Statistics .....	159
V-8 MLD Snooping Statistics .....	160
V-9 STP Statistics .....	161
V-10 Dynamic ARP Statistics .....	162
V-10 DHCP Snooping .....	163
V-10 Port Statistics .....	164
<b>Chapter VI System Maintenance.....</b>	<b>165</b>
VI-1 General.....	166
VI-1-1 Device Info .....	166
VI-1-2 Time .....	167
VI-1-3 Configuration.....	169
VI-1-4 Firmware .....	170
VI-2 Access Management .....	171
VI-2-1 LAN Access .....	171
VI-2-2 Management Authentication & Profile .....	173
VI-2-3 TR-069 .....	176
VI-2-4 OpenVPN .....	178
VI-2-5 Webhook .....	179
VI-2-6 Account & Password.....	180
VI-3 LLDP.....	182
VI-3-1 LLDP Port Setting .....	182
VI-3-2 LLDP-MED Setting .....	184
VI-3-3 LLDP Statistics .....	187
VI-4 SNMP .....	188
VI-4-1 Vlew.....	188
VI-4-2 Group .....	190
VI-4-3 Community .....	192
VI-4-4 User .....	194
VI-4-5 Engine ID .....	196
VI-4-6 Trap Notification .....	198
VI-5 Mail Server.....	201
VI-6 System Reboot.....	205
<b>Chapter VII Troubleshooting.....</b>	<b>207</b>
VII-1 Backing to Factory Default Setting.....	208

VII-1-1 Software Reset .....	208
VII-1-2 Hardware Reset.....	209
VII-2 Contacting DrayTek .....	210
<b>Appendix Telnet Commands .....</b>	<b>211</b>
A-1 Accessing Telnet of Vigor Switch .....	212
A-2 Available Commands .....	214
A-2-1 Clear Configuration.....	214
A-2-2 Clock Configuration .....	222
A-2-3 Configure Configuration .....	223
A-2-4 Copy Configuration.....	327
A-2-5 Delete Configuration .....	327
A-2-6 Disable Configuration.....	328
A-2-7 End Configuration.....	328
A-2-8 Exit Configuration .....	329
A-2-9 Hardware-Monitor Configuration.....	329
A-2-10 Ping Configuration.....	329
A-2-11 Reboot Configuration.....	330
A-2-12 Renew Configuration.....	330
A-2-13 Restore-defaults Configuration .....	330
A-2-14 Save Configuration .....	331
A-2-15 Show Configuration.....	331
A-2-16 SSL Configuration .....	332
A-2-17 Terminal Configuration.....	333
A-2-18 Traceroute Configuration .....	333
A-2-19 UDLD Configuration .....	334



# Chapter I Introduction

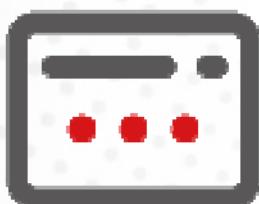



# I-1 Introduction

---

---

This is a generic International version of the user guide. Specification, compatibility and features vary by region. For specific user guides suitable for your region or product, please contact local distributor.

---

Thank you for purchasing VigorSwitch.

## I-1-1 Key Features

Before you use the Vigor modem, please get acquainted with the LED indicators and connectors first.

Below shows key features of this device:

### QoS

The switch offers powerful QoS function. This function supports 802.1p VLAN tag priority and DSCP on Layer 3 of network framework.

### VLAN

Support Port-based VLAN and IEEE802.1Q Tag VLAN. Support 24 active VLANs and VLAN ID 1~4094.


### Port Trunking

Allows one or more links to be aggregated together to form a Link Aggregation Group by the static setting.

### Power Saving

The Power saving using the IEEE 802.3az, Energy-Efficient Ethernet to detect the client idle and cable length automatically and provides the different power. It could efficient to save the switch power and reduce the power consumption.

## I-1-2 LED Indicators and Connectors

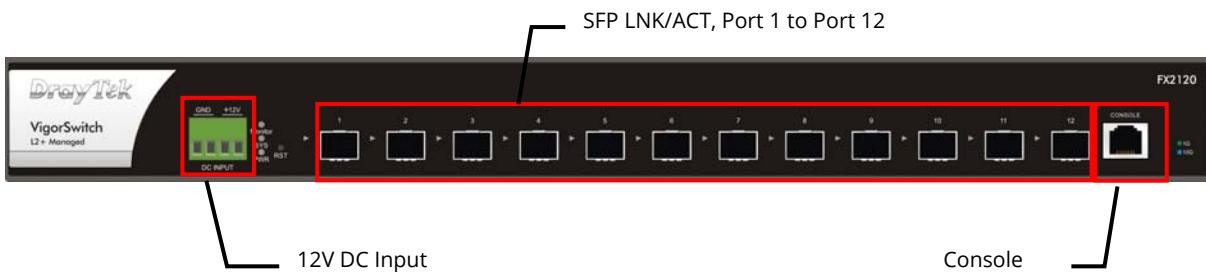

LED	Status	Explanation
Monitor	On (Red)	An alert for system failure due to overheating or wrong voltage.
	Blinking	The system is (TBD)
	Off	The device is in normal condition.
SYS	On (Green)	The switch finishes system booting and the system is ready.
	Blinking (Green)	The switch is powered on and starts system booting.
	Off	The power is off or the system is not ready / malfunctioning.
PWR	On	The device is powered on.
	Off	The device is powered off or failed.
Port 1 ~ 12 SFP LNK/ACT	On (Blue)	The device is connected with 10Gbps.
	On (Green)	The device is connected with 1000Mbps.
	Blinking	The system is sending or receiving data through the port.
	Off	The port is disconnected or the link is failed.

Interface	Description
RST	Factory reset button. <ul style="list-style-type: none"> <li>● Press it to reboot the system. (&lt;5 seconds)</li> <li>● Press it to reset the system with factory default settings. (5~20 seconds)</li> </ul>
Port 1 ~ 12	Port 1 to Port 12 can be used for fiber connection.
Console	Used to perform telnet command control.

## I-2 Installation

---

Before starting to configure the switch, you have to connect your devices correctly.

---




Note:  
For the sake of personal safety, only trained and qualified personnel should install this device.

---

### I-2-1 Network Connection



- Insert the connector into the slot (port 1~12 of this switch).
- Pull the release latch to remove it.

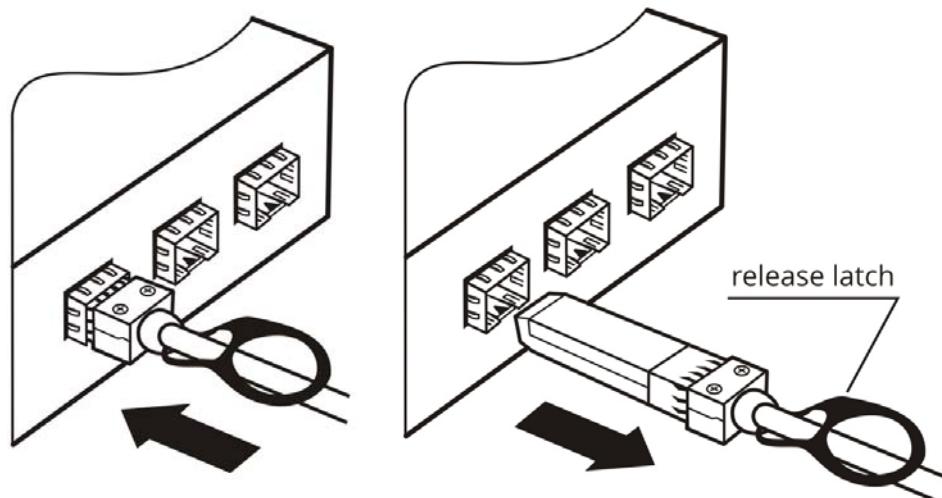

## I-2-2 Rack-Mounted Installation

The switch can be installed easily by using **rack mount kit**.

1. Attach the brackets to the chassis of a 19-inch rack. The second bracket attaches the other side of the chassis as above procedure.
2. After the bracket installation, the VigorSwitch's chassis can be installed in a rack by using four screws for each side of the rack.

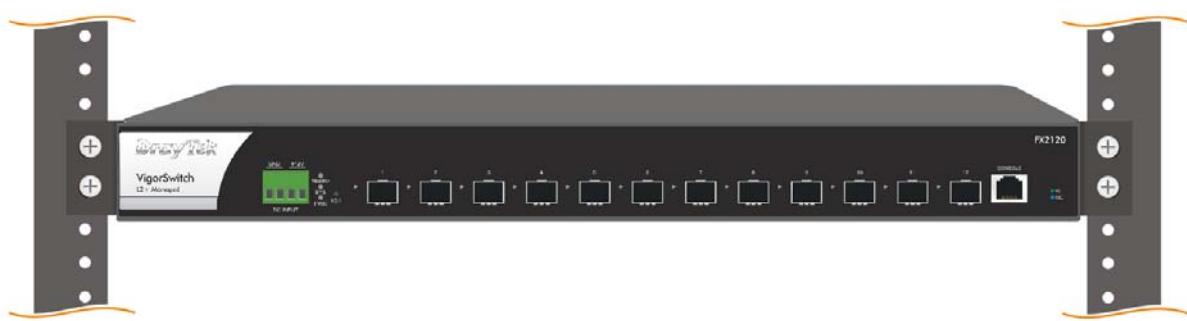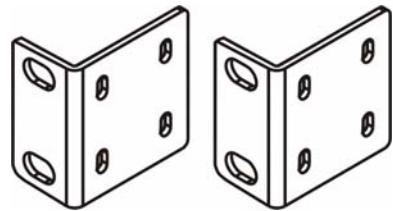

## I-2-3 Typical Applications

The VigorSwitch implements 12 Gigabit Ethernet TP ports with auto MDIX and four slots for the removable module supporting comprehensive fiber types of connection, including LC and BiDi-LC SFP modules. The switch is suitable for the following applications:

### Case 1: All switch ports are in the same local area network.


Every port can access each other. (\*The switch image is sample only.)



If VLAN is enabled and configured, each node in the network that can communicate each other directly is bounded in the same VLAN area.


Here VLAN area is defined by what VLAN you are using. The switch supports both port-based VLAN and tag-based VLAN. They are different in practical deployment, especially in physical location. The following diagram shows how it works and what the difference they are.

### Case 2: Port-based VLAN -1 (\*The switch image is sample only.)

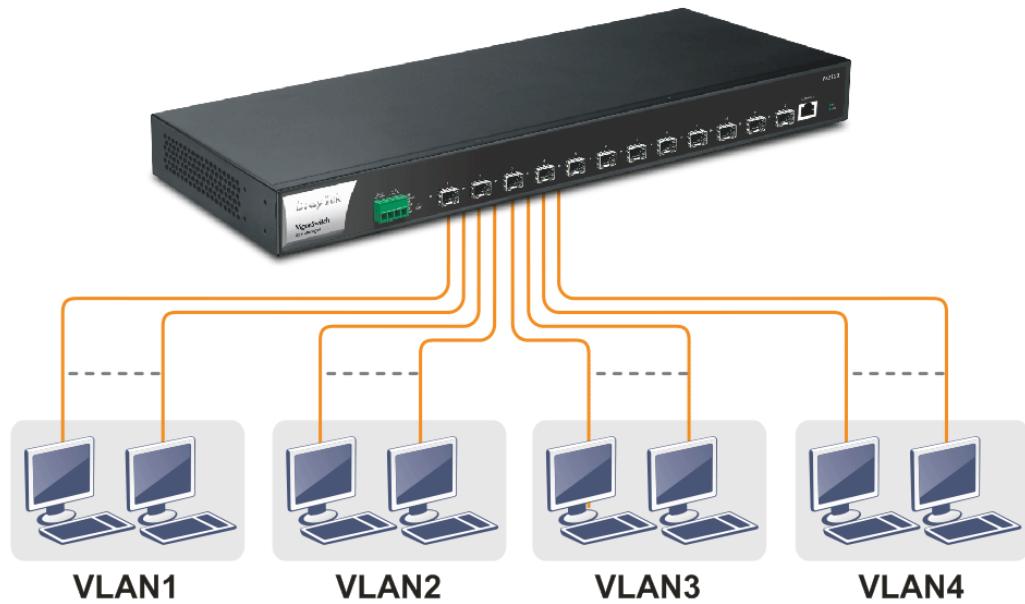


- The same VLAN members could not be in different switches.
- Every VLAN members could not access VLAN members each other.
- The switch manager has to assign different names for each VLAN groups at one switch.

#### **Case 3: Port-based VLAN - 2**

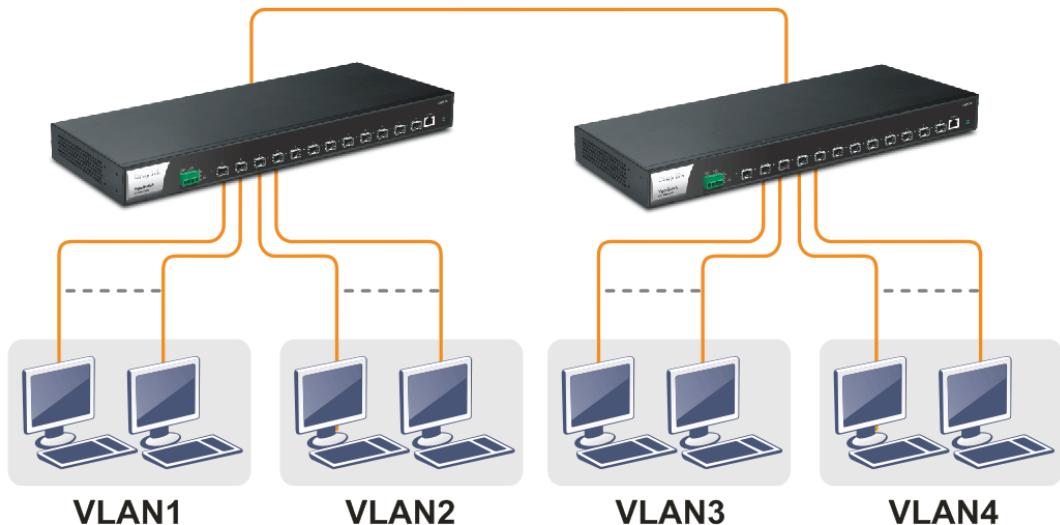

- VLAN1 members could not access VLAN2, VLAN3 and VLAN4 members.
- VLAN2 members could not access VLAN1 and VLAN3 members, but they could access VLAN4 members.
- VLAN3 members could not access VLAN1, VLAN2 and VLAN4.
- VLAN4 members could not access VLAN1 and VLAN3 members, but they could access VLAN2 members.


**Case 4: The same VLAN members can be at different switches with the same VID**

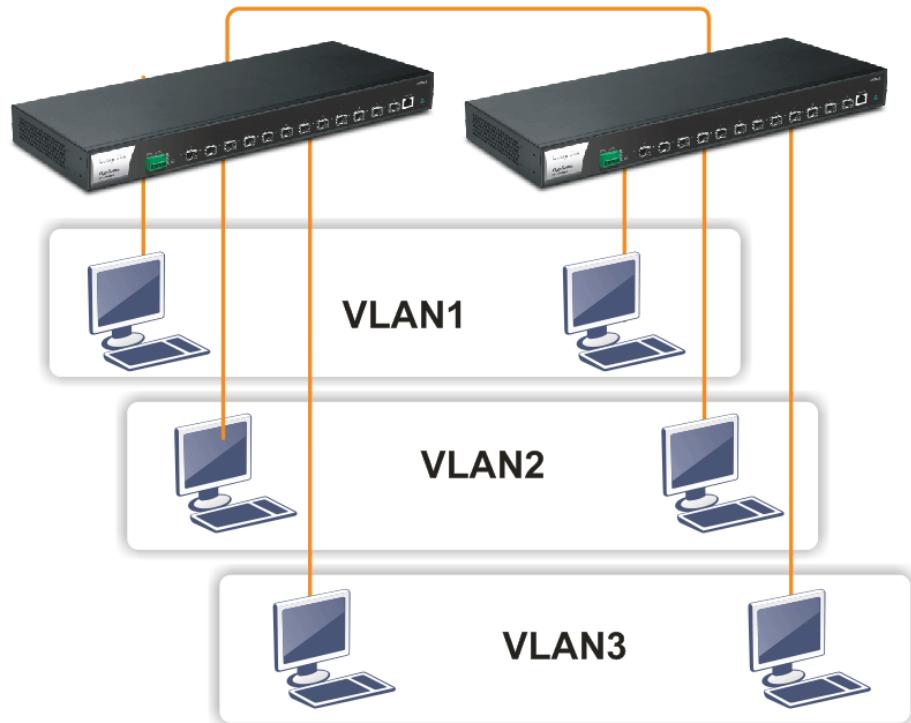


**Case 5: Desktop Installation**

1. Install the switch on a level surface that can support the weight of the unit and the relevant components.
2. Plug the switch with the female end of the provided power cord and plug the male end to the power outlet.


**Case 6: Central Site/Remote site application is used in carrier or ISP**

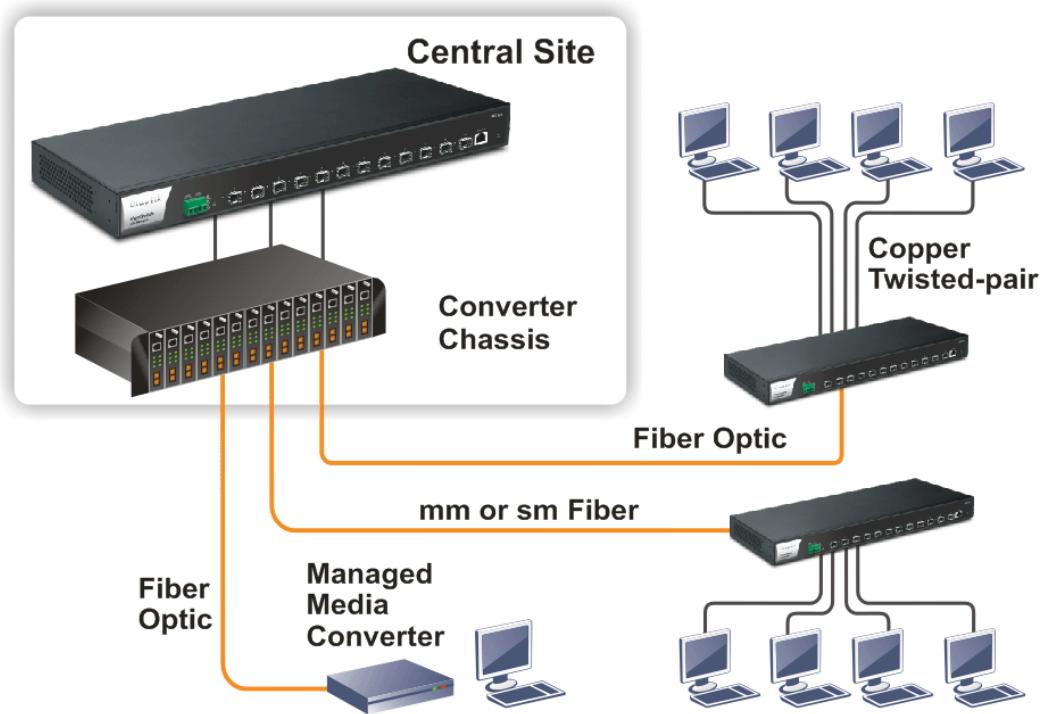

**Case 7: Peer-to-peer application is used in two remote offices**

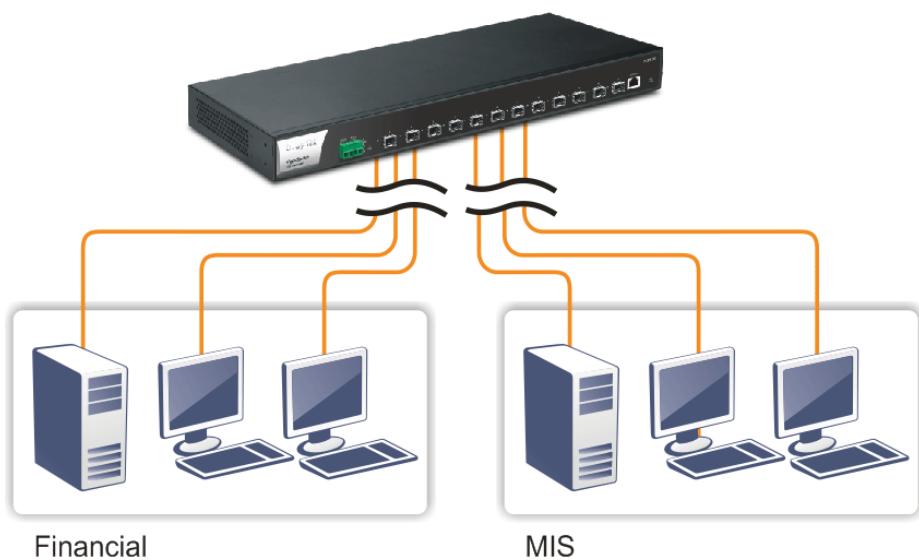

**Case 8: Office network**

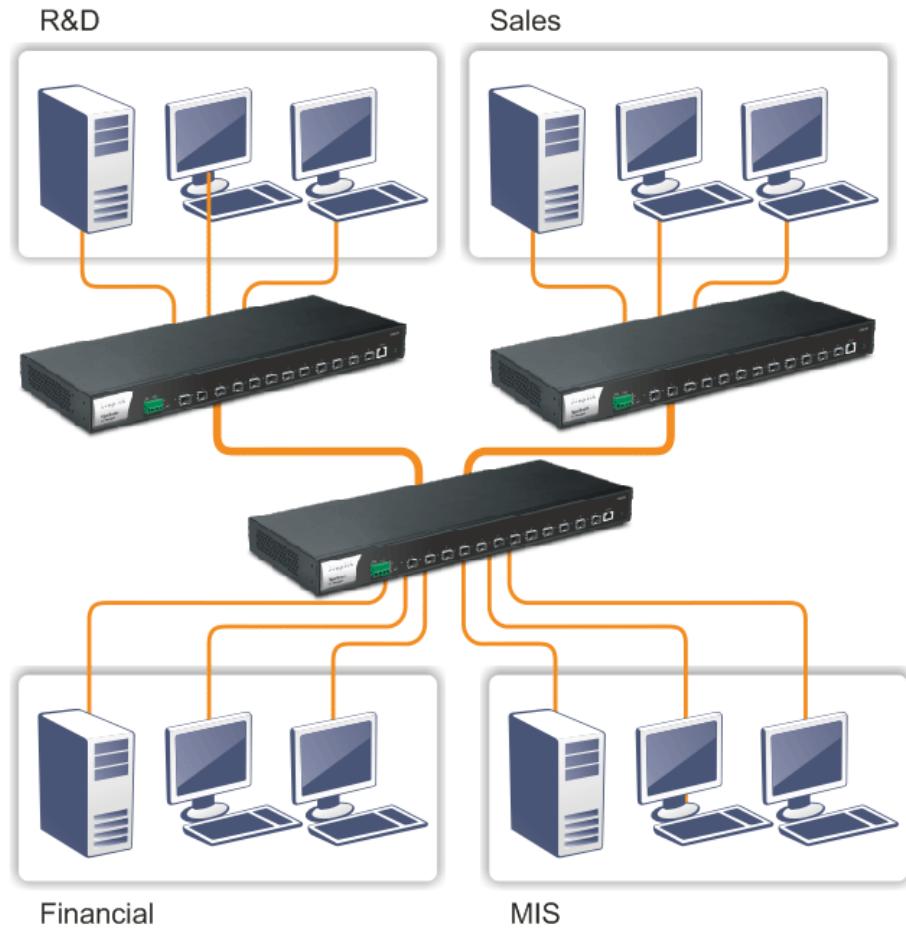


## I-2-4 Configuring the Management Agent of Switch

Users can monitor and configure the switch through the following procedures.

There are several ways to configure and monitor the switch, including Web-UI and SNMP.

VigorSwitch, for example:  
 IP Address: 192.168.1.224  
 Subnet Mask: 255.255.255.0  
 Default Gateway: 192.168.1.254

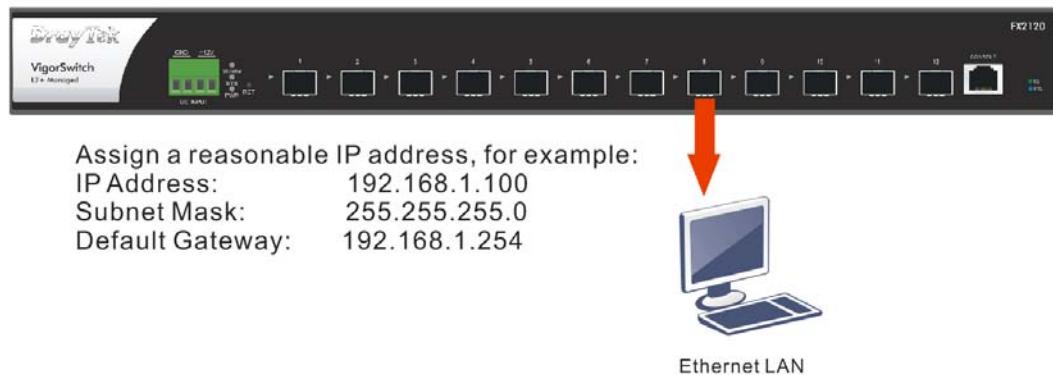


## I-2-5 IP Address Assignment

For IP address configuration, there are three parameters needed to be filled in. They are IP address, Subnet Mask, Default Gateway and DNS.

### **IP address:**

The address of the network device in the network is used for internetworking communication. Its address structure looks is shown below. It is “classful” because it is split into predefined address classes or categories.


Each class has its own network range between the network identifier and host identifier in the 32 bits address. Each IP address comprises two parts: network identifier (address) and host identifier (address). The former indicates the network where the addressed host resides, and the latter indicates the individual host in the network which the address of host refers to. And the host identifier must be unique in the same LAN. Here the term of IP address we used is version 4, known as IPv4.

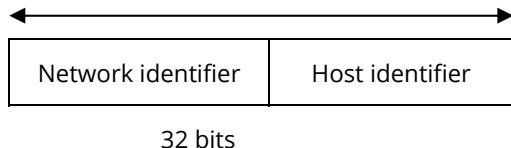

With the classful addressing, it divides IP address into three classes, class A, class B and class C. The rest of IP addresses are for multicast and broadcast. The bit length of the network prefix is the same as that of the subnet mask and is denoted as IP address/X, for example, 192.168.1.0/24. Each class has its address range described below.


#### **Class A:**

Address is less than 126.255.255.255. There are a total of 126 networks can be defined because the address 0.0.0.0 is reserved for default route and 127.0.0.0/8 is reserved for loopback function.

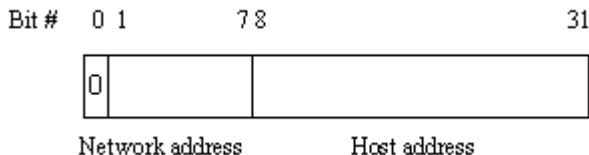


#### **Class B:**

IP address range between 128.0.0.0 and 191.255.255.255. Each class B network has a 16-bit network prefix followed 16-bit host address. There are 16,384 ( $2^{14}$ )/16 networks able to be defined with a maximum of 65534 ( $2^{16} - 2$ ) hosts per network.

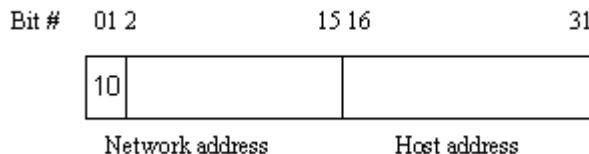

#### **Class C:**

IP address range between 192.0.0.0 and 223.255.255.255. Each class C network has a 24-bit network prefix followed 8-bit host address. There are 2,097,152 ( $2^{21}$ )/24 networks able to be defined with a maximum of 254 ( $2^8 - 2$ ) hosts per network.

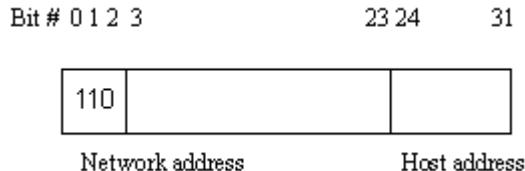

### **Class D and E:**

Class D is a class with first 4 MSB (Most significance bit) set to 1-1-1-0 and is used for IP Multicast. See also RFC 1112. Class E is a class with first 4 MSB set to 1-1-1-1 and is used for IP broadcast.

According to IANA (Internet Assigned Numbers Authority), there are three specific IP address blocks reserved and able to be used for extending internal network. We call it Private IP address and list below:

Class A	10.0.0.0 --- 10.255.255.255
Class B	172.16.0.0 --- 172.31.255.255
Class C	192.168.0.0 --- 192.168.255.255


Please refer to RFC 1597 and RFC 1466 for more information.

### **Subnet mask:**

It means the sub-division of a class-based network or a CIDR block. The subnet is used to determine how to split an IP address to the network prefix and the host address in bitwise basis. It is designed to utilize IP address more efficiently and ease to manage IP network.

For a class B network, 128.1.2.3, it may have a subnet mask 255.255.0.0 in default, in which the first two bytes is with all 1s. This means more than 60 thousands of nodes in flat IP address will be at the same network. It's too large to manage practically. Now if we divide it into smaller network by extending network prefix from 16 bits to, say 24 bits, that's using its third byte to subnet this class B network. Now it has a subnet mask 255.255.255.0, in which each bit of the first three bytes is 1. It's now clear that the first two bytes is used to identify the class B network, the third byte is used to identify the subnet within this class B network and, of course, the last byte is the host number.

Not all IP address is available in the sub-netted network. Two special addresses are reserved. They are the addresses with all zero's and all one's host number. For example, an IP address 128.1.2.128, what IP address reserved will be looked like? All 0s mean the network itself, and all 1s mean IP broadcast.

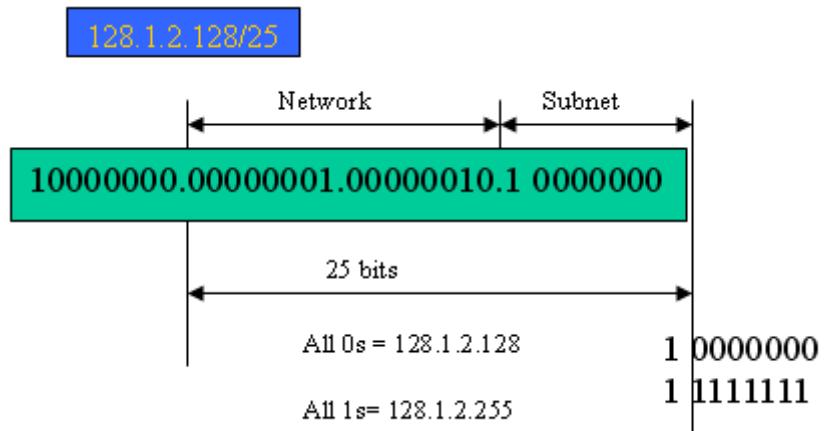

In this diagram, you can see the subnet mask with 25-bit long, 255.255.255.128, contains 126 members in the sub-netted network. Another is that the length of network prefix equals the number of the bit with 1s in that subnet mask. With this, you can easily count the number of IP addresses matched. The following table shows the result.

Prefix Length	No. of IP matched	No. of Addressable IP
/32	1	-
/31	2	-
/30	4	2
/29	8	6
/28	16	14
/27	32	30
/26	64	62
/25	128	126
/24	256	254
/23	512	510
/22	1024	1022
/21	2048	2046
/20	4096	4094
/19	8192	8190
/18	16384	16382
/17	32768	32766
/16	65536	65534

According to the scheme above, a subnet mask 255.255.255.0 will partition a network with the class C. It means there will have a maximum of 254 effective nodes existed in this sub-netted network and is considered a physical network in an autonomous network. So it owns a network IP address which may looks like 168.1.2.0.

With the subnet mask, a bigger network can be cut into small pieces of network. If we want to have more than two independent networks in a worknet, a partition to the network must be performed. In this case, subnet mask must be applied.

For different network applications, the subnet mask may look like 255.255.255.240. This means it is a small network accommodating a maximum of 15 nodes in the network.

For assigning an IP address to the switch, you just have to check what the IP address of the network will be connected with the switch. Use the same network address and append your host address to it.

- First, IP Address: as shown above, enter “**192.168.1.224**”, for instance. For sure, an IP address such as 192.168.1.x must be set on your PC.
- Second, Subnet Mask: as shown above, enter “255.255.255.0”. Choose a subnet mask suitable for your network.

---

**(i) Note:**


The DHCP Setting is enabled in default. Therefore, if a DHCP server presented on network connected to the switch, check before accessing your switch is essential.

---



## I-3 Accessing Web Page of VigorSwitch

---

1. Open any browser (e.g., Firefox) and type "192.168.1.224" as URL.
2. Please enter "admin/admin" as the Username/Password and click **Login**.

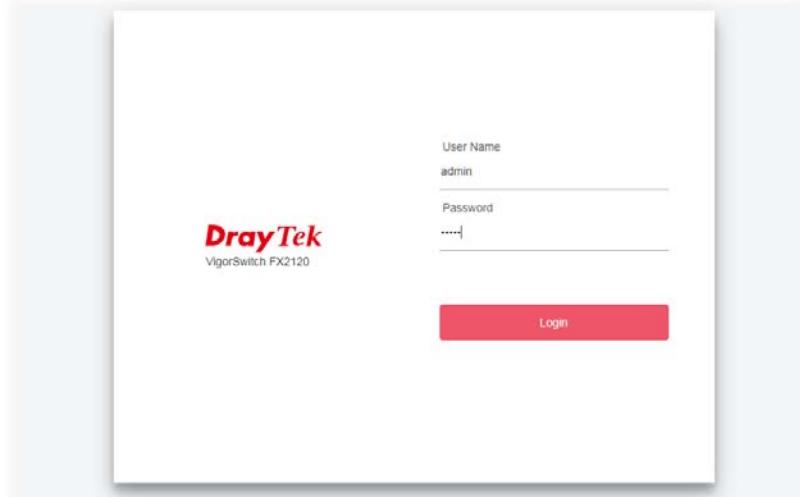


3. Now, the **Main Screen** will appear.

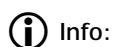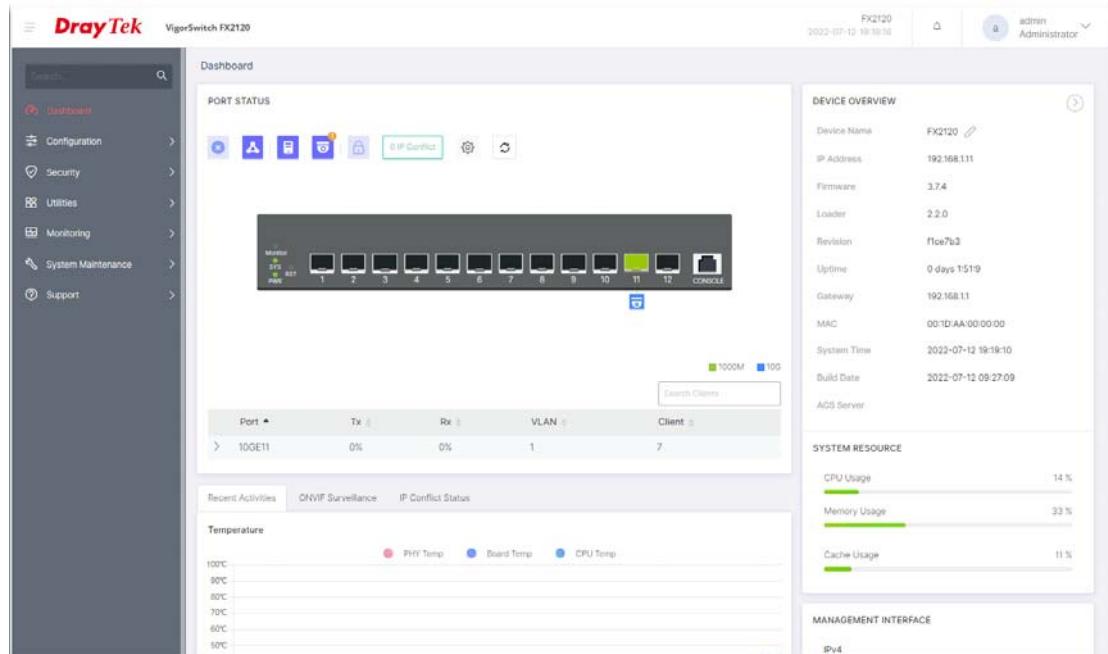


The DHCP Setting is enabled in default. Therefore, if a DHCP server presented on network connected to VigorSwitch, checking before accessing VigorSwitch is essential.

## I-4 Dashboard

Click **Dashboard** from the main menu on the left side of the main page.

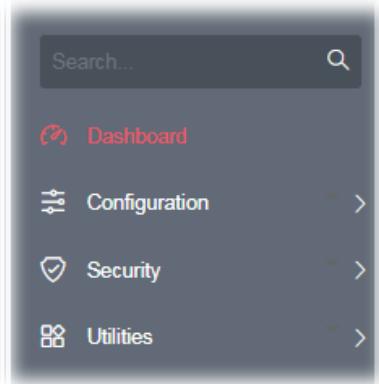

A web page with default selections will be displayed on the screen. Refer to the following figure:

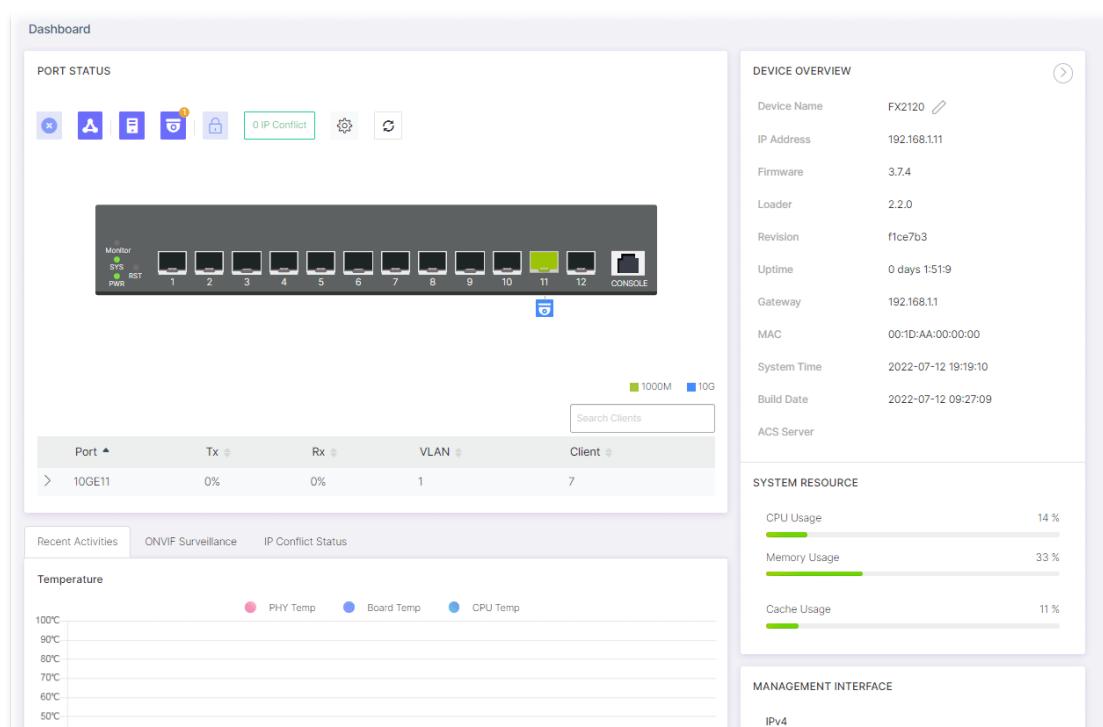


# Chapter II Configuration



## II-1 General Setup

### II-1-1 Mirroring

This section provides ability to mirror packets coming in or going out on any port to a destination port. Through the packet duplication in the destination port, this feature is convenient for system administrator to monitor / understand the traffic operation.

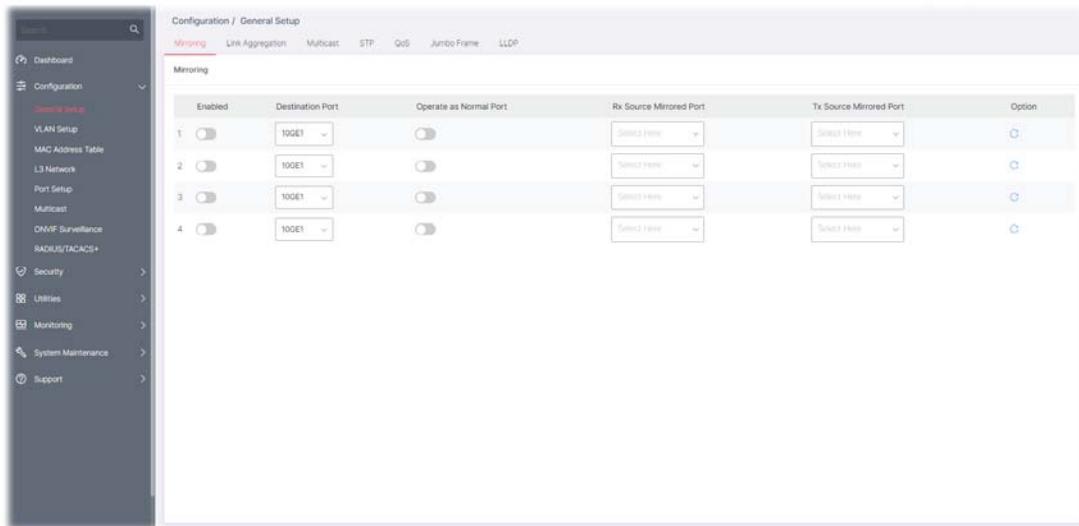


Available settings are explained as follows:

Item	Description
<b>Enabled</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ON/OFF icon - means “Enable”. OFF/ON icon - means “Disable”.
<b>Destination Port</b>	Specify the port where you wish to observe the mirrored packets.
<b>Operate as Normal Port</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ON/OFF icon - means “Enable”. OFF/ON icon - means “Disable”.
<b>Rx/Tx Source Mirrored Port</b>	Select the port(s) which you wish to mirror the traffic, Rx for mirror the packets into the port, Tx for mirror the packets going out from the port.
<b>Option</b>	- Clear current settings and return to factory default settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-1-2 Link Aggregation


LAG means Link Aggregation Group which groups some physical ports together to make a single high-bandwidth data path. Thus it can implement traffic load sharing among the member ports in a group to enhance the connection reliability.

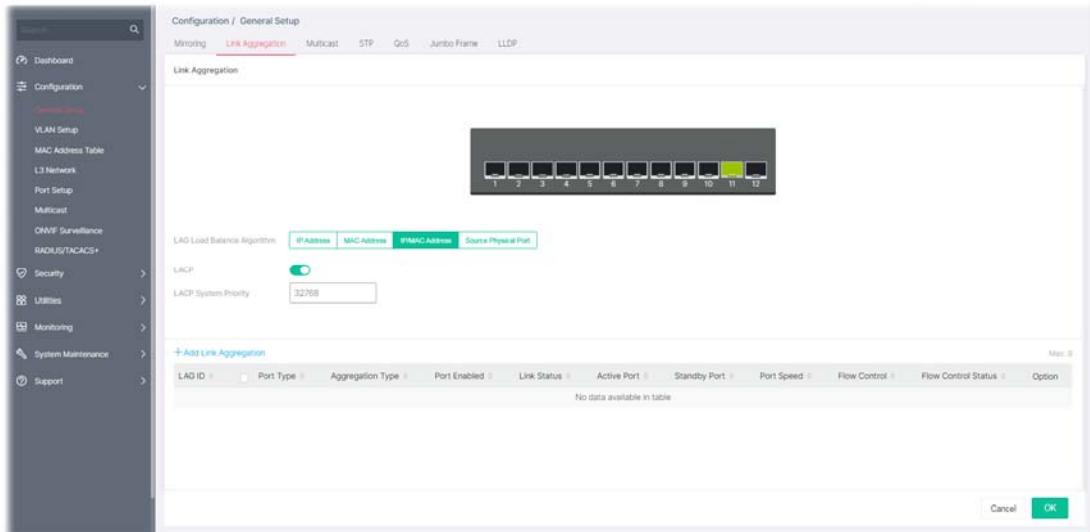

Available settings are explained as follows:

Item	Description
<b>Link Aggregation</b>	
<b>LAG Load Balance Algorithm</b>	Select your Load balance algorithm. <b>MAC address</b> - Aggregated group will balance the traffic based on different MAC addresses. Therefore, the packets from different MAC addresses will be sent to different links. <b>IP/Mac Address</b> - Aggregated group will balance the traffic based on MAC addresses and IP addresses. Therefore, the packets from same MAC addresses but different IP addresses will be sent to different links.
<b>LACP</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ( - means "Enable".) ( - means "Disable").
<b>LACP System Priority</b>	The priority is used to determine which switch (local or remote) on the LAG connection is able to decide LACP activities. The lower the number is, the higher the priority for VigorSwitch will be. Therefore, the switch with the highest system priority (e.g., 1) can make decisions about which ports actively participate in LAG at a given time.
<b>+Add Link Aggregation</b>	Click to open the setting page of creating Link Aggregation.

To add a link aggregation, click the "+Add Link Aggregation" to open the edit page.

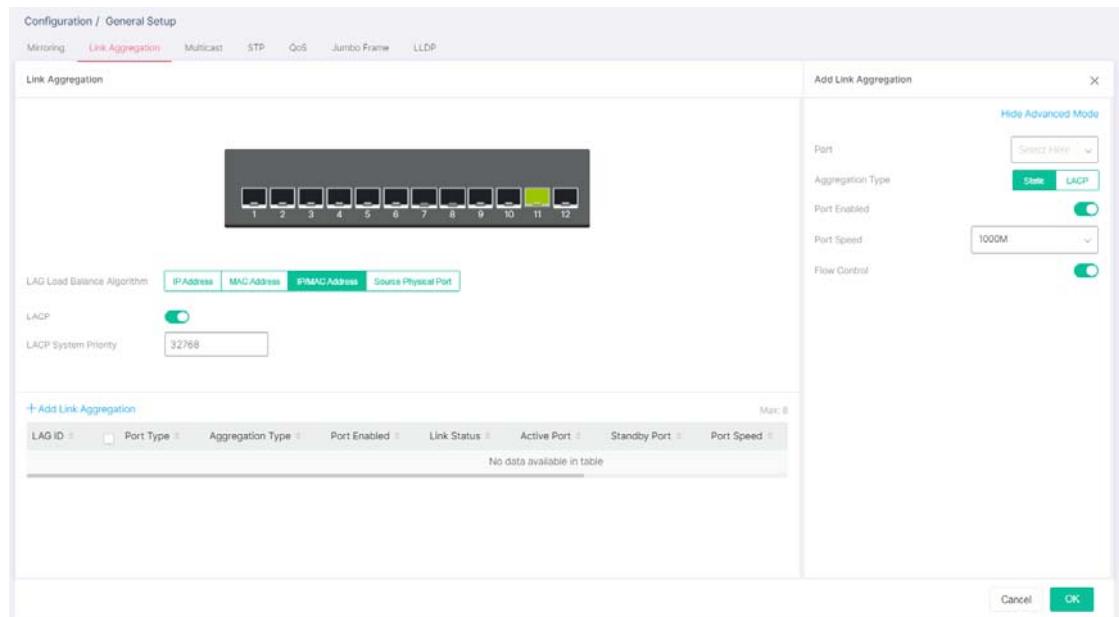

Available settings are explained as follows:

Item	Description
<b>Add/Edit Link Aggregation</b>	
<b>Show/Hide Advanced Mode</b>	Click to switch different modes.
<b>Port</b>	Select the GE port for applying the link aggregation configuration.
<b>Aggregation Type</b>	<p>Specify the type for LAG.</p> <p><b>Static</b> - The static aggregated port sends packets over active member without detecting or negotiating with remote aggregated port.</p> <p><b>LACP</b> - The LACP aggregated ports place member into active only after negotiated with remote aggregated port for best reliability.</p>
<b>Port Enable</b>	<p><b>Enable / Disable</b> - Click the toggle to enable / disable this function.</p>  - means "Enable".  - means "Disable".
<b>Port Speed</b>	<p>Port speed capabilities:</p> <ul style="list-style-type: none"> <li><b>1000M</b>: Force speed with 1000M ability.</li> <li><b>10G</b>: Force speed with 10G ability.</li> </ul> <p>Configure the speed to match fiber module speed.</p>
<b>Flow Control</b>	<p><b>Enable / Disable</b> - Click the toggle to enable / disable this function.</p>  - means "Enable".  - means "Disable". <p>A concentration of traffic on a port decreases port bandwidth and overflows buffer memory causing packet discards and frame losses. Flow Control is used to regulate transmission of signals to match the bandwidth of the receiving port. The switch uses IEEE802.3x flow control in full duplex mode and backpressure flow control in half</p>


	duplex mode. IEEE802.3x flow control is used in full duplex mode to send a pause signal to the sending port, causing it to temporarily stop sending signals when the receiving port memory buffers fill. Back Pressure flow control is typically used in half duplex mode to send a "collision" signal to the sending port (mimicking a state of packet collision) causing the sending port to temporarily stop sending signals and resend later.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings. The new link aggregation group will be shown on the page.

ID	Port Type	Static/LACP	Enable State	Link Status	Active Port	Standby Port	Port Speed	Flow Ctrl Config	Flow Ctrl Status
1	10G	Static	Enable	Up	10GE2	10GE1	10G	Enabled	Enabled

## II-1-3 Multicast

For the multicast packets, this page allows the administrator to choose actions for processing the unknown multicast packets and for handling known packets with MAC address, IP address and VLAN ID.

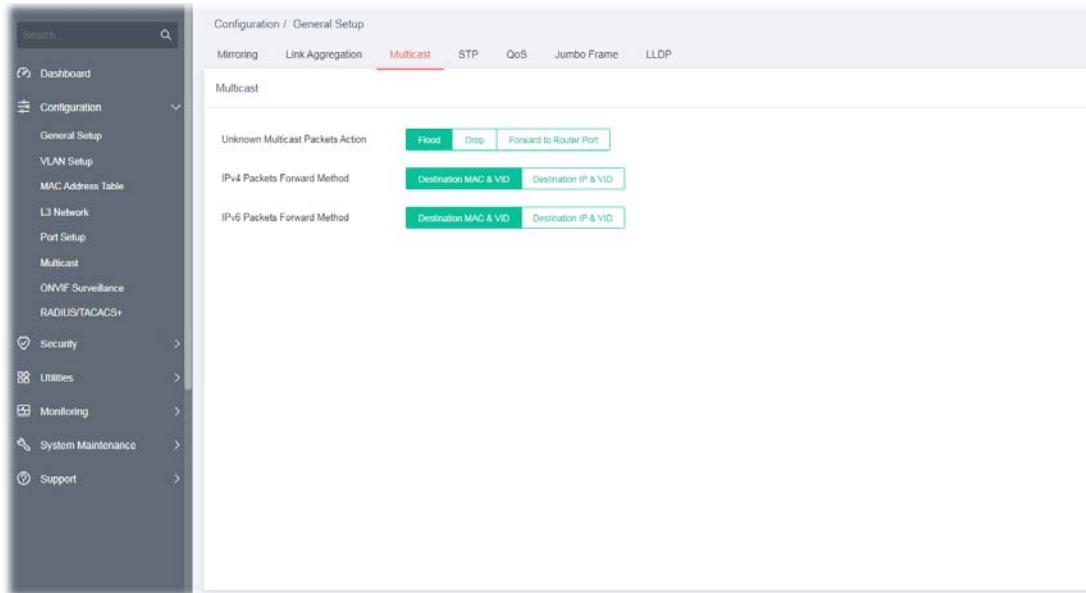

Available settings are explained as follows:

Item	Description
<b>Unknown Multicast Packets Action</b>	Select an action for switch to handle with unknown multicast packet. <b>Drop</b> - Drop the unknown multicast data. <b>Flood</b> - Flood the unknown multicast data. <b>Forward to Router Port</b> - Forward the unknown multicast data to router port.
<b>IPv4/IPv6 Packets Forward Method</b>	Set the IPv4/IPv6 multicast forward method. <b>Dst. MAC &amp; VID</b> - Forward using destination multicast MAC address and VLAN IDs. <b>Dst. IP &amp; VID</b> - Forward using destination multicast IP address and VLAN ID.

After finishing this web page configuration, please click **OK** to save the settings.


## II-1-4 STP

The Spanning Tree Protocol (STP) is a network protocol that ensures a loop-free topology for any bridged Ethernet local area network.

Bridge Protocol Data Units (BPDUs) are frames that contain information about the Spanning Tree Protocol (STP). Switches send BPDUs using a unique MAC address from its origin port and a multicast address as destination MAC (01:80:C2:00:00:00, or 01:00:0C:CC:CC:CD for Per VLAN Spanning Tree).

For STP algorithms to function, the switches need to share information about themselves and their connections. What they share are bridge protocol data units (BPDUs).

BPDUs are sent out as multicast frames to which only other layer 2 switches or bridges are listening. If any loops (multiple possible paths between switches) are found in the network topology, the switches will co-operate to disable a port or ports to ensure that there are no loops; that is, from one device to any other device in the layer 2 network, only one path can be taken.

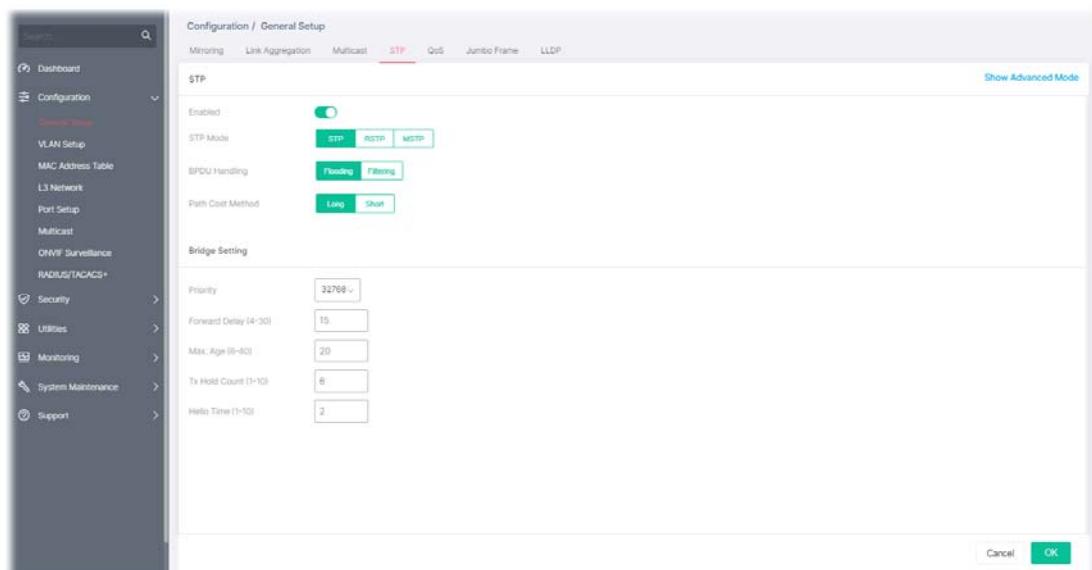


Available settings are explained as follows:

Item	Description
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>STP</b>	
<b>Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>STP Mode</b>	Set the operating mode of Spanning Tree (STP). <b>STP</b> - Enable the Spanning Tree (STP) operation. <b>RSTP</b> - Enable the Rapid Spanning Tree (RSTP) operation. <b>MSTP</b> - Enable the Multiple Spanning Tree Protocol (MSTP) operation.
<b>BPDU Handling</b>	Specify the BPDU forward method when the STP is disabled. <b>Filtering</b> - Filter the BPDU when STP is disabled. <b>Flooding</b> - Flood the BPDU when STP is disabled.

<b>Path Cost Method</b>	Specify the path cost method. <b>Long</b> - Specifies that the default port path costs are within the range: 1~200,000,000. <b>Short</b> - Specifies that the default port path costs are within the range: 1~65,535.
<b>Bridge Setting</b> - Negotiate with other VigorSwitch for determining the bridge switch.	
<b>Priority</b>	Specify the bridge priority. The valid range is from 0 to 61440, and the value should be the multiple of 4096. It ensures the probability that the switch is selected as the root bridge, and the lower value has the higher priority for the switch to be selected as the root bridge of the topology.
<b>Forward Delay</b>	Specify the STP forward delay time, which is the amount of time that a port remains in the Listening and Learning states before it enters the Forwarding state. Its valid range is from 4 to 30 seconds.
<b>Max. Age</b>	Specify the time interval in seconds for a switch to wait the configuration messages, without attempting to redefine its own configuration.
<b>Tx Hold Count</b>	Specify the tx-hold-count used to limit the maximum numbers of packets transmission per second. The valid range is from 1 to 10.
<b>Hello Time</b>	Specify the STP hello time in second to broadcast its hello message to other bridge by Designated Ports. Its valid range is from 1 to 10 seconds.
<b>MST Instance &amp; Port Setting</b>	<p>It appears if the Show Advanced Mode link is selected.</p> <p>MST instance allows traffic of different VLAN to be mapped into different MST Instances. VigorSwitch supports up to 16 independent MST instances (0~15) with which the VLAN can be associated.</p> <p><b>Bridge Identifier</b> - Displays the priority of MST instance number + MAC address of the switch.</p> <p><b>Designated Root Bridge</b> - Displays the Bridge Identifier of the root bridge.</p> <p><b>Root Port</b> - Displays the port toward the root.</p> <p><b>Root Path Cost</b> - Displays the path cost toward the root.</p> <p><b>Remaining Hop</b> - Displays the remaining hop count in BPDU.</p> <p><b>VLAN</b> - Displays the ID of the VLAN which should be associated with this MST instance.</p> <p> - Click to modify the setting page of the selected VLAN.</p> <p> - Clear settings of the selected port and return to factory default settings.</p>

Click  to open the MST editing page.

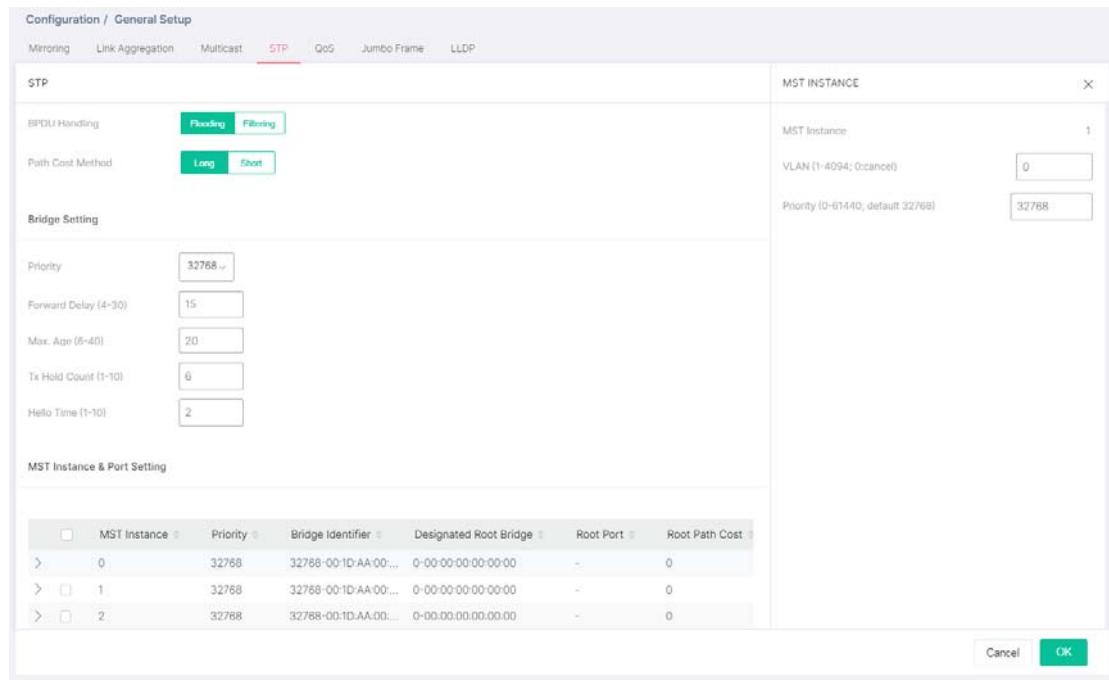

Available settings are explained as follows:

Item	Description
<b>VLAN</b>	Enter the ID (1-4094) of the VLAN which should be associated with this MST.
<b>Priority</b>	The switch priority for this MST instance. A lower number gives the switch higher chance to be chosen as the root bridge.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-1-5 QoS

QoS (Quality of Service) functions to provide different quality of service for various network applications and requirements and optimize the bandwidth resource distribution to provide a network service experience of better quality.

### Queue Setting

VigorSwitch supports multiple queues for each interface. The higher numbered queue represents the higher priority. The following lists the types of supported priority queues:

- Strict Priority (SP) - Egress traffic from the higher priority queue will be transmitted first, lower priority queue shall wait until all traffic in SP queue is transmitted.
- Weighted Round Robin (WRR) - The number of packets sent from the queue is proportional to the weight of the queue.

### CoS Mapping

It allows users to configure how ingress frames with CoS/802.1p tag map to QoS queues, and QoS queues to CoS/802.1p on egress frames.

Actual effectiveness is based on how QoS is configured in previous QoS section. This page provides settings for user to configure mapping only.

## DSCP Mapping

It allows user to configure how ingress packets with DSCP tag map to QoS queues, and QoS queues to DSCP on egress packets.

Actual effectiveness is based on how QoS is configured in previous QoS section. This page provides settings for user to configure mapping only.

## IP Precedence Mapping

It allows user to configure how ingress packets with IP Precedence tag map to QoS queues, and QoS queues to IP Precedence on egress packets.


Actual effectiveness is based on how QoS is configured in previous QoS section. This page provides settings for user to configure mapping only.

## Egress Shaping Rate

It allows a user to configure the egress port rate limit. The egress rate limit is the number of bits per second that can be received from the egress interface. Excess bandwidth above this limit is discarded.

## Egress Shaping per Queue

It allows users to configure the maximum egress bandwidth not only by the port but also by specific QoS queues. The configuration result for each port will be displayed on the table listed on the lower side of this web page.

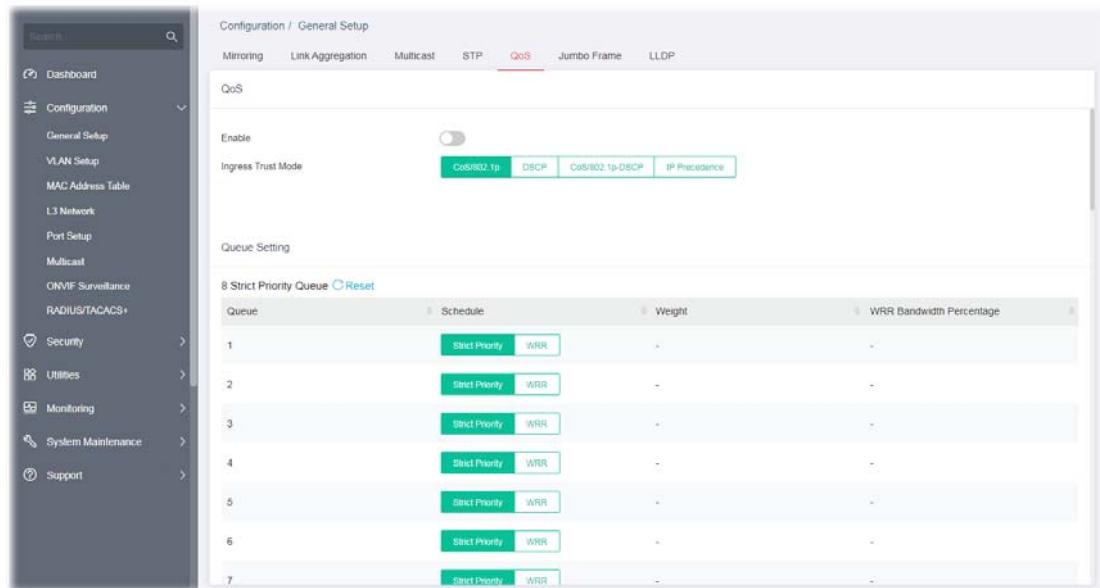

Available settings are explained as follows:

Item	Description
<b>QoS</b>	
<b>Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the function of QoS mode.  - means "Enable".  - means "Disable".
<b>Ingress Trust Mode</b>	Select the QoS operation mode. <b>CoS/802.1p</b> – Traffic is mapped to queues based on the CoS field in the VLAN tag, or based on the per-port default CoS value if there is no

	<p>VLAN tag on the incoming packet.</p> <p><b>DSCP</b> – All IP traffic is mapped to queues based on the DSCP field in the IP header. If traffic is not IP traffic, it is mapped to the lowest priority queue.</p> <p><b>Cos/802.1p-DSCP</b> – All IP traffic is mapped to queues based on the DSCP field in the IP header. If traffic is not IP but has VLAN tag, mapped to queues based on the CoS value in the VLAN tag.</p> <p><b>IP Precedence</b> - All IP traffic is mapped to queues based on the DSCP field in the IP header. If traffic is not IP but has VLAN tag, mapped to queues based on the CoS value in the VLAN tag.</p>
--	--

#### Queue Setting

<b>Queue</b>	There are eight queue ID numbers allowed to be configured.
<b>Schedule</b>	<p><b>Strict Priority</b> - Click it to set queue to strict priority type.</p> <p><b>WRR</b> - Click it to set queue to Weight round robin type.</p>
<b>Weight</b>	If the queue type is WRR, set the queue weight for the queue
<b>WRR Bandwidth Percentage</b>	Displays the percentage of traffic which can be sent by current queue compared to total WRR queues.

#### CoS Mapping

<b>Class of Service Mapping to Queue (for Ingress Traffic)</b>	<p>Defines the queue ID (level 1 to 8) for different class of service values.</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>
<b>Class of Service Mapping to Queue (for Egress Traffic Remark)</b>	<p>Defines the class of service value (0 to 7).</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>


#### DSCP Mapping

<b>DSCP Mapping to Queue (for Ingress Traffic)</b>	<p>Define the queue ID (level 1 to 8) for different DSCP values.</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>
<b>DSCP Mapping to Queue (for Egress Traffic Remark)</b>	<p>Define the DSCP value (0 to 63).</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>

#### IP Precedence Mapping

<b>IP Precedence Mapping to Queue (for Ingress Traffic)</b>	<p>Defines the queue ID (level 1 to 8) for different IP Precedence values.</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>
<b>IP Precedence Mapping to Queue (for Egress Traffic Remark)</b>	<p>Defines the IP Precedence value (0 to 7).</p> <p><b>Reset</b> - Clear current settings and return to factory default settings.</p>
<b>Egress Shaping per Queue</b>	<p>Configure the maximum egress bandwidth not only by port but also by specific QoS queues.</p> <p><b>Reset</b> - Clear all settings and return to factory default settings.</p> <p><b>Port</b> - Display the port (10GE1 to 10GE12) profiles.</p> <p> - Clear settings of the selected port and return to factory default settings.</p>

**Edit** - To modify the egress shaping rate for port profiles, select two (at least) GE ports to display the link.

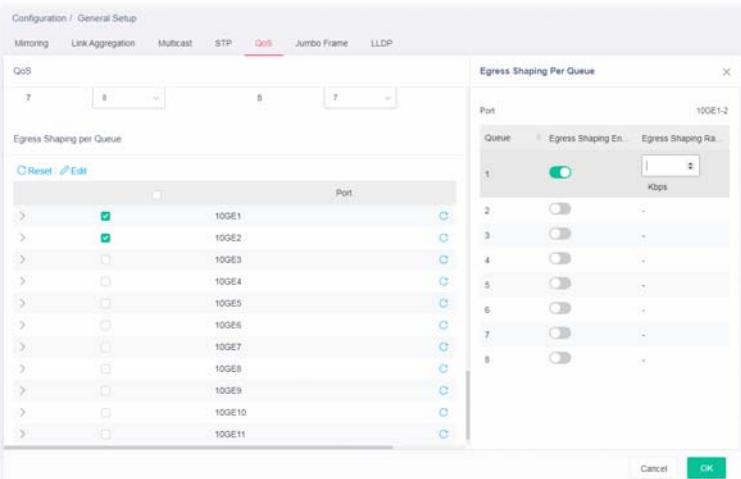


- **Egress Shaping Enabled**- Switch the toggle to enable/disable the setting.
- **Egress Shaping Rate (CIR)** - Enter the rate value,<16-1000000>, unit:16 Kbps.

After finishing this web page configuration, please click **OK** to save the settings.

## II-1-6 Jumbo Frame

This page allows a user to configure switch port jumbo frame settings.

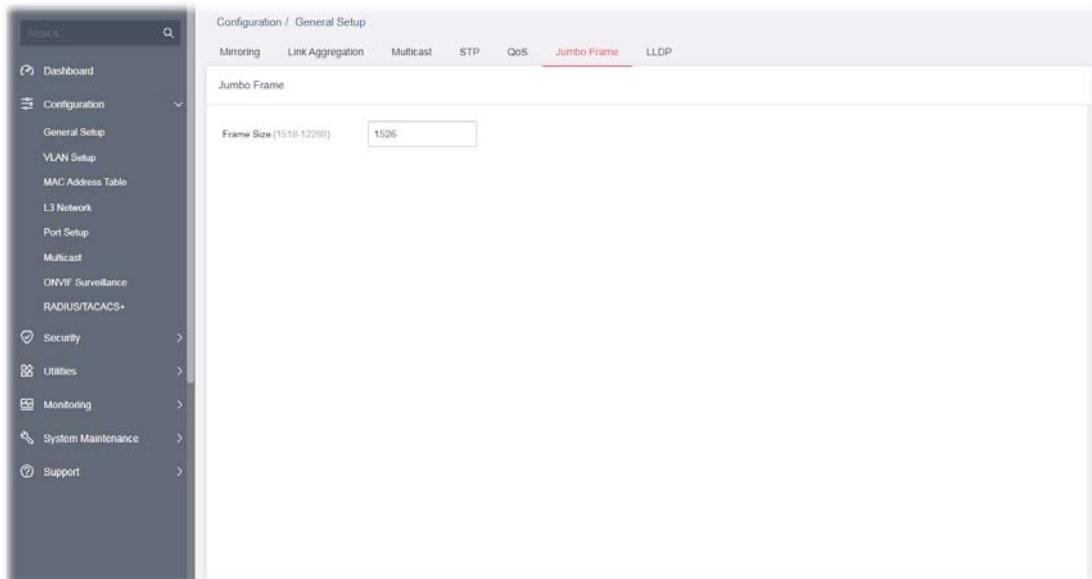


Available settings are explained as follows:

Item	Description
<b>Jumbo Frame</b>	
<b>Frame Size</b>	Enter Jumbo frame size. The valid range is 1526 bytes – 10000 bytes.

After finishing this web page configuration, please click **OK** to save the settings.

## II-1-7 LLDP

This page allows a user to set general settings for LLDP.

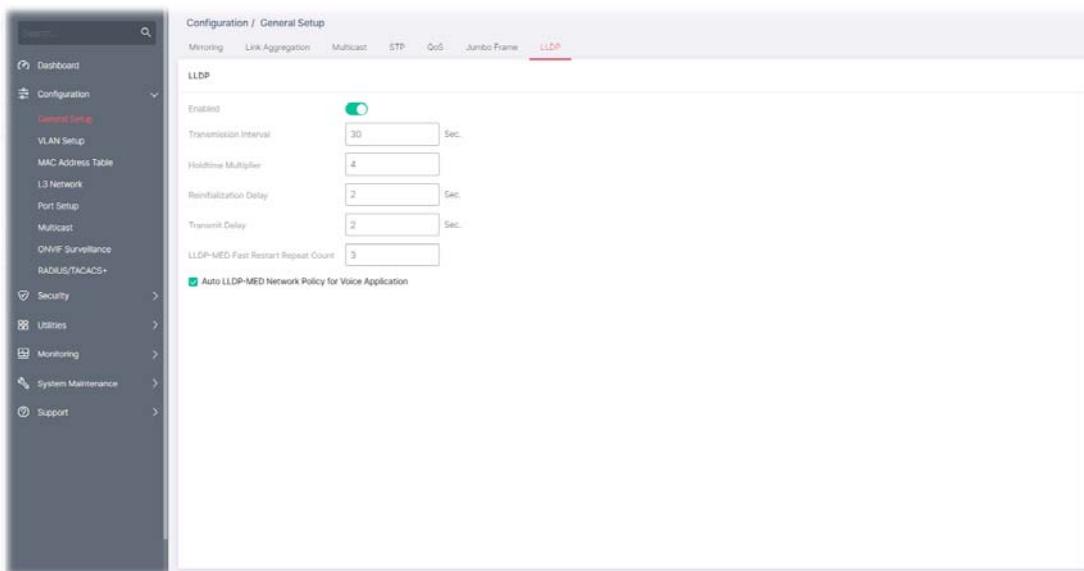

Available settings are explained as follows:

Item	Description
<b>LLDP</b>	
<b>Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable". If LLDP function is disabled, specify an action for the LLDP PDU packets. <ul style="list-style-type: none"> <li>● <b>Filtering</b> - The LLDP packets will be filtered and deleted when LLDP is disabled.</li> <li>● <b>Bridging</b> - The LLDP packets will be bridging when LLDP is disabled.</li> <li>● <b>Flooding</b> - The LLDP packets will be flooded and forwarded to all interfaces when LLDP is disabled.</li> </ul>
<b>Transmission Interval</b>	Select the interval at which frames are transmitted. The default is 30 seconds, and the valid range is 5-32768seconds.
<b>Holdtime Multiplier</b>	Select the multiplier on the transmit interval to assign to TTL (range 2-10, default = 4).
<b>Reinitialization Delay</b>	Select the delay before a re-initialization (range 1-10 seconds, default = 2).
<b>Transmit Delay</b>	Select the delay after an LLDP frame is sent (range 1-8192 seconds, default = 3).
<b>LLDP-MED Fast Restart Repeat Count</b>	Select the number of LLDP packets that will be sent during LLDP-MED Fast Start period. The default is 3. Available range is from 1 to 10.
<b>Auto LLDP-MED Network Policy for</b>	The default value is Enable.

---

**Voice Application**

---


After finishing this web page configuration, please click **OK** to save the settings.

## II-2 VLAN Setup

A virtual local area network, virtual LAN or VLAN, is a group of hosts with a common set of requirements that communicate as if they were attached to the same broadcast domain, regardless of their physical location. A VLAN has the same attributes as a physical local area network (LAN), but it allows for end stations to be grouped together even if they are not located on the same network switch. VLAN membership can be configured through software instead of physically relocating devices or connections.

### II-2-1 Existion VLAN

#### II-2-1-1 Default VLAN

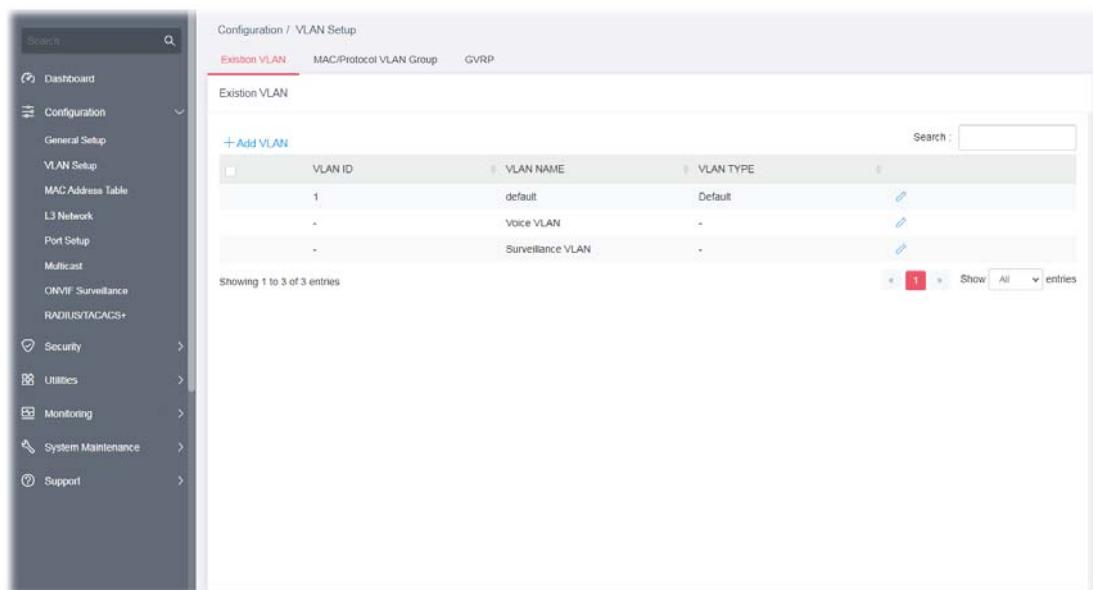


The screenshot shows the 'Configuration / VLAN Setup' interface. The left sidebar includes 'Dashboard', 'Configuration' (selected), 'General Setup', 'VLAN Setup' (selected), 'MAC Address Table', 'L3 Network', 'Port Setup', 'Multicast', 'ONVIF Surveillance', 'RADIUS/TACACS+', 'Security', 'Utilities', 'Monitoring', 'System Maintenance', and 'Support'. The main panel title is 'Existion VLAN'. It features tabs for 'Existion VLAN' (selected), 'MAC/Protocol VLAN Group', and 'GVRP'. Below the tabs is a table with columns: 'VLAN ID', 'VLAN NAME', and 'VLAN TYPE'. The table contains three entries: '1 default Default', '2 Voice VLAN Voice', and '3 Surveillance VLAN Surveillance'. There are edit icons next to each row. A search bar at the top right and a pagination section at the bottom right are also visible.

Available settings are explained as follows:

Item	Description
<b>+Add VLAN</b>	Click to open the setting page of creating a new VLAN (with the same type of default VLAN).
<b>VLAN ID</b>	Displays the ID number of the VLAN.
<b>VLAN Name</b>	Displays the name of the VLAN.
<b>VLAN Type</b>	Displays the type of the VLAN.
	Click to modify the setting page of the selected VLAN.

To create a new VLAN, click **+Add VLAN** to open the following page.

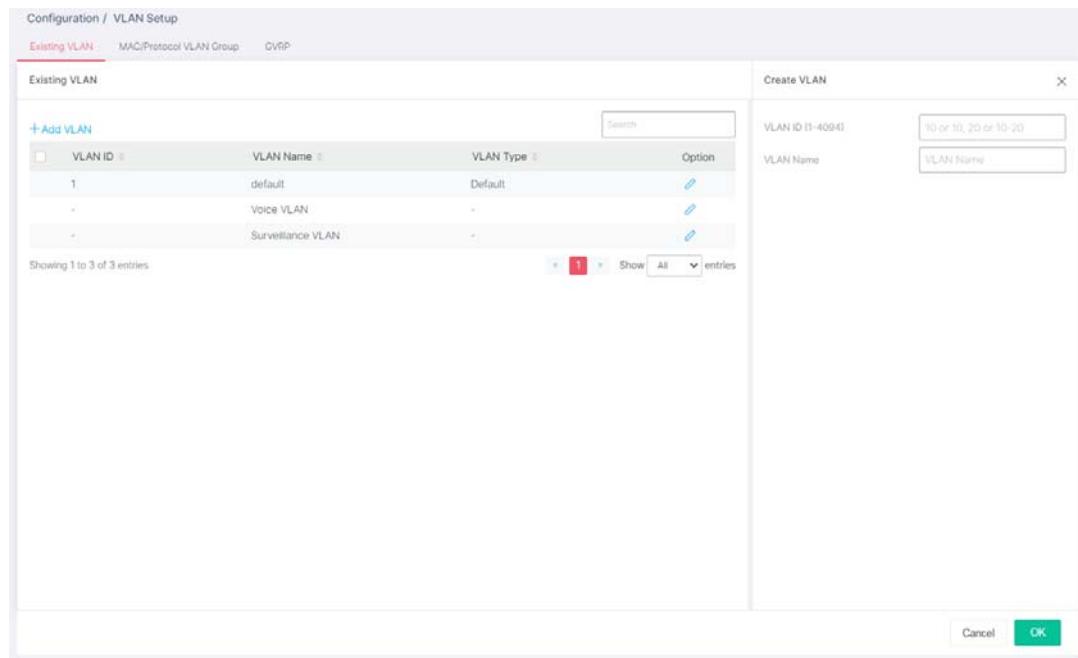

Available settings are explained as follows:

Item	Description
<b>Create VLAN</b>	
<b>VLAN ID</b>	Enter the number as VLAN ID to be created or deleted. If you want to create / delete multiple VLAN profiles, simply enter multiple VLAN ID separated by comma, and/or range of VLAN ID using hyphen.
<b>VLAN Name</b>	Enter the prefix you wish to add followed by VLAN ID as VLAN name. Leave it empty for using default "VLAN".
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings. A new VLAN will be shown on the page.

+ Add VLAN					Search :
	VLAN ID	VLAN NAME	VLAN TYPE		
	1	default	Default		
	-	Voice VLAN	-		
	-	Surveillance VLAN	-		
	10	Guest VLAN	Static		

Showing 1 to 4 of 4 entries

## II-2-1-2 Voice VLAN

With this feature, a VLAN will be created temporarily and when the specified OUI device delivers protocol packets related to "VoIP", VigorSwitch will guide these packets into the specified Voice LAN with specified priority tag to speed up the packet transmission. Such voice VLAN is only active inside VigorSwitch for packet transmission. After these packets leave VigorSwitch, the Voice VLAN tag will be removed immediately.

Existing VLAN				
<a href="#">+ Add VLAN</a> <span style="float: right;">Search : <input type="text"/></span>				
VLAN ID	VLAN NAME	VLAN TYPE		
1	default	Default	<a href="#">Edit</a>	<a href="#">Delete</a>
-	Voice VLAN	-	<a href="#">Edit</a>	<a href="#">Delete</a>
-	Surveillance VLAN	-	<a href="#">Edit</a>	<a href="#">Delete</a>
10	GuestVLAN	Static	<a href="#">Edit</a>	<a href="#">Delete</a>

Showing 1 to 4 of 4 entries

[«](#) [»](#) Show All entries

Click  to open the editing page.

Existing VLAN				Edit VLAN	
<a href="#">+ Add VLAN</a> <span style="float: right;">Search</span>				<span style="float: left;">Voice VLAN</span> <span style="float: right;">None</span>	
VLAN ID	VLAN Name	VLAN Type	Option	<span style="float: left;">Voice VLAN ID</span> <span style="float: right;">Remark Cos/802.1p</span>	
1	default	Default	<a href="#">Edit</a>	<input checked="" type="checkbox"/>	<a href="#">None</a>
-	Voice VLAN	-	<a href="#">Edit</a>	<input checked="" type="checkbox"/>	<a href="#">6</a>
-	Surveillance VLAN	-	<a href="#">Edit</a>	<input checked="" type="checkbox"/>	<a href="#">6</a>

Showing 1 to 3 of 3 entries

[«](#) [»](#) Show All entries

**Voice VLAN OUI**

OUI	Description	Edit	Delete
00:E0:66	3COM	<a href="#">Edit</a>	<a href="#">Delete</a>
00:E0:75	Veritek	<a href="#">Edit</a>	<a href="#">Delete</a>
00:00:1E	Pingtel	<a href="#">Edit</a>	<a href="#">Delete</a>
00:60:B9	NEC/Philips	<a href="#">Edit</a>	<a href="#">Delete</a>
00:0F:E2	H3C	<a href="#">Edit</a>	<a href="#">Delete</a>
00:09:68	Avaya	<a href="#">Edit</a>	<a href="#">Delete</a>
00:03:6B	Cisco	<a href="#">Edit</a>	<a href="#">Delete</a>

Available settings are explained as follows:

Item	Description
<b>Edit VLAN</b>	
<b>Voice VLAN</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.  - means “Enable”.  - means “Disable”.

<b>Voice VLAN ID</b>	Select Voice VLAN ID profile.
<b>Remark Cos/802.1p</b>	Click the toggle to enable / disable this function. <b>Remark Value</b> - If enabled, qualified packets will be remarked by this value. Specify the number of packets to be remarked. (0 to 7). The VoIP packets will be tagged with this number, so that QoS can prioritize it correctly.
<b>Aging Time</b>	Select value of aging time (30~65536 min). Default is 1440 minutes. A voice VLAN entry will be age out after this time if without any packet pass through.
<b>Voice VLAN OUI</b>	Click the  to display advanced settings. Default has 8 pre-defined OUI MAC. <ul style="list-style-type: none"> <li>● <b>OUI</b> - Enter the OUI address.</li> <li>● <b>Description</b> - Enter a description of the specified MAC address to the voice VLAN OUI table.</li> </ul> - Click it to modify the OUI settings and the description. <b>+Add</b> - Click to create a new voice OUI.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


### II-2-1-3 Surveillance VLAN

Surveillance VLAN can be configured for VigorSwitch to identify the packets coming from an IP camera automatically and assign those traffics to a specific VLAN ID and CoS/802.1p value, this helps you to prioritize those traffics and improve video quality.

Existing VLAN				
<a href="#">+ Add VLAN</a> <span style="float: right;">Search : <input type="text"/></span>				
	VLAN ID	VLAN NAME	VLAN TYPE	
<input type="checkbox"/>	1	default	Default	
	-	Voice VLAN	-	
	-	Surveillance VLAN	-	
<input type="checkbox"/>	10	GuestVLAN	Static	

Showing 1 to 4 of 4 entries Show All

Click to open the editing page.

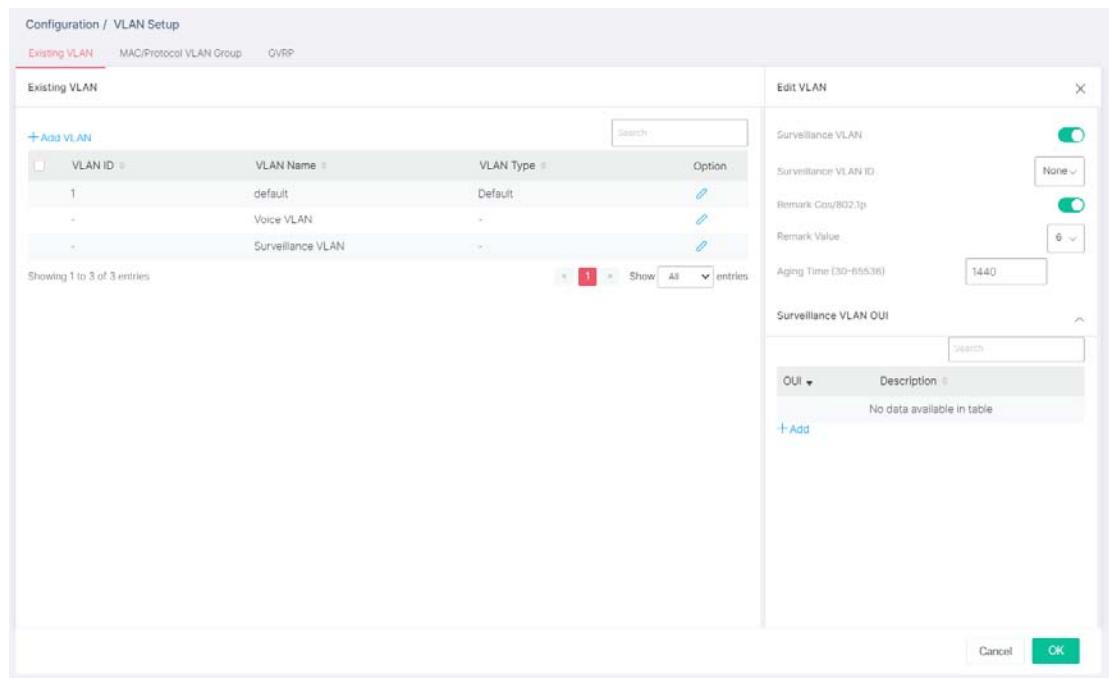

Available settings are explained as follows:


Item	Description
<b>Edit VLAN</b>	
<b>Surveillance VLAN</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable". Enable the function to configure surveillance VLAN.
<b>Surveillance VLAN ID</b>	Choose a VLAN profile as Surveillance VLAN.
<b>Remark Cos/802.1p</b>	Click the toggle to enable / disable this function. <b>Remark Value</b> - If enabled, qualified packets will be remarked by this value. Specify the number of packets to be remarked. (0 to 7). The VoIP packets will be tagged with this number, so that QoS can prioritize it correctly.
<b>Aging Time</b>	Select value of aging time (30~65536 min). Default is 1440 minutes. A voice VLAN entry will be age out after this time if without any packet pass through.
<b>Surveillance VLAN OUI</b>	Filtering Surveillance traffic is based on the OUI of the IP cameras. Click the  to display advanced settings. <b>+Add</b> - Click to create a new OUI. <ul style="list-style-type: none"> <li>● <b>OUI</b> - Enter OUI MAC address of monitored IP camera.</li> <li>● <b>Description</b> - Enter a description of the specified MAC address to the surveillance VLAN OUI table.</li> </ul> - Click to modify the OUI settings and the description.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-2-2 MAC/Protocol VLAN Group

### II-2-2-1 MAC Group


The MAC VLAN allows you to statically assign a VLAN ID to a host with specific MAC address(es). VigorSwitch allows you configure multiple groups with configured MAC address and mask to be active on ports and to be bound with VLAN ID. This page allows the network administrator to define groups with specific MAC addresses for later binding with VLAN and Port.

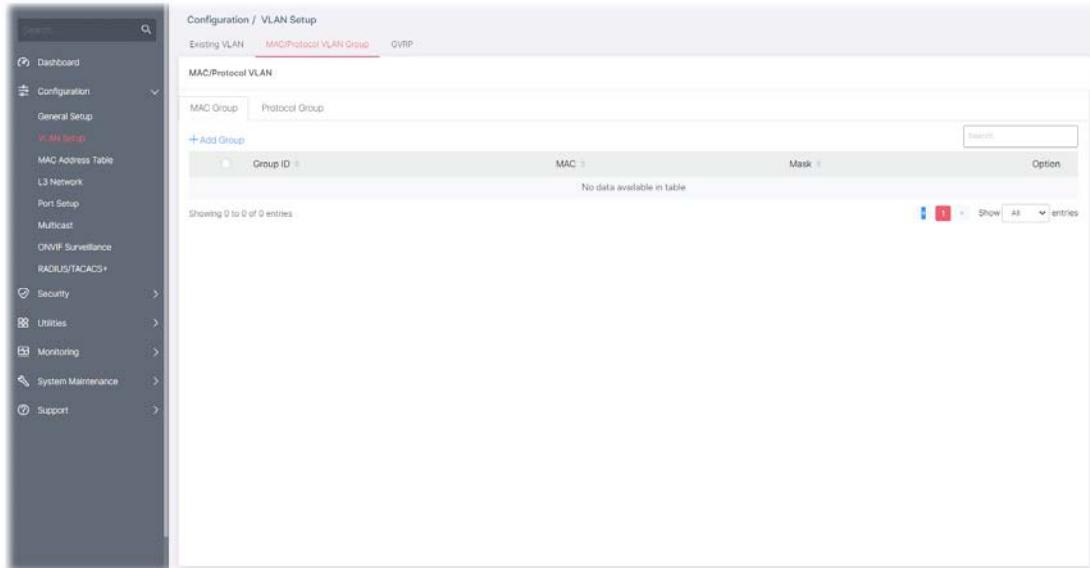

Available settings are explained as follows:

Item	Description
<b>MAC Group</b>	
<b>+Add Group</b>	Click to open the setting page of creating a new group.
<b>Group ID</b>	It is a number for identification later, while chosen to be bound with VLAN/Port.
<b>MAC</b>	Displays the MAC address of the device grouped under this VLAN profile.
<b>Mask</b>	Displays the number of the mask.

To add a MAC VLAN group, click the "**+Add Group**" to open the setting page.

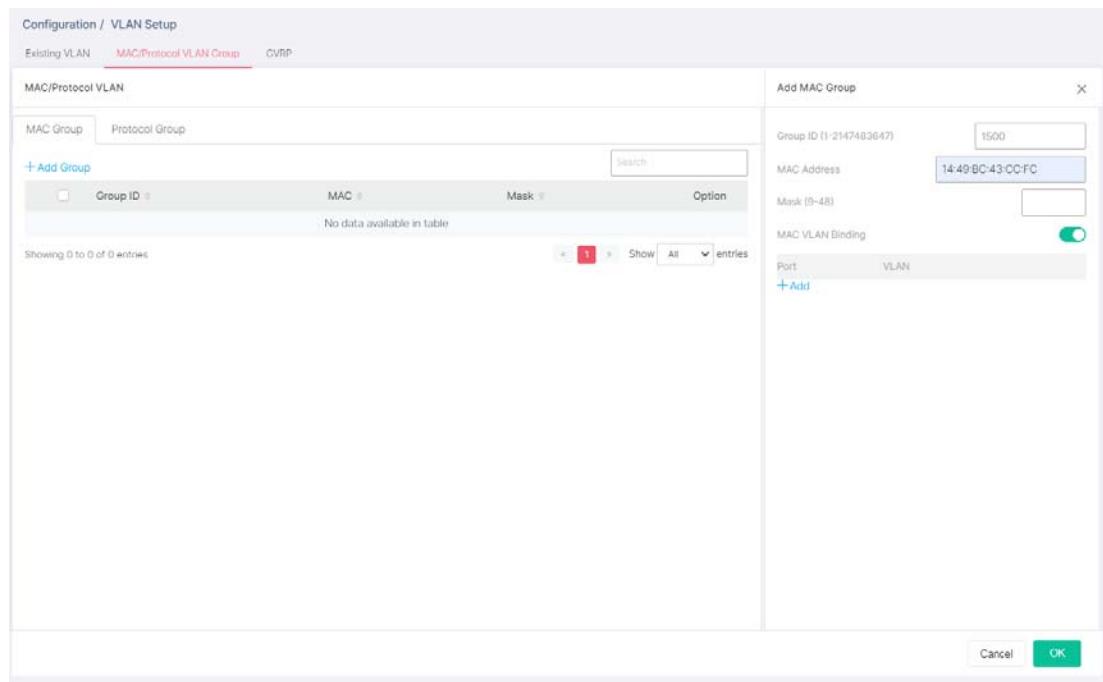

Available settings are explained as follows:

Item	Description
<b>Add MAC Group</b>	
<b>Group ID</b>	It is a number for identification later, while chosen to be bound with VLAN/Port.
<b>MAC Address</b>	Enter the MAC address you wish to be classified in this group.
<b>MASK</b>	The mask is the length of matching prefix you wish to have on MAC address. For example, configure mask in 10. It means a host with beginning of the 10-digit of MAC address will be checked, and classified into this group if matched.
<b>MAC VLAN Binding</b>	<p>The MAC VLAN allows you to statically assign a VLAN ID to a host with specific MAC address(es). VigorSwitch allows you to configure multiple groups with configured MAC address and mask to be active on ports and to be bound with VLAN ID. This page allows the network administrator to bind the group of specified MAC addresses with VLAN and Port.</p> <p><b>Enable / Disable</b> – Click the toggle to enable / disable this function.</p> <p> - means "Enable".</p> <p> - means "Disable".</p> <p><b>+Add</b> - Click to enter a port number and VLAN ID number.</p> <ul style="list-style-type: none"> <li>● <b>Port</b> - Select the ports you wish to be bound with specified MAC address group.</li> <li>● <b>VLAN</b> - Enter the VLAN ID that you wish to be bound with.</li> </ul>

After finishing this web page configuration, please click **OK** to save the settings.

A new group will be shown on the page.

The screenshot shows a table titled 'MAC VLAN Group' with one entry. The columns are 'Group ID' (10), 'MAC' (14:49:BC:43:CC:FC), and 'Mask' (9). There are edit and delete icons for each row. Below the table, it says 'Showing 1 to 1 of 1 entries'. A search bar and navigation buttons are also present.

Available settings are explained as follows:

Item	Description
	Click to modify the settings of the selected group.
	Click it to remove the selected entry.

## II-2-2-2 Protocol Group

VigorSwitch offers protocol VLANs which allows Network Administrator to filter out untagged traffic of certain protocol and then assign them a specific VLAN ID.

Up to eight protocol groups can be defined, each of them can have a unique filtering criterion such as frame type and protocol value.


The screenshot shows a table titled 'MAC/Protocol VLAN' with tabs for 'MAC Group' and 'Protocol Group'. The 'Protocol Group' tab is selected. It has an '+Add Group' button and a search bar. Below the table, it says 'Showing 0 to 0 of 0 entries'. A search bar and navigation buttons are also present.

Available settings are explained as follows:

Item	Description
<b>Protocol Group</b>	
<b>+Add Group</b>	Click to open the setting page of creating a new group.
<b>Group ID</b>	It is a number for identification later, while chosen to be bound with VLAN/Port.
<b>Frame Type</b>	Displays the frame type which you would like to filter.
<b>Protocol Value</b>	Displays the value (ranging from 0x600 ~0xFFFF). Packets match with

the value will be classified into this group.

To add a Protocol VLAN group, click the "**+Add Group**" to open the setting page.

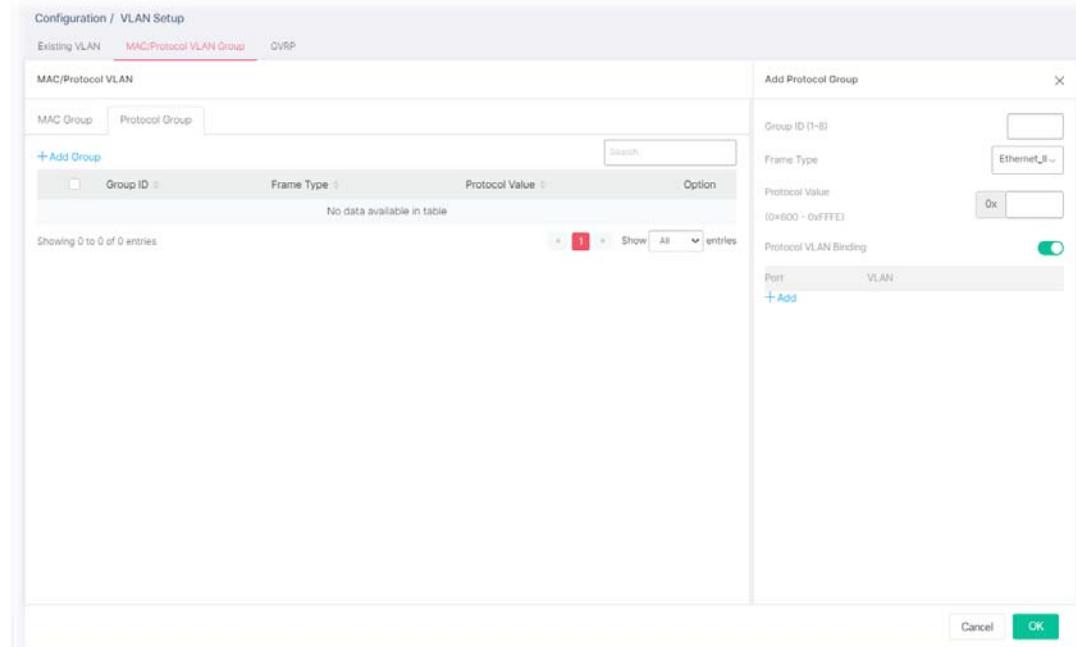

Available settings are explained as follows:

Item	Description
<b>Add Protocol Group</b>	
<b>Group ID</b>	It is a number for identification later, while chosen to be bound with VLAN/Port.
<b>Frame Type</b>	Use the drop-down list to specify the frame type which you would like to filter. <b>Ethernet_II</b> - Packet will be mapped based on Ethernet version 2. <b>IEEE802.3 LLC_Other</b> - Packet will be mapped based on 802.3 packet with LLC other header. <b>RFC_1042</b> - Packet will be mapped based on RFC 1042.
<b>Protocol Value</b>	Input a value (ranging from 0x600 ~0xFFFF). Packets match with such value will be classified into this group.
<b>Protocol VLAN Binding</b>	It is for setting up the ports and protocol group that we would like to filter, and the VLAN ID we would like to assign. <b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable". <b>+Add</b> - Click to enter a port number and VLAN ID number. ● <b>Port</b> - Select the ports you wish to be bound with specified MAC address group. ● <b>VLAN</b> - Enter the VLAN ID that you wish to be bound with.

After finishing this web page configuration, please click **OK** to save the settings.

A new group will be shown on the page.

The screenshot shows a table titled "MAC/Protocol VLAN" with two tabs: "MAC Group" and "Protocol Group". The "MAC Group" tab is selected. A single entry is listed:

	Group ID	Frame Type	Protocol Value	
>	1	Ethernet_II	0x0600	

Below the table, it says "Showing 1 to 1 of 1 entries". On the right, there are navigation buttons: «, » (page 1), Show All, and a dropdown for entries.

Available settings are explained as follows:

Item	Description
	Click to modify the settings of the selected group.
	Click it to remove the selected entry.

## II-2-3 GVRP

This page allows to enable/disable the GVRP function and displays the information for the membership for GVRP (GARP VLAN Registration Protocol).

The screenshot shows the "Configuration / VLAN Setup" page with a sidebar containing links like Dashboard, Configuration, General Setup, VLAN Setup, MAC Address Table, L3 Network, Port Setup, Multicast, ONVIF Surveillance, RADIUS/TACACS+, Security, Utilities, Monitoring, System Maintenance, and Support. The "VLAN Setup" link is underlined.

The main area has tabs: "Exision VLAN", "MAC/Protocol VLAN Group", and "GVRP". The "GVRP" tab is selected. It contains the following sections:

- GVRP**: Contains an "Enable" toggle switch (disabled) and timeout settings for Join (20ms), Leave (60ms), and Leave All (1000ms).
- Membership**: A table with columns: VLAN, VLAN Member, Dynamic Member, and Type. It says "No data available in table". Below the table, it says "Showing 0 to 0 of 0 entries".

Available settings are explained as follows:

Item	Description
<b>GVRP</b>	
<b>Enable</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable".

## II-3 MAC Address Table

This section allows user to view the static MAC address entries in the MAC table, change related setting, and assign MAC address into MAC table.

The screenshot shows the 'MAC Address Table' configuration page. On the left is a navigation sidebar with 'Dashboard', 'Configuration' (selected), 'General Setup', 'VLAN Setup', 'MAC Address Table' (selected), 'L3 Network', 'Port Setup', 'Multicast', 'ONVIF Surveillance', 'RADIUS/TACACS+', 'Security', 'Utilities', 'Monitoring', 'System Maintenance', and 'Support'. The main area has tabs for 'Dynamic Learned' (selected) and 'Static MAC: 1'. Under 'Dynamic Learned', there is a search bar and an 'Aging Time' input field set to 300 seconds. A table lists five dynamic entries with columns for index, MAC address, VLAN, and Port. Under 'Static MAC: 1', there is a '+Add Static MAC' button and a table with one static entry (index 1, MAC 00:1D:AA:00:00:00, VLAN default(1), Port CPU).

Available settings are explained as follows:

Item	Description
<b>Dynamic Learned</b>	Displays the port number automatically learned by VigorSwitch.
<b>Aging Time</b>	Enter the MAC address aging out value (5-32767 seconds).
<b>MAC</b>	Displays the MAC address that will be forwarded.
<b>VLAN</b>	Displays the VLAN group to which the MAC address belongs.
<b>Port</b>	Displays the port to which this MAC address belongs.
<b>+Add Static MAC</b>	Click it to add any port into the static MAC table.

To add a static MAC, click the "**+Add Static MAC**" to open the edit page.

The screenshot shows the 'Configuration / MAC Address Table' page. The main area displays a table of dynamic learned MAC addresses:

	MAC	VLAN	Port
1	14:49:BC:02:37:E8	default(1)	10GE11
2	14:49:BC:39:BE:88	default(1)	10GE11
3	14:49:BC:41:FD:20	default(1)	10GE11
4	14:49:BC:41:FD:40	default(1)	10GE11
5	14:49:BC:5D:68:92	default(1)	10GE11

Below this is a section for 'Static MAC':

	MAC	VLAN	Port
1	00:1D:AA:00:00:00	default(1)	CPU

An 'Add Static MAC' dialog is open on the right side of the screen, containing the following fields:

- MAC: 00:1D:AA:00:00:00
- VLAN: default(1)
- Port: CPU

Buttons at the bottom right of the dialog are 'Cancel' and 'OK'.

Available settings are explained as follows:


Item	Description
<b>Add Static MAC</b>	
<b>MAC</b>	Enter the MAC address that will be forwarded.
<b>VLAN</b>	Select the VLAN group to which the MAC address belongs.
<b>Port</b>	Select the port to which this MAC address belongs.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-4 L3 Network

### II-4-1 IP Network

Different VLANs can communicate with each other. With the VLAN routing function, computers (or clients) under different VLANs (created from Configuration>>VLAN Setup) can access the Internet and share data or information with each other.

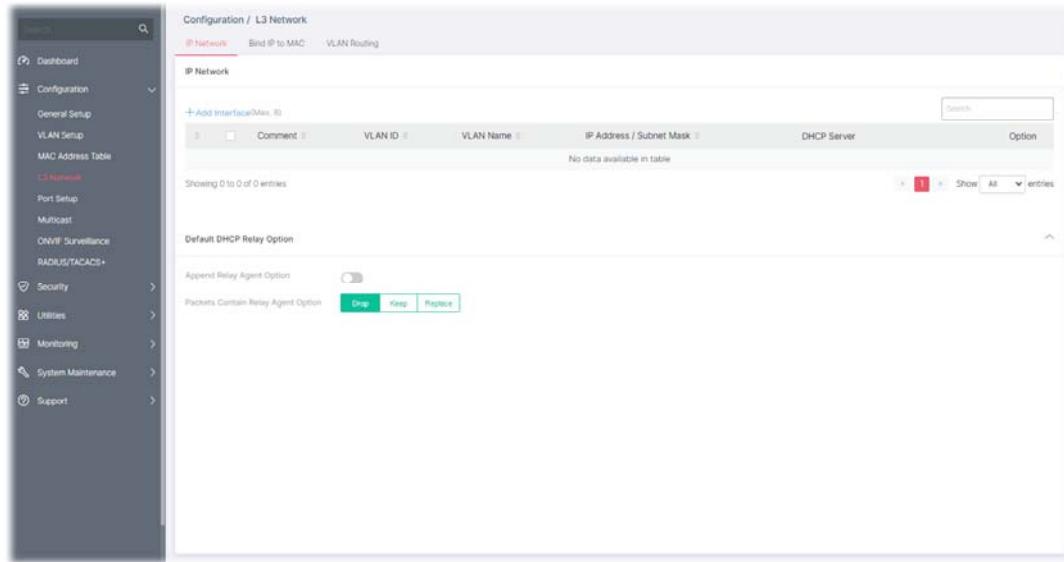

Available settings are explained as follows:

Item	Description
<b>IP Network</b>	
<b>+Add Interface</b>	Click to create a new VLAN interface profile.
<b>Comment</b>	Displays the brief comment for the VLAN ID.
<b>VLAN ID</b>	Displays the ID number of VLAN profile.
<b>VLAN Name</b>	Displays the name of the VLAN profile.
<b>IP Address/Subnet Mask</b>	Displays the IP address and the subnet mask of the selected VLAN profile.
<b>DHCP Server</b>	Displays the status of the server.
<b>Default DHCP Relay Option</b>	
<b>Append Relay Agent Option</b>	Click the toggle to enable / disable the built-in DHCP server on Vigor switch.  - means "Enable".  - means "Disable".
<b>Packets Contain Relay Agent Option</b>	Set the packet processing method. <b>Drop</b> - Received packets which already contain relay information will

be discarded.

**Keep** - All packets are forwarded, relay information already present will be ignored.

**Replace** - Relay information already present in a packet is stripped and replaced with the router's own relay information.

To add a new interface, click the "**+Add Interface**" to open the edit page.

The screenshot shows the 'Add Interface' configuration page. On the left, there's a table header 'IP Network' with columns for Comment, VLAN ID, VLAN NAME, IP Address / Sub..., and DHCP Server. A dropdown menu shows 'VLAN ID' set to 10. Other fields include IP Address (192.168.1.20), Subnet Mask (255.255.255.0), and DHCP Server options (Disable, Enable, Relay). Buttons at the bottom include Cancel and OK.

Available settings are explained as follows:

Item	Description
<b>Add Interface</b>	
<b>Comment</b>	Enter a brief comment for the VLAN ID.
<b>VLAN ID</b>	Use the drop down list to select one VLAN ID.
<b>VLAN Name</b>	Displays the name of the VLAN profile related to the VLAN ID number selected above.
<b>IP Address</b>	Enter the IP address for the selected VLAN ID.
<b>Subnet Mask</b>	Enter the subnet mask for the IP address set above.
<b>DHCP Server</b>	<b>Disable</b> - Select to disable the DHCP server function. <b>Enable</b> - Select to enable the DHCP server function. <b>Relay</b> - If you want to use another DHCP server in the network other than the Vigor switch's, you can let DHCP Relay help you to redirect the DHCP request to the specified location.
<b>OK</b>	Save the settings.


After finishing this web page configuration, please click **OK** to save the settings.

## II-4-2 Bind IP to MAC

This function is used to bind the IP and MAC address in LAN to have a strengthening control in network. With the Bind IP to MAC feature you can reserve LAN IP addresses for LAN clients. Each reserved IP address is associated with a Media Access Control (MAC) address.

### II-4-2-1 MAC-IP Binding List


This page displays the MAC-IP Binding List and allows the user to add a new profile or edit/ delete an existed profile.

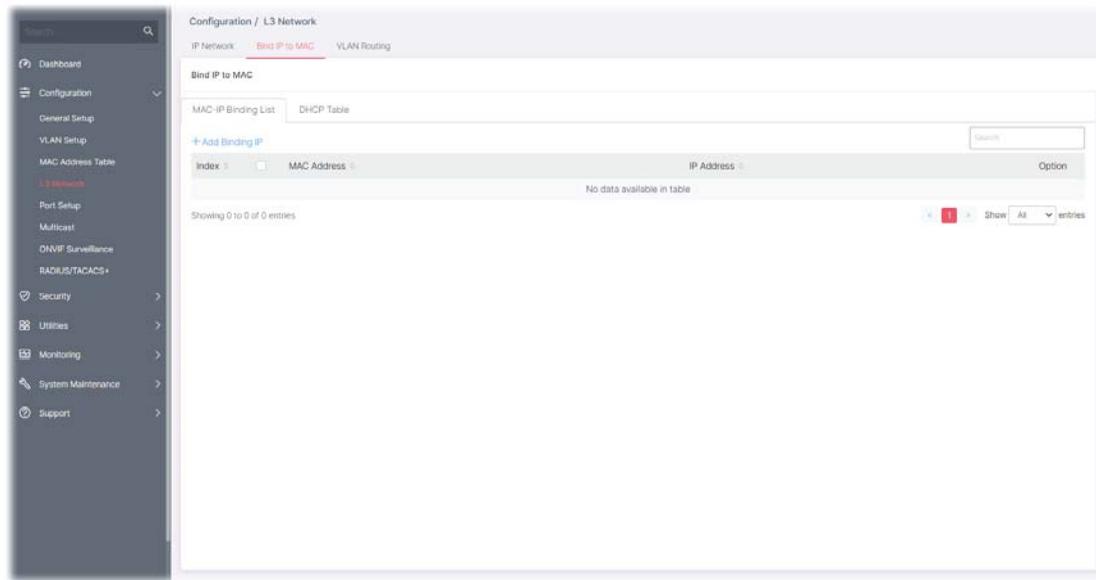

Available settings are explained as follows:

Item	Description
<b>+Add Binding IP</b>	Click to create a new binding list profile.
<b>Index</b>	Displays the index number of the binding list profile.
<b>MAC Address</b>	Displays the MAC address of the binding list profile.
<b>IP Address</b>	Displays the IP address of the binding list profile.
<b>Option</b>	 - Click to modify the settings of the selected entry.  - Click it to remove the selected entry.

To add a new binding IP, click the "**+Add Binding IP**" to open the edit page.

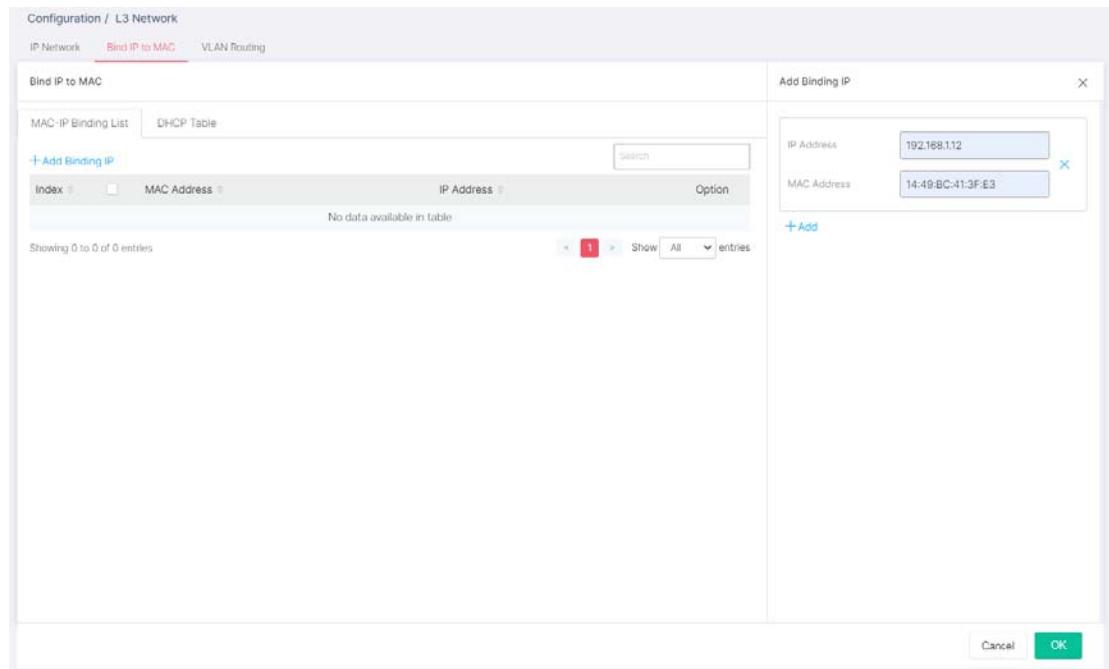

Available settings are explained as follows:

Item	Description
<b>IP Address</b>	Enter the IP address.
<b>MAC Address</b>	Enter the MAC address of the device to be bound with the IP address.
<b>+Add</b>	Click to create more binding IP settings.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


## II-4-2-2 DHCP Table

This page displays a table of DHCP servers used by "Bind IP to MAC".

Item	Description
<b>IP Address</b>	Displays the IP address of the DHCP server.
<b>MAC Address</b>	Displays the MAC address of the DHCP server.
<b>Host ID</b>	Displays the name of the DHCP server.
<b>Lease Time Start</b>	Displays the starting point of the lease time.
<b>Lease Time End</b>	Displays the ending point of the lease time.

## II-4-3 VLAN Routing

Static routing is a process that the system network administrator can configure the network with all the required information for packet forwarding. Each VLAN can include several IP address with the same subnet. The network administrator can specify some IP addresses (with different subnets) and different VLANs for establishing a communication channel.

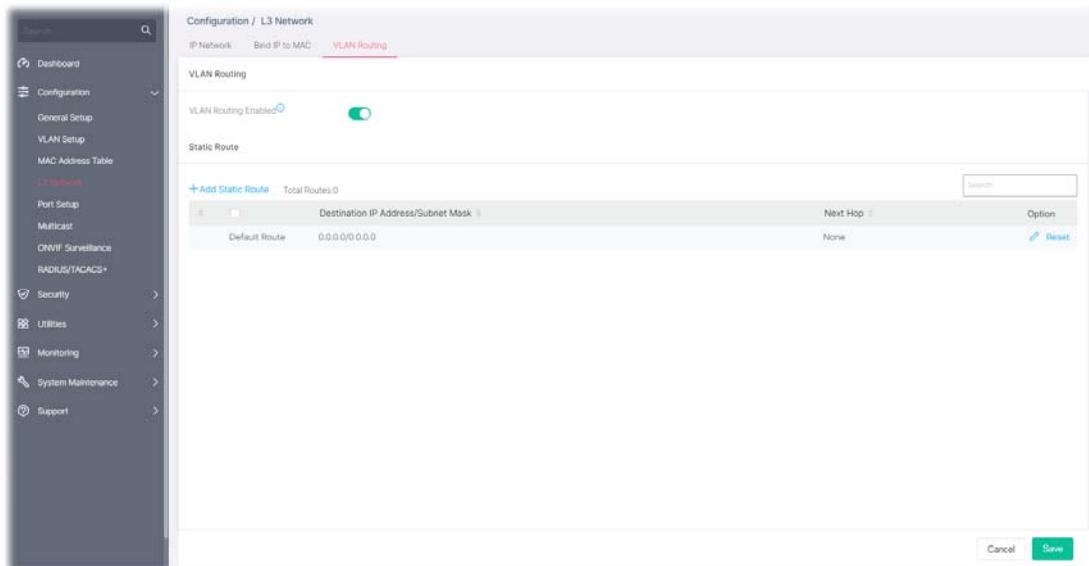


Available settings are explained as follows:

Item	Description
<b>Vlan Routing</b>	
<b>VLAN Routing Enable</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>Static Route</b>	
<b>+Add Static Route</b>	Create a new static route.
<b>Destination IP Address/Subnet Mask</b>	Displays the IP address/subnet mask of the static route.
<b>Next Hop</b>	Displays the type (none, gateway, interface) of the next hop.

**Option**

 - Click to modify the settings of the selected entry.  
**Reset** - Click it to return to the factory default setting.

To add a new static route setting, click the "**+Add Static Route**" to open the edit page.

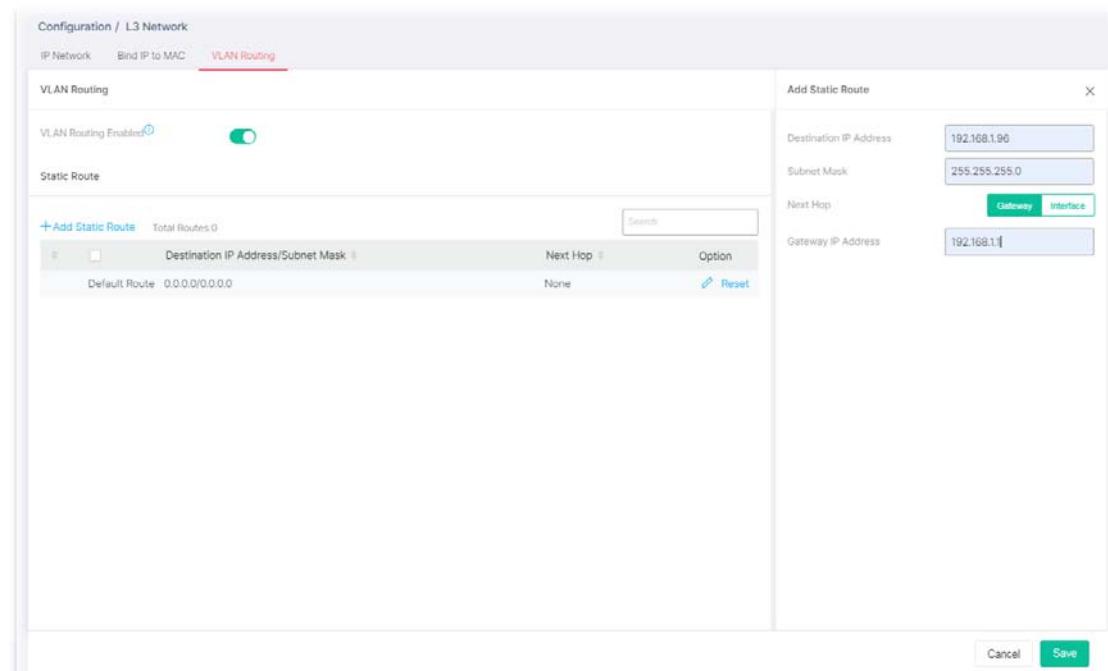

Available settings are explained as follows:


Item	Description
<b>Destination IP Address</b>	Enter the IP address.
<b>Subnet Mask</b>	Enter the subnet mask for the above IP address.
<b>Next Hop</b>	Select <b>Gateway</b> or <b>Interface</b> to enter the IP address or choose VLAN ID number.
<b>Gateway IP Address</b>	It is available when <b>Gateway</b> is selected as the Next Hop. Enter the IP address of the gateway.
<b>Interface</b>	It is available when <b>Interface</b> is selected as the Next Hop. Use the drop down list to specify the VLAN ID number.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-5 Port Setup

### II-5-1 General


Port Setup is used to configure settings for the switch ports, trunk, Layer 2 protocols and other switch features.

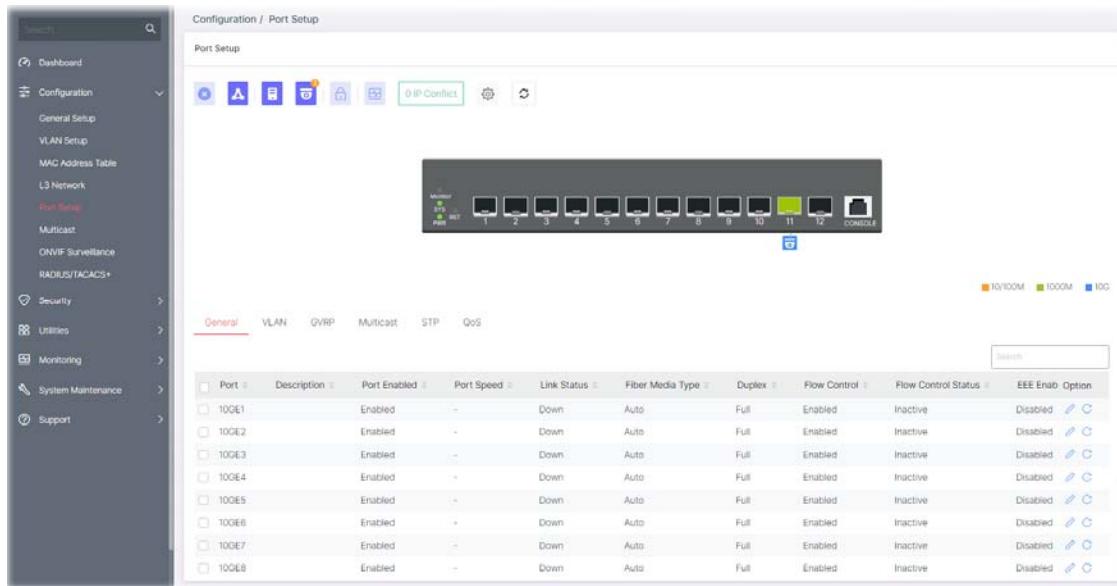

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the LAN ports (10GE1 to 10GE12).
<b>Description</b>	Displays the comment of the selected port.
<b>Port Enabled</b>	Displays the status (Enabled or Disabled) of the LAN port.
<b>Port Speed</b>	Displays the port speed capability.
<b>Link Status</b>	Displays the connection status.
<b>Fiber Media Type</b>	Displays the media type (with different data rate) for the fiber port.
<b>Duplex</b>	Displays the port duplex (auto/half/full) capability.
<b>Flow Control Config</b>	Displays the status (enabled/disabled) of Flow Control Config.
<b>Flow Control Status</b>	Displays the status (enabled/disabled) of Flow Control.
<b>Option</b>	- Click it to modify the port setting. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

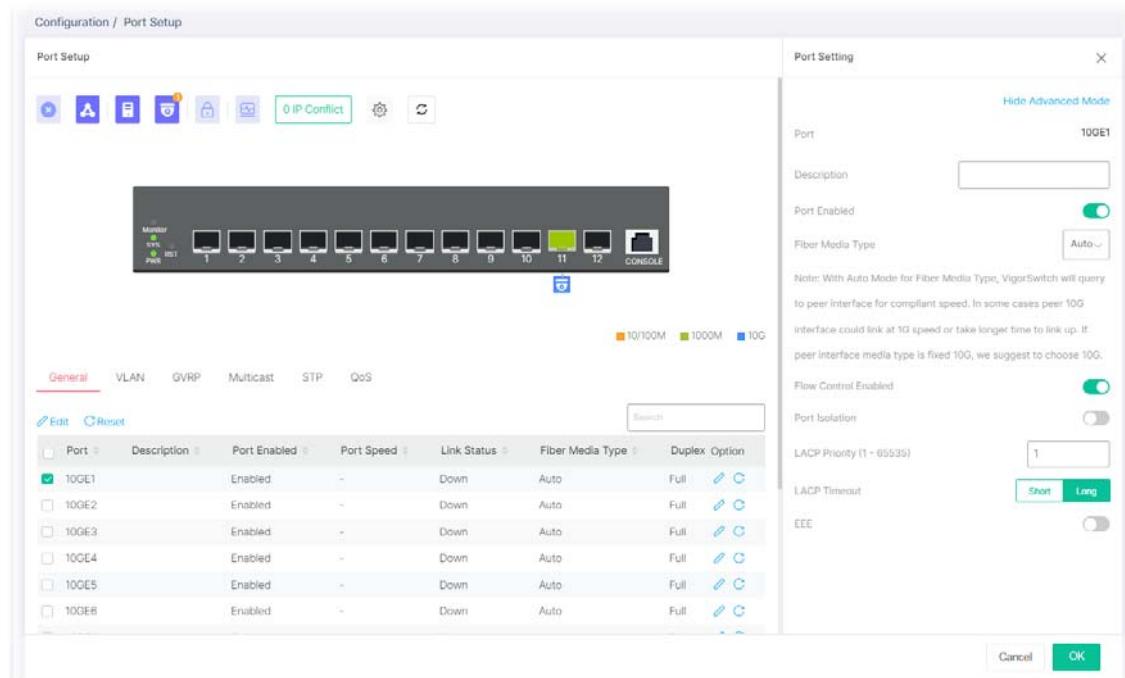

Available settings are explained as follows:

Item	Description
<b>Port Setting</b>	
Show / Hide Advanced Mode	Click to display or hide the advanced settings.
Port	Displays the port number.
Description	Enter a brief explanation for the selected port.
Port Enable	Enable/disable the settings of the selected port.
Fiber Media Type	<p>Determine the media type (with different data rate) for the fiber port.</p> <p>Available type includes:</p> <ul style="list-style-type: none"> <li>● Fiber 10G</li> <li>● Fiber 1G</li> <li>● DAC 50 CM</li> <li>● DAC 100 CM</li> <li>● DAC 300 CM</li> <li>● DAC 500 CM</li> <li>● None</li> </ul>
Flow Control Enabled	<p>A concentration of traffic on a port decreases port bandwidth and overflows buffer memory causing packet discards and frame losses. Flow Control is used to regulate transmission of signals to match the bandwidth of the receiving port. The switch uses IEEE802.3x flow control in full duplex mode and backpressure flow control in half duplex mode. IEEE802.3x flow control is used in full duplex mode to send a pause signal to the sending port, causing it to temporarily stop sending signals when the receiving port memory buffers fill. Back Pressure flow control is typically used in half duplex mode to send a "collision" signal to the sending port (mimicking a state of packet collision) causing the sending port to temporarily stop sending signals</p>

	<p>and resend later.</p> <p><b>Enable / Disable</b> – Click the toggle to enable / disable this function.</p>  - means "Enable".  - means "Disable".
<b>Port Isolation</b>	<p>It allows the network administrator to configure protected port setting to prevent the selected ports from communication with each other. Port isolation is only allowed to communicate with unprotected port. For example, GE1 and GE3 are selected in Port List and Enable is clicked as port isolation, then users behind GE1 and GE3 are separated and can not communicate with each other.</p> <p><b>Enable / Disable</b> – Click the toggle to enable / disable this function.</p>
<b>LACP Priority</b>	Enter a port priority number for the port.
<b>LACP Timeout</b>	<p>The timeout option decides how local switch of LAG connection determines connection to be lost. Switch would also notify the remote switch about this setting value, so that remote switch can send LACP PDU in correct timing.</p> <p><b>Short</b> - LACP PDU will be sent per second. If port member is not seen over 3 seconds, it will cause port member timeout.</p> <p><b>Long</b> - LACP PDU will be sent every 30 seconds. If port member is not seen over 90 seconds, it will cause port member timeout.</p>
<b>EEE</b>	Enable or disable port EEE (Energy Efficient Ethernet) function for the selected port.

After finishing this web page configuration, please click **OK** to save the settings.

## II-5-2 VLAN Interface


This page allows a user to configure interface (GE) settings related to VLAN.

### Voice VLAN

With voice VLAN, a VLAN will be created temporarily and when the specified OUI device delivers protocol packets related to "VoIP", VigorSwitch will guide these packets into the specified Voice LAN with specified priority tag to speed up the packet transmission. The voice VLAN is only active inside VigorSwitch for packet transmission. After these packets leave VigorSwitch, the Voice VLAN tag will be removed immediately.

### Surveillance VLAN


Surveillance VLAN can be configured for VigorSwitch to identify the packets coming from an IP camera automatically and assign those traffics to a specific VLAN ID and CoS/802.1p value, this helps you to prioritize those traffics and improve video quality.

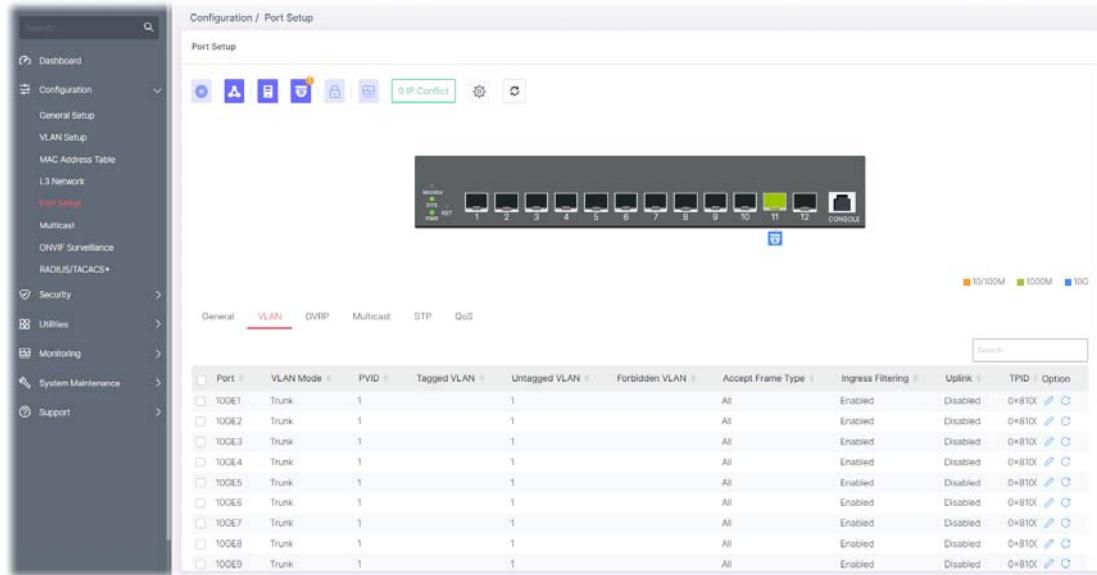

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the LAN port number.
<b>VLAN Mode</b>	Displays VLAN mode of the interface.
<b>PVID</b>	Displays the Port VLAN ID of the interface.
<b>Tagged VLAN</b>	Displays the VLAN profile (ID number) tagged in the VLAN interface.
<b>Untagged VLAN</b>	Displays the VLAN profile (ID number) untagged in the VLAN interface.
<b>Forbidden VLAN</b>	Displays the VLAN profile (ID number) used by the VLAN interface.
<b>Accept Frame Type</b>	Displays the acceptable-frame-type of the specified interfaces.
<b>Ingress Filtering</b>	Displays the status (enabled/disabled) of ingress filtering.
<b>Uplink</b>	Displays the status (enabled/disabled) of ???
<b>Option</b>	- Click it to modify the VLAN interface settings. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

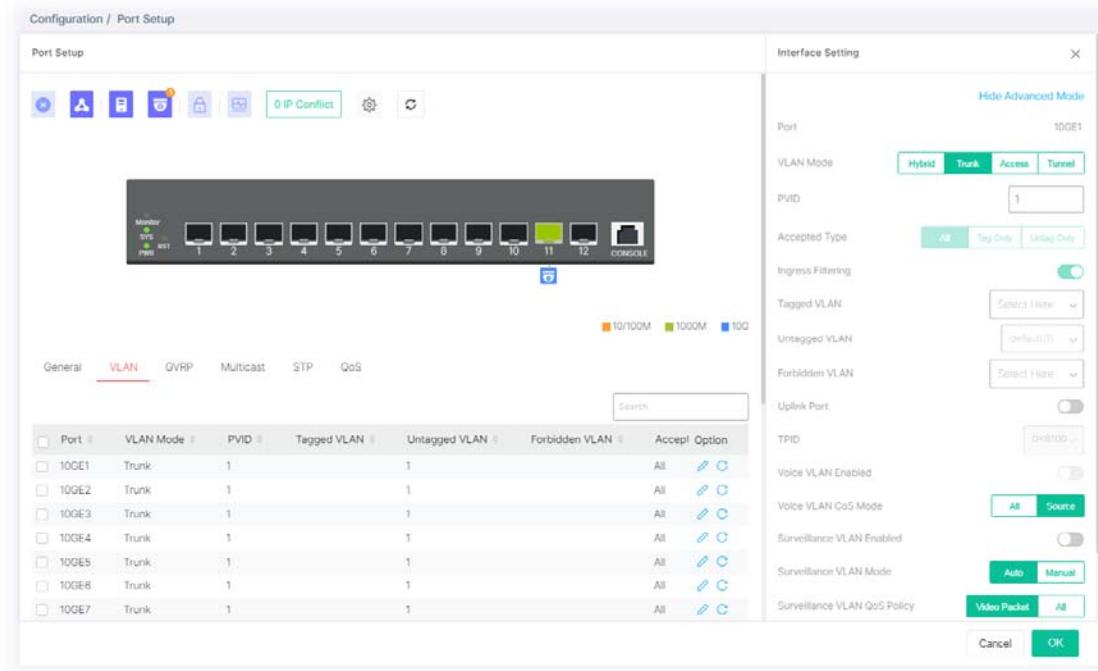

Available settings are explained as follows:

Item	Description
<b>Interface Setting</b>	
Show / Hide Advanced Mode	Click to display or hide the advanced settings.
Port	Displays the selected LAN port number.
VLAN Mode	Select the VLAN mode of the interface. <b>Hybrid</b> – Support all functions as defined in IEEE 802.1Q specification. <b>Access</b> – Accepts only untagged frames and join an untagged VLAN. <b>Trunk</b> - An untagged member of one VLAN at most, and is a tagged member of zero or more VLANs. <b>Tunnel</b> - Support all functions as defined in IEEE 802.1Q tunneling specification.
PVID	A PVID (Port VLAN ID) is a tag that adds to incoming untagged frames received on a port so that the frames are forwarded to the VLAN group that the tag defines. For port under <b>Access</b> Mode, VLAN ID provided as PVID would automatically be selected as the untagged VLAN.
Accepted Type	Specify the acceptable-frame-type of the specified interfaces. It's only available with Hybrid mode. <b>All</b> - Accept frames regardless it's tagged with 802.1q or not. <b>Tag Only</b> - Accept frames only with 802.1q tagged. <b>Untag Only</b> - Accept frames untagged.
Ingress Filtering	Enable the ingress filtering to filter out any packets not belong to any VLAN members of this port. It is enabled automatically while operating in Access and Trunk mode.
Tagged VLAN	Specify the VLAN profile tagged in the VLAN.
Untagged VLAN	Specify the VLAN profile untagged in the VLAN.

---

**Below shows settings for Advanced Mode**


<b>Forbidden VLAN</b>	The selected GE port only allows default VLAN packet to pass through. <b>Enable / Disable</b> – Click the toggle to enable / disable the LAN port(s) as forbidden VLAN port.  - means "Enable".  - means "Disable".
<b>Uplink Port</b>	It is available when Trunk is selected as Interface VLAN mode. Click the toggle to enable the function and specify the TPID type.
<b>TPID</b>	Use the drop down list to specify the TPID type.
<b>Voice VLAN Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the LAN port(s) as Voice VLAN port.
<b>Voice VLAN CoS Mode</b>	<b>All</b> - Once this port is identified as Voice VLAN by frame with matched OUI, remark CoS/802.1p shall tag for all ingress frame regardless of remarked frame matched with pre-configured OUI or not. <b>Src (Source)</b> - Once this port is identified as Voice VLAN by frame with matched OUI, remark CoS/802.1p shall tag for only the matched ingress frame with pre-configured OUI.
<b>Surveillance VLAN Enabled</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the LAN port(s) as Surveillance VLAN port.  - means "Enable".  - means "Disable".
<b>Surveillance VLAN Mode</b>	Select port surveillance VLAN mode. <b>Auto</b> - Surveillance VLAN auto detect packets that match OUI table and add received port into surveillance VLAN ID tagged member. <b>Manual</b> - User need add interface to VLAN ID tagged member manually.
<b>Surveillance VLAN QoS Policy</b>	Select port QoS Policy mode. <b>Video Packet</b> - QoS attributes are applied to packets with OUI in the source MAC address. <b>All</b> - QoS attributes are applied to packets that are classified to the Surveillance VLAN.
<b>MAC VLAN Binding</b>	Enable/disable the function of MAC VLAN Binding.
<b>Protocol VLAN Binding</b>	Enable/disable the function of Protocol VLAN Binding.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-5-3 GVRP

This page allows the network administrator to configure registration mode (e.g., Normal, Fixed or Forbidden) of GVRP (GARP VLAN Registration Protocol) for each GE port.


Such function can eliminate unnecessary network traffic and prevent any attempt to transmit information to unregistered users.

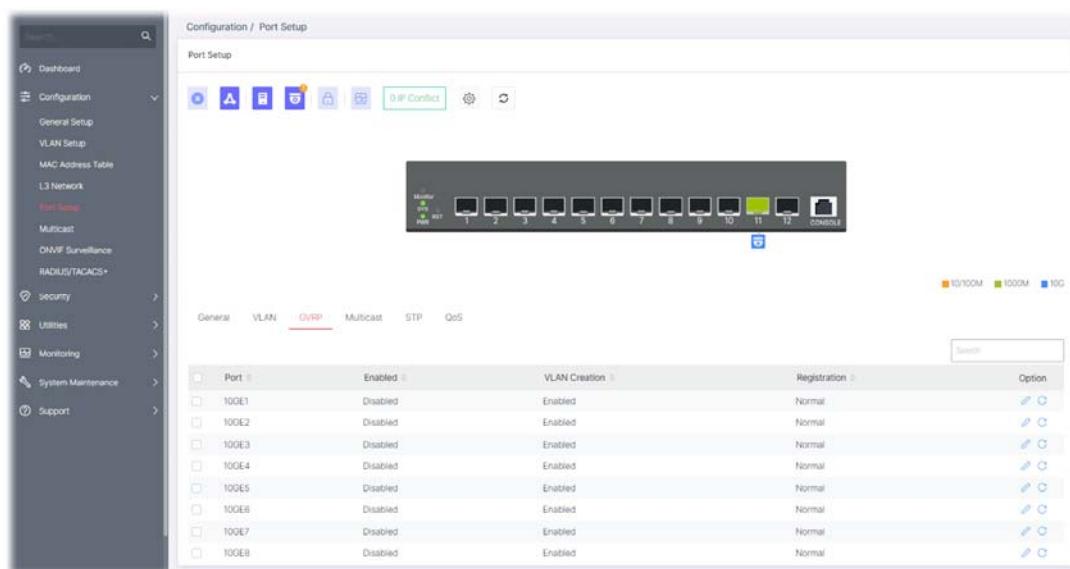

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the LAN port number.
<b>Enabled</b>	Displays the status (Enabled/Disabled) of the GVRP port setting.
<b>VLAN Creation</b>	Displays the status (Enabled/Disabled) of the VLAN Creation.
<b>Registration</b>	Displays the registration mode for each GE/LAG port.
<b>Option</b>	- Click it to modify the GVRP settings. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

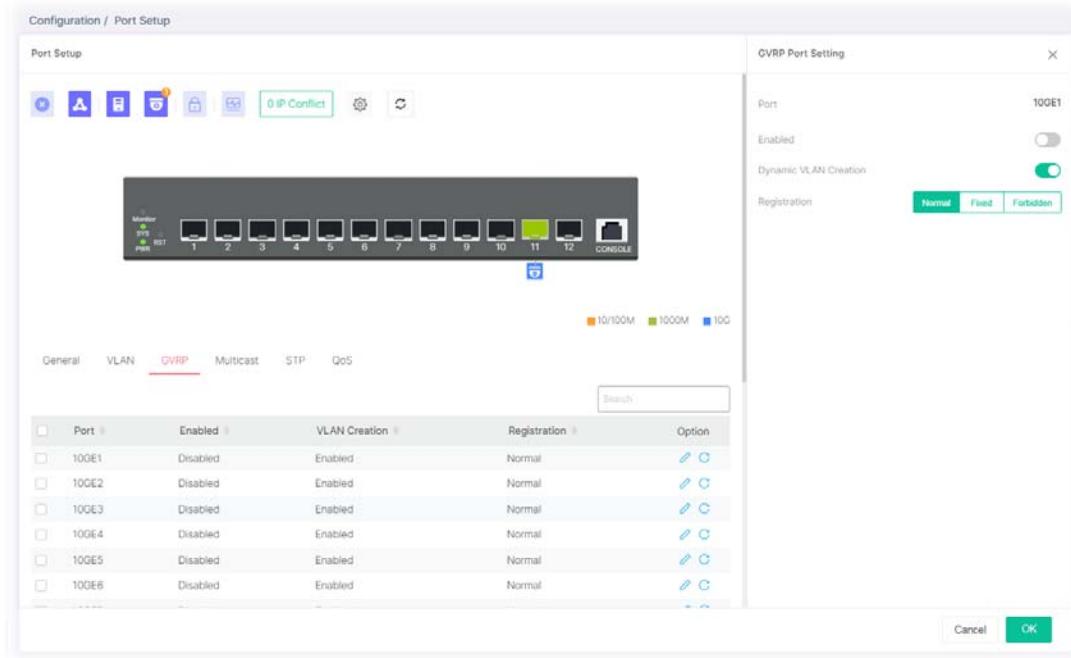

Available settings are explained as follows:

Item	Description
<b>GVRP Portsetting</b>	
<b>Port</b>	Displays the port number.
<b>Enabled</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the GVRP port setting. - means "Enable". - means "Disable".
<b>Dynamic VLAN Creation</b>	Click the toggle to enable / disable the VLAN creation.
<b>Registration</b>	There are three modes to be specified. <b>Normal</b> – Default setting. All packets can pass through the selected GE port. <b>Fixed</b> – The selected GE port only sends static VLAN information to neighboring device and allows static VLAN packet to pass through. <b>Forbidden</b> – The selected GE port only allows default VLAN packet to pass through.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-5-4 Multicast

### IGMP Snooping

IGMP snooping is the process of listening to Internet Group Management Protocol (IGMP) network traffic. The feature allows a network switch to listen in on the IGMP conversation between hosts and routers. By listening to these conversations the switch maintains a map of which links need which IP multicast streams. Multicasts may be filtered from the links which do not need them and thus controls which ports receive specific multicast traffic.

### MLD Snooping

MLD snooping does the same thing as IGMP snooping. The difference is that IGMP snooping acts on IPv4 packets; MLD snooping acts on IPv6 packets. MLD snooping is the process of listening to Multicast Listener Discovery network traffic. It can examine IPv6 packets and forward these packets to designate location via VLAN port members.

### Throttling

The administrator can configure the user on a switch port (GE/LAG port) belonging to which multicast group and restrict the number of multicast group that the user on the switch can join. Then the administrator is able to control the network service (e.g, IP/TV service) that the user can enjoy.

The Throttling page is used for configuring the maximum number (0~256) of IGMP group that a user on a switch port can join. After defined the maximum number, each switch port interface can be set to deny the IGMP join report or set to replace randomly selected multicast interface with received IGMP join report.


Port	IGMP Snooping Throttling Max. Group	IGMP Snooping Throttling Exceed Action	MLD Snooping Throttling Max. Group	MLD Snooping Throttling Exceed Action
10GE1	256	Deny	256	Deny
10GE2	256	Deny	256	Deny
10GE3	256	Deny	256	Deny
10GE4	256	Deny	256	Deny
10GE5	256	Deny	256	Deny
10GE6	256	Deny	256	Deny
10GE7	256	Deny	256	Deny
10GE8	256	Deny	256	Deny

Available settings are explained as follows:

Item	Description
Port	Displays the GE/LAG port number.
IGMP Snooping Throttling Max. Group	Displays the maximum number of IGMP group profile.
IGMP Snooping Throttling Exceed Action	Displays the action performed when the number of IGMP join reports for the specified interface exceeds the value defined in Max Group.

<b>MLD Snooping Throttling Max. Group</b>	Displays the maximum number of MLD group profile.
<b>MLD Snooping Throttling Exceed Action</b>	Displays the action performed when the number of MLD join reports for the specified interface exceeds the value defined in Max Group.
<b>Option</b>	 - Click it to modify the multicast settings for each port.  - Clear current settings and return to factory default settings.

To modify settings for a port, click the  link to open the setting page.

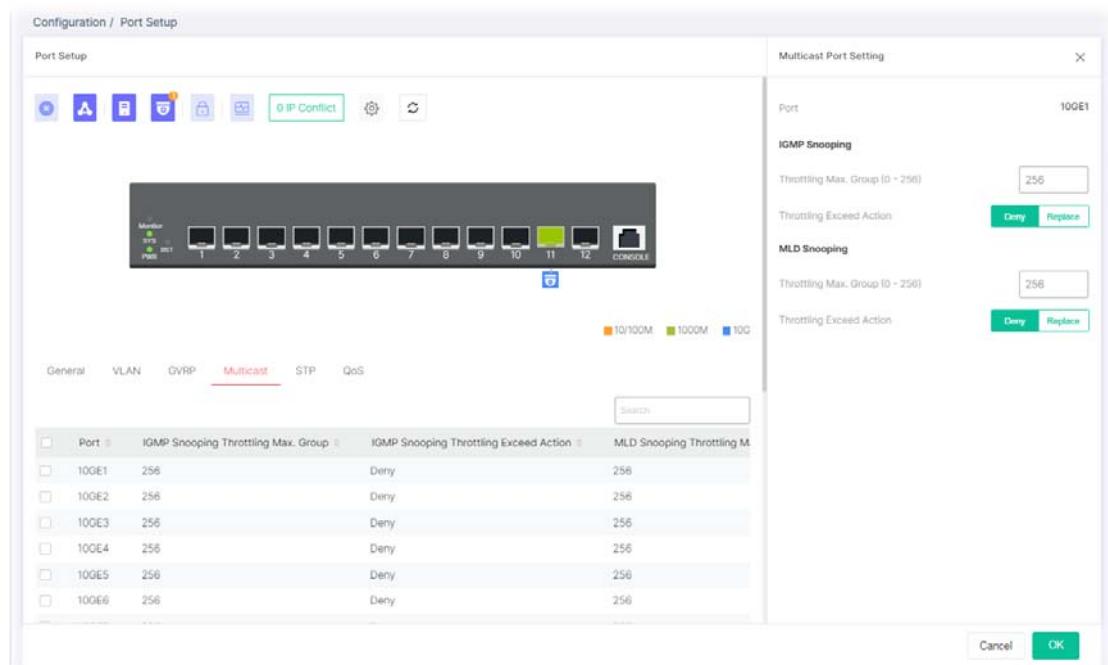

Available settings are explained as follows:

Item	Description
<b>Multicast Port Setting</b>	
<b>Port</b>	Displays the port number.
<b>IGMP Snooping</b>	
<b>Throttling Max. Group</b>	Define the maximum number of IGMP group profile that a user on the switch can join. If "0" is selected, then such interface (port) can join all of the IGMP group profiles (defined in Filtering Profile).
<b>Throttling Exceed Action</b>	VigorSwitch will perform the action defined below when the number of IGMP join reports for the specified interface exceeds the value defined in Max Group. <b>Deny</b> - It is default setting. The IGMP join report (for multicast service) received by such interface will be discarded. <b>Replace</b> - When it is selected, a new group with IGMP report received will replace the existing group.
<b>MLD Snooping</b>	

<b>Throttling Max. Group</b>	Define the maximum number of MLD group profile that a user on the switch can join. If "0" is selected, then such interface (port) can join all of the MLD group profiles (defined in Filtering Profile).
<b>Throttling Exceed Action</b>	VigorSwitch will perform the action defined below when the number of MLD join reports for the specified interface exceeds the value defined in Max Group.  <b>Deny</b> – It is default setting. The MLD join report (for multicast service) received by such interface will be discarded.  <b>Replace</b> – When it is selected, a new group with MLD report received will replace the existing group.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


## II-5-5 STP

The Spanning Tree Protocol (STP) is a network protocol that ensures a loop-free topology for any bridged Ethernet local area network.

Bridge Protocol Data Units (BPDUs) are frames that contain information about the Spanning Tree Protocol (STP). Switches send BPDUs using a unique MAC address from its origin port and a multicast address as destination MAC (01:80:C2:00:00:00, or 01:00:0C:CC:CC:CD for Per VLAN Spanning Tree).

For STP algorithms to function, the switches need to share information about themselves and their connections. What they share are bridge protocol data units (BPDUs).

BPDUs are sent out as multicast frames to which only other layer 2 switches or bridges are listening. If any loops (multiple possible paths between switches) are found in the network topology, the switches will co-operate to disable a port or ports to ensure that there are no loops; that is, from one device to any other device in the layer 2 network, only one path can be taken.

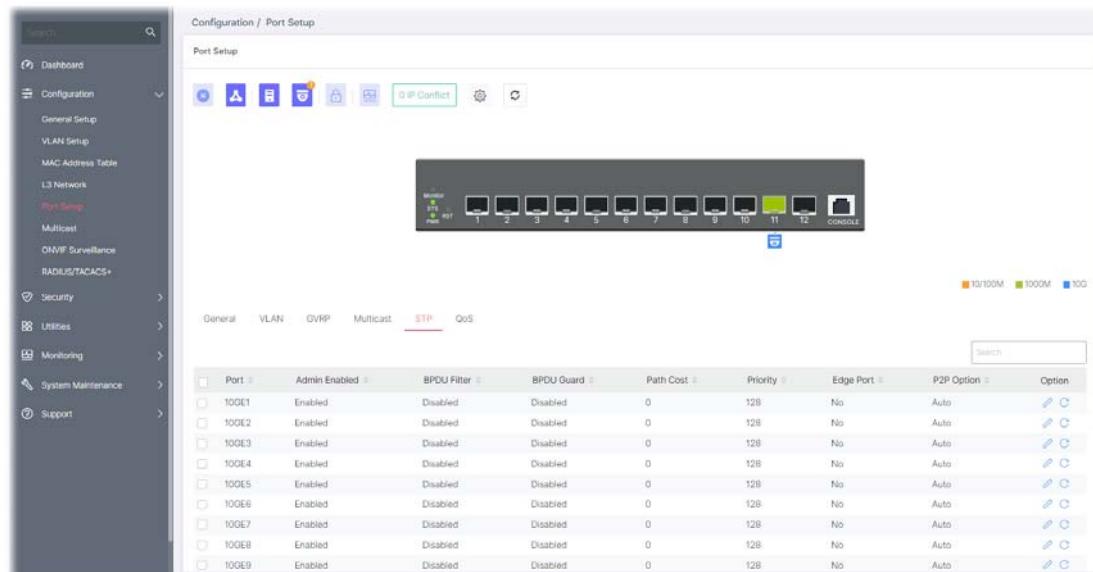


Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the LAN port number (GE1 to GE28).
<b>Admin Enabled</b>	Displays the status (enabled/disabled) of Admin Enabled.

<b>BPDU Filter</b>	Displays the status (enabled/disabled) of BPDU Filter function.
<b>BPDU Guard</b>	Displays the status (enabled/disabled) of BPDU Guard function.
<b>Path Cost</b>	Displays the value of transmitting a frame onto a LAN through that port.
<b>Priority</b>	Displays the priority value for the port interface.
<b>Edge Port</b>	Displays the status (enabled/disabled) of Edge Port function.
<b>P2P Option</b>	Displays the STP of link type (All, Yes, No) on this port.
<b>Option</b>	 - Click it to modify the STP port setting.  - Clear current settings and return to factory default settings.

To modify settings for a port, click the  link to open the setting page.

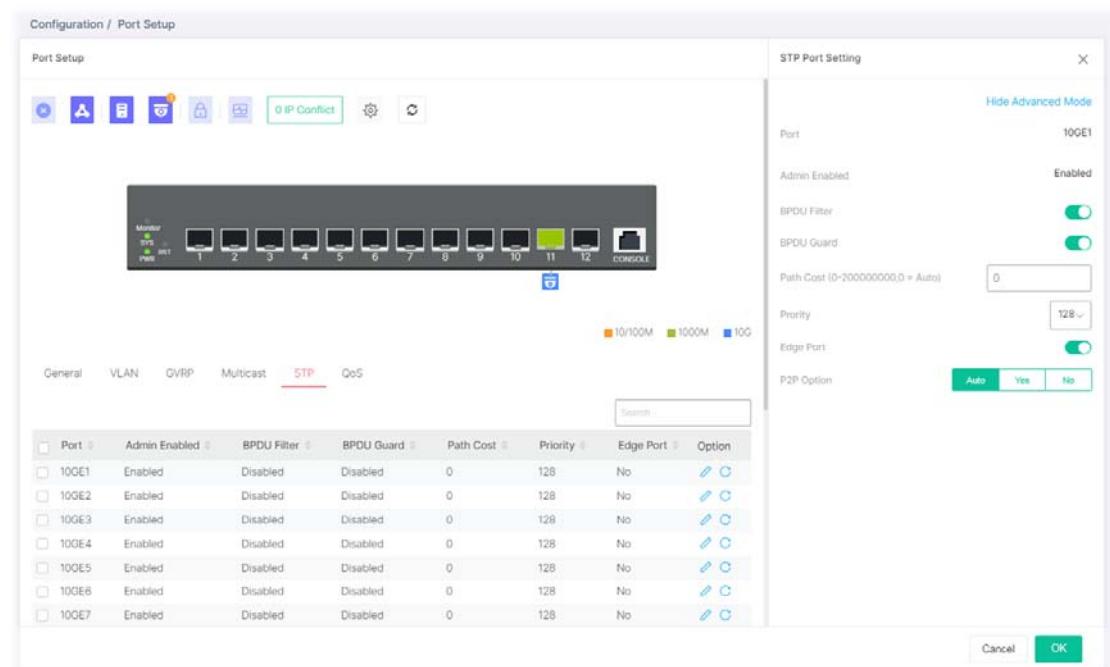

Available settings are explained as follows:

Item	Description
<b>STP Port Setting</b>	
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>Port</b>	Displays the selected LAN port number.
<b>Admin Enabled</b>	Displays the status of Admin Enabled.
<b>BPDU Filter</b>	Click the toggle to enable / disable the function of dropping all BPDU packets and no BPDU will be sent.  - means "Enable".  - means "Disable".

<b>BPDU Guard</b>	BPDU Guard further protects your switch by turning this port into error state and shutdown if any BPDU received from this port. Check it to enable such function.
<b>Path Cost</b>	Path cost is the cost of transmitting a frame on to a LAN through that port. It is recommended to assign this value according to the speed of the bridge. The slower the media, the higher the cost. Entering 0 means the switch will automatically assign a value.
<b>Priority</b>	Specify a priority value for the switch. The smaller the priority value, the higher the priority and greater chance of becoming the root.
<b>Edge Port</b>	In the edge mode, the interface would be put into the Forwarding state immediately upon link up. If the edge mode is enabled for the interface and there are BPDUs received on the interface, the loop might be occurred in the short time before the STP state change. Click the toggle to enable / disable the function.
<b>P2P Option</b>	<ul style="list-style-type: none"> <li>● <b>Auto</b> – VigorSwitch determines the STP of link type for this port automatically.</li> <li>● <b>Yes</b> – It means the STP of link type on this port is full-duplex and directly connect to another switch or host.</li> <li>● <b>No</b> - It means the STP of link type on this port is “not” full-duplex and “does not” directly connect to another switch or host.</li> </ul>

After finishing this web page configuration, please click **OK** to save the settings.

## II-5-6 QoS


This page is used to configure port settings for QoS. The configuration result for each port will be displayed on the table listed on the lower side of this web page.

### Ingress Rate Limit

It allows a user to configure ingress port rate limit. The ingress rate limit is the number of bits per second that can be received from the ingress interface. Excess bandwidth above this limit is discarded.

### Egress Shaping Rate


It allows a user to configure egress port rate limit. The egress rate limit is the number of bits per second that can be received from the egress interface. Excess bandwidth above this limit is discarded.

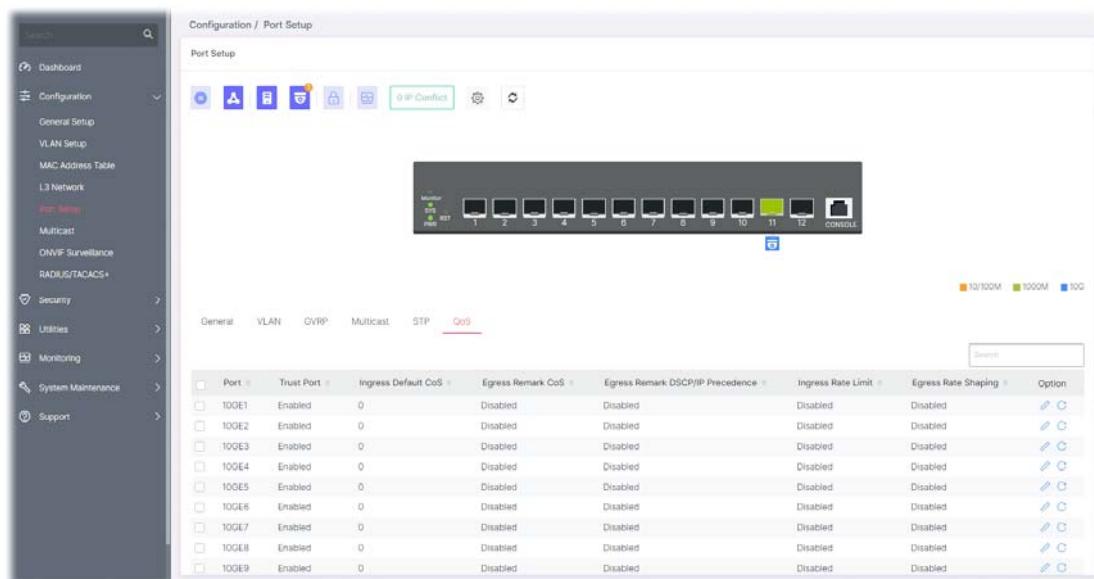

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the port profiles (GE1 to GE28).
<b>Trust Port</b>	Displays if the traffic follow the trust mode in general setting (Enabled/Disabled).
<b>Ingress Default CoS</b>	Displays the default CoS priority value for those ingress frames.
<b>Egress Remark CoS</b>	Displays the status (Enabled/Disabled) of the function.
<b>Egress Remark DSCP/IP Precedence</b>	Displays the status (Enabled/Disabled) of the function.
<b>Ingress Rate Limit</b>	Displays the value of the ingress rate limit. If this function is disabled, then Off will be shown instead.
<b>Egress Rate Shaping</b>	Displays the value of the egress rate shaping. If this function is disabled, then Off will be shown instead.
<b>Option</b>	- Click it to modify the QoS port setting. - Clear current settings and return to the factory default settings.

To modify settings for a port, click the  link to open the setting page.

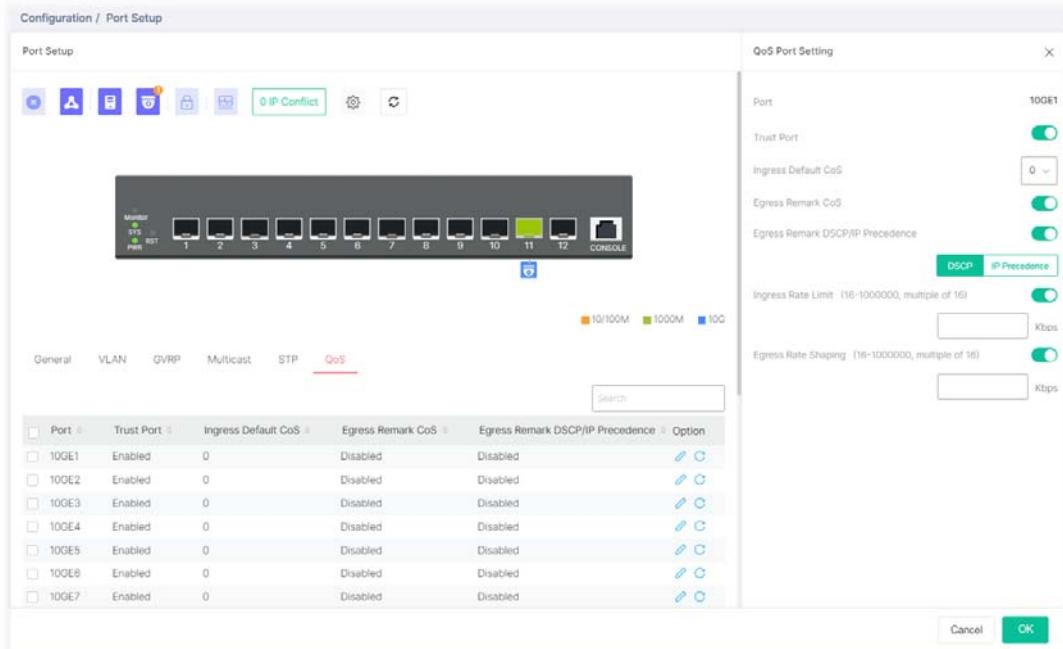

Available settings are explained as follows:

Item	Description
<b>QoS Port Setting</b>	
<b>Port</b>	Displays the port profiles (GE1 to GE28).
<b>Trust Port</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.  - Traffic will follow trust mode in general setting.  - No QoS service for this port.
<b>Ingress Default CoS</b>	Specify the default CoS priority value for those ingress frames without given trust QoS tag (802.1q/DSCP/IP Precedence, depending on configuration).
<b>Egress Remark CoS</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>Egress Remark DSCP/IP Precedence</b>	Click the toggle to enable / disable this function. <b>DSCP</b> - Egress traffic will be marked with DSCP value according to the Queue to DSCP mapping table. <b>IP Precedence</b> - Egress traffic will be marked with IP Precedence value according to the Queue to IP Precedence mapping table.
<b>Ingress Rate Limit</b>	The ingress rate limit is the number of bits per second that can be received from the ingress interface. Excess bandwidth above this limit is discarded. Click the toggle to enable / disable this function. Enter the rate value,<16-1000000>,unit:16 Kbps.
<b>Egress Rate Shaping</b>	The egress rate limit is the number of bits per second that can be received from the egress interface. Excess bandwidth above this limit is discarded.

---

Click the toggle to enable / disable this function.

Enter the rate value,<16-1000000>,unit:16 Kbps.

---

After finishing this web page configuration, please click **OK** to save the settings.


## II-6 Multicast

IP multicast is a technique for one-to-many communication over an IP infrastructure in a network.

To avoid the incoming data broadcasting to all GE ports, multicast is useful to transfer the data/message to specified GE ports for IGMP snooping. When VigorSwitch receives a message "subscribed" by the client, it must decide to transfer the data to specified GE ports according to the location of the client (subscribed member).

### II-6-1 IGMP Snooping

IGMP snooping is the process of listening to Internet Group Management Protocol (IGMP) network traffic. The feature allows a network switch to listen in on the IGMP conversation between hosts and routers. By listening to these conversations the switch maintains a map of which links need which IP multicast streams. Multicasts may be filtered from the links which do not need them and thus controls which ports receive specific multicast traffic.

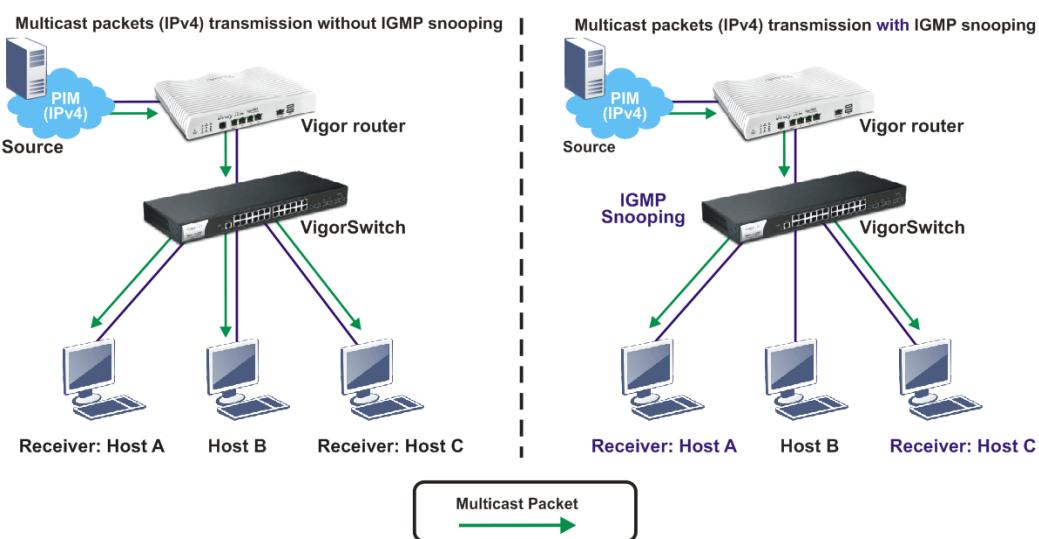

## II-6-1-1 IGMP Snooping

Available settings are explained as follows:

Item	Description
<b>IGMP Snooping Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ( - means "Enable".) ( - means "Disable").
<b>IGMP Snooping Version</b>	Set the IGMP snooping version. <b>v2</b> - Only support process IGMP v2 packet. <b>v3</b> - Support v3 basic and v2.
<b>Report Suppression</b>	It allows the switch to handle IGMP reports between router and host, suppressing bandwidth used by IGMP. <b>Enable / Disable</b> – Click the toggle to enable / disable this function. ( - means "Enable".) ( - means "Disable").

## II-6-1-2 VLAN Setting

This page allows you to enable/disable IGMP function, select snooping version, and enable/disable snooping report suppression.

Available settings are explained as follows:

Item	Description
------	-------------

<b>VLAN ID</b>	Displays the VLAN ID number of the VLAN profile.
<b>VLAN Name</b>	Displays the name of the VLAN profile.
<b>IGMP Snooping Status</b>	Displays the status (Enabled/Disabled) of the IGMP function.
<b>Immediate Leave</b>	Displays the status (Enabled/Disabled)
<b>Querier Status</b>	Displays the status (Enabled/Disabled) of IGMP querier function.
<b>Static Router Ports</b>	Displays the LAN Port (GE/LAG) to send out query to remote host.
<b>Forbidden Router Ports</b>	Displays the forbidden LAN Port (GE/LAG).
<b>Expiry Time (sec.)</b>	Displays the time before querier is considered no longer existed.
<b>Option</b>	<span style="color: blue;">E</span> - Click it to modify the IGMP setting. <span style="color: blue;">C</span> - Clear current settings and return to factory default settings.

To modify settings for a port, click the E link to open the setting page.

Available settings are explained as follows:

Item	Description
<b>IGMP Setting</b>	
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>VLAN ID</b>	Displays the VLAN ID number of the VLAN profile.
<b>VLAN Name</b>	Displays the name of the VLAN profile.
<b>General</b>	<b>IGMP Snooping Enable</b> – Click the toggle to enable / disable this IGMP snooping function.



- means "Enable".



- means "Disable".

#### Below shows settings for Advanced Mode

<b>Router Ports Auto Learn</b>	Click the toggle to enable / disable this function. Set the enabling status of IGMP router port learning. The server will learn router port by IGMP query.
<b>Query Robustness</b>	Set a number which allows tuning for the expected packet loss on a subnet.
<b>Query Interval</b>	Set the interval of querier to send the general query.
<b>Query Response Interval</b>	It specifies the maximum allowed time before sending a responding report in units of 1/10 second.
<b>Last Member Query Counter</b>	After querying for specified times (defined here) and still not receiving any response from the subscribed member, VigorSwitch will stop transmitting data to the related GE port(s).
<b>Last Member Query Interval</b>	The maximum time interval between counting each member query message with no responses from any subscribed member.
<b>Immediate Leave</b>	Leave the multicast group immediately on the port & VLAN where leave message is sent from, regardless there is still a subscribed member or not. Click Enable to enable Fastleave function.
<b>IGMP Querier</b>	<p><b>IGMP Querier Enable</b> - Click the toggle to enable / disable this function.</p> <p><b>In Advanced Mode,</b></p> <p><b>Querier Version</b> - Set the IGMP snooping version.</p> <ul style="list-style-type: none"> <li>● <b>v2</b> - Only support process IGMP v2 packet.</li> <li>● <b>v3</b> - Support v3 basic and v2.</li> </ul> <p>For maximum compatibility, it is suggested to use querier version lower than IGMP snooping version, for there is possible network mixed with IGMP v2/v3 client and v2 query message is widely understandable for those clients.</p>
<b>IGMP Static Group</b>	<p>The IGMP static group is allowed to assign a VLAN/port as a specific IPv4 multicast member. Every IPv4 multicast stream that belongs to the specified group IP address will be forwarded to the specified port/VLAN member.</p> <p><b>+Add</b> - Click to create a new group.</p> <ul style="list-style-type: none"> <li>● <b>Group IP Address</b> - Specify the IPv4 multicast address you wish to assign for the static group (defined in VLAN ID).</li> <li>● <b>Member Ports</b> - Specify the port(s) that static group with given IPv4 multicast address shall include.</li> </ul>
<b>IGMP Router</b>	<p><b>Static Router Ports</b> - Specify LAN Port (GE/LAG) to send out query to remote host.</p> <p><b>Forbidden Router Ports</b> - Use the drop down list to specify forbidden LAN Port (GE/LAG).</p>
<b>IGMP Forward All</b>	<p><b>Static Forward Ports</b> - Use the drop down list to specify LAN Port (GE/LAG). Later, the multicast packets will be delivered to the network device connected by these ports.</p> <p><b>Forbidden Forward Ports</b> - Use the drop down list to specify forbidden LAN Port (GE/LAG). Later, the multicast packets will not be delivered to the network device connected by these ports.</p>

After finishing this web page configuration, please click **OK** to save the settings.

## II-6-1-3 Group Table

This page shows currently known and dynamically learned by IGMP snooping or shows the assigned IPv4 multicast address group in operation.

Group Table					
<a href="#">+ Add</a>					
	VLAN ID	Group IP Address	Member Ports	Type	Life (Sec.)
No data available in table					

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to create a new profile.
<b>VLAN ID</b>	Display the VLAN of this multicast group belongs to.
<b>Group IP Address</b>	Display the multicast address of this multicast group.
<b>Member Ports</b>	Display the port(s) where subscribing member of this multicast group belongs to.
<b>Type</b>	Display if it is dynamically learned or statically assigned.
<b>Life (Sec.)</b>	Display the life time of this multicast member left if no membership report sent again.

To add a new group, click the **+Add** link to open the setting page.



Available settings are explained as follows:

Item	Description
<b>VLAN ID</b>	Specify a VLAN profile as IGMP Static Group.
<b>Group IP Address</b>	It is an identifier for the group member. Packets sent to such address will be transferred to all interfaces defined in Member Ports. Specify the IPv4 multicast address you wish to assign for the static group (defined in VLAN ID).
<b>Member Ports</b>	Specify the port(s) that static group with given IPv4 multicast address shall include.

After finishing this web page configuration, please click **OK** to save the settings.

## II-6-1-4 Filtering Profile

The administrator can configure the user on a switch port (GE/LAG port) belonging to which multicast group and restrict the number of multicast group that the user on the switch can join. Then the administrator is able to control the network service (e.g, IP/TV service) that the user can enjoy.

The filtering profile page allows to configure up to 128 IP-group (for multicast service) profiles (starting and ending point within an IP range shall be specified). Each IP group profile can be set for permission of / denial of network service respectively.

In addition, such filtering profile is only effective for controlling the query for multicast. It has nothing to do with the general IGMP query.

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to create a new profile.
<b>Profile ID</b>	Displays the index number of a filtering profile.
<b>Start Address</b>	Displays the starting point for the IP range.
<b>End Address</b>	Displays the ending point for the IP range.
<b>Action</b>	Displays the action performed for this profile.
<b>Binding Ports</b>	Displays the interface (GE/LAG) selected for this profile.

To add a new profile, click the **+Add** link to open the setting page.

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to have new fields for creating a new profile.
<b>Profile ID</b>	Enter one filtering profile (1~128) for IGMP snooping.
<b>Start Address</b>	Enter an IP address as the starting point for the IP range.
<b>End Address</b>	Enter an IP address as the ending point for the IP range.
<b>Action</b>	<b>Allow</b> – When it is selected, the request for multicast traffic will be forwarded to the multicast group normally. <b>Deny</b> – It is default setting. The forwarding request of multicast traffic will be discarded.
<b>Binding Ports</b>	Select the GE/LAG port(s) (interfaces) for filtering profile to process multicast traffic.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


## II-6-2 MVR

Multicast VLAN Registration (MVR) can route packets received in a multicast source VLAN to one or more destination VLANs. LAN users are in the destination VLANs and the multicast server is in the source VLAN.

MVR can continuously send multicast stream for traffic in the multicast VLAN, but isolate the streams from the source VLANs for bandwidth and security reasons.

In general, MVR is able to:

- Identify the MVR IP multicast streams and their associated IP multicast group.
- Intercept the IGMP messages

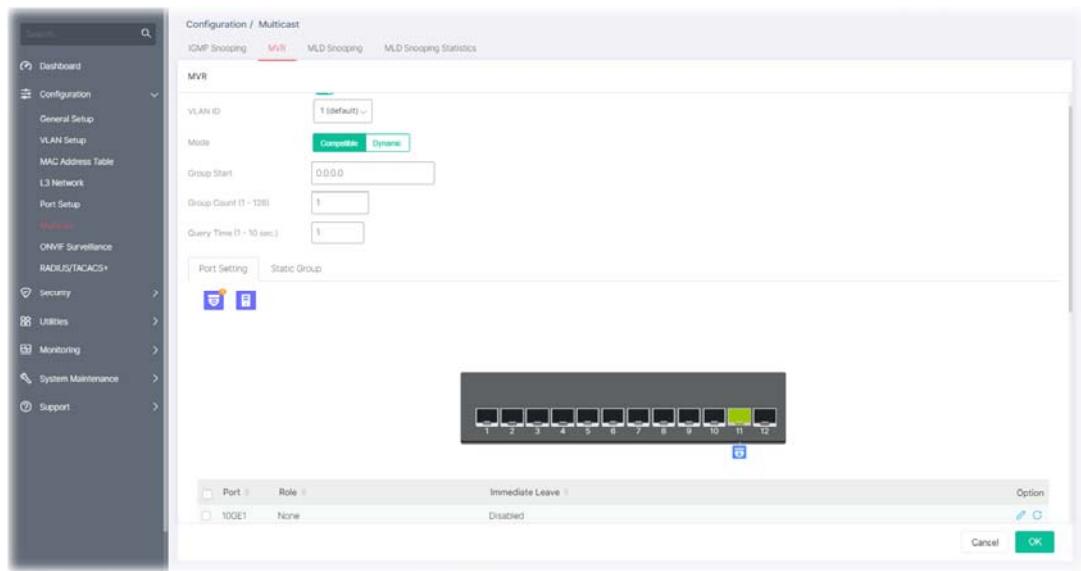

Available settings are explained as follows:


Item	Description
<b>MVR Enable</b>	Click the toggle to enable / disable the MVR function. ( means "Enable".) ( means "Disable".)
<b>VLAN ID</b>	Choose one VLAN profile from the drop down list as multicast source VLAN which will receive multicast data. All source ports must belong to this VLAN. The default is VLAN 1.  Note: Each VLAN ID shall be configured with group address and member port.
<b>Mode</b>	There are two modes offered for MVR operation. <b>Comaptible</b> – Multicast data received by MVR hosts (multicast server) will be forwarded to all MVR receiver ports. <b>Dynamic</b> – Multicast data received by MVR hosts (multicast server) on VigorSwitch will be forwarded from those MVR data and client ports grouped under MVR server.
<b>Group Start</b>	Enter an IP address. Any multicast data sent to this IP address will be sent to all source ports on VigorSwitch; and all receiver ports will accept /receive data from that multicast address.
<b>Group Count</b>	Select a number to configure a contiguous series of MVR group

	addresses (the range for count is 1 to 128; the default is 1).
<b>Query Time</b>	Use the drop down list to define the maximum time (1 - 10 seconds) to wait for IGMP report members on a receiver port before the port is removed from multicast group.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-6-2-1 Port Setting


It is necessary to specify destination port and source port (GE/LAG) for Vigor system to perform MVR operation.

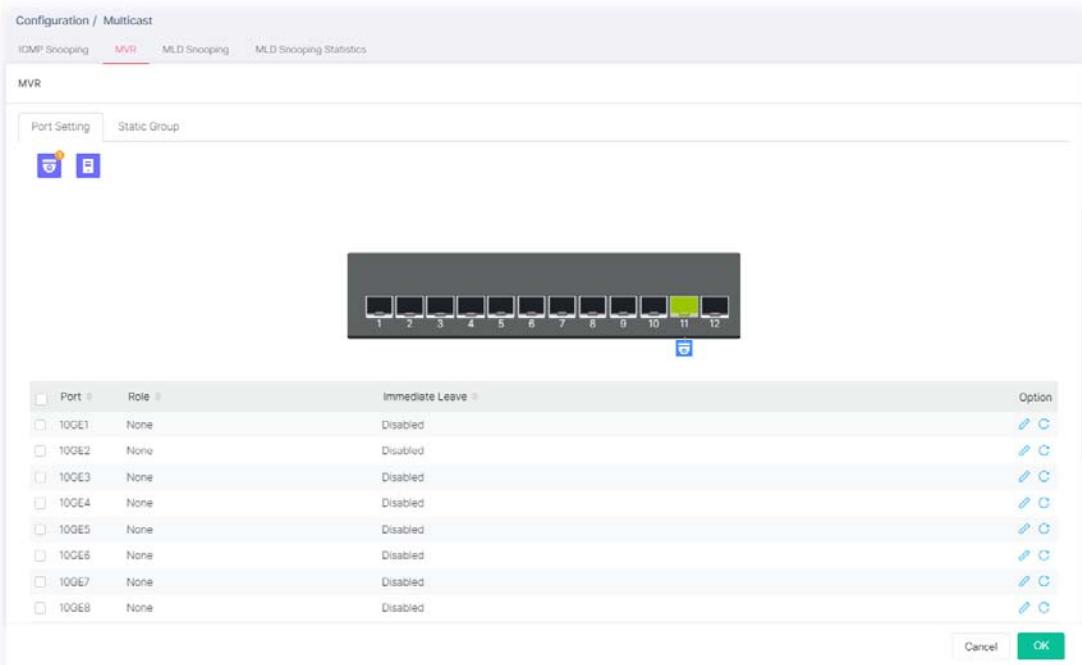

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the index number of the LAN Port (GE/LAG).
<b>Role</b>	Displays the role (None, Receiver or Source) of the port.
<b>Immediate Leave</b>	Displays the status (enable/disable) of the immediate leave function.
<b>Option</b>	- Click it to modify the port setting for MVR. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

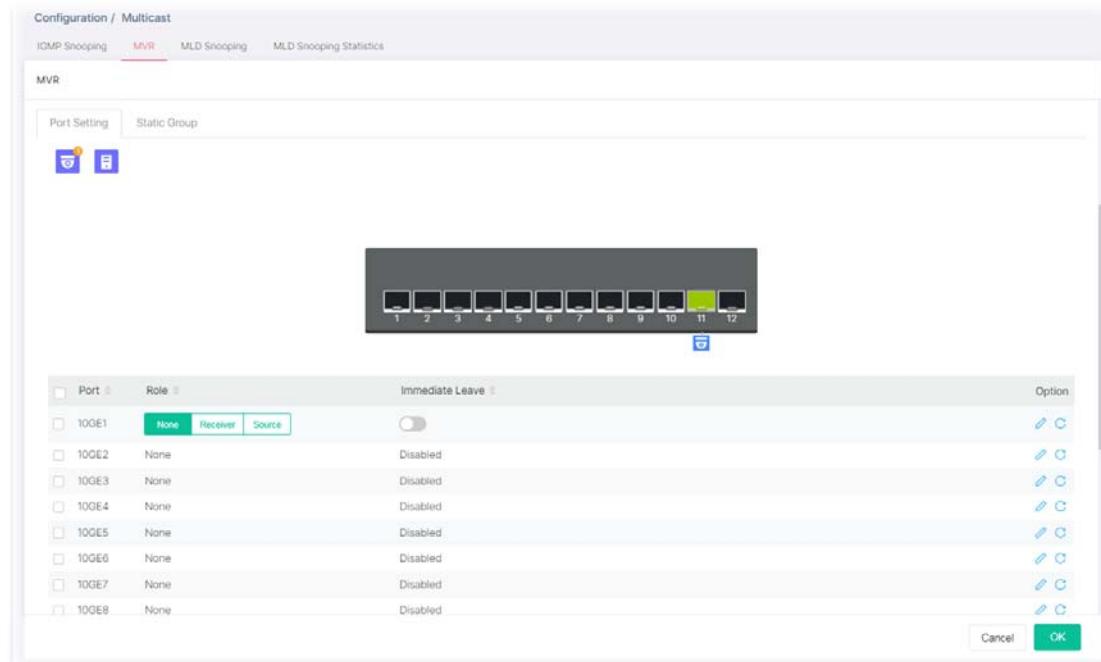


Available settings are explained as follows:

Item	Description
<b>Port</b>	Each port can be set as Receiver or Source port respectively. If you do not satisfy with the port setting, simply click  to make the modification.
<b>Role</b>	<b>None</b> – Nothing will be mapped to the selected LAN port in MVR operation. <b>Receiver</b> – The selected port will be treated as destination port which will receive multicast data from the multicast server. <b>Source</b> – The selected port will be treated as source port which will send multicast data to the receiver port.
<b>Immediate Leave</b>	<b>Enable</b> – Enable the function of the immediate leave. When the port (with the role of receiver) receives the leave message, it will be removed from multicast group to speed up leave latency. <b>Disable</b> – Disable the function of immediate leave.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-6-2-2 Static Group


The MLD static group is allowed to assign a VLAN/port as a specific IP multicast member. Every IP multicast stream that belongs to the specified group IP address will be forwarded to the specified port/VLAN member.

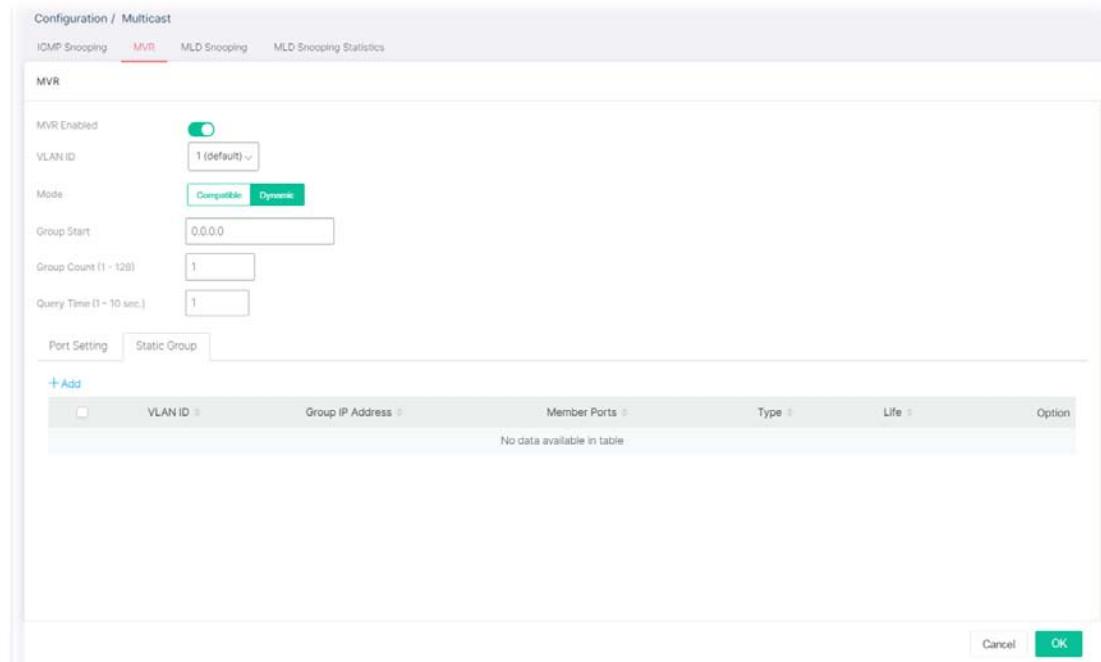

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to have new fields for creating a new profile.
<b>VLAN ID</b>	Displays the ID number of the VLAN.
<b>Group Address</b>	Displays the IP address(es).
<b>Member</b>	Displays the GE/LAG port to be grouped under the selected VLAN.
<b>Type</b>	Displays if it is dynamically learned or statically assigned.
<b>Life</b>	Displays the life time of this multicast member left if no membership report sent again.

To add a new profile, click the **+Add** link to open the setting page.

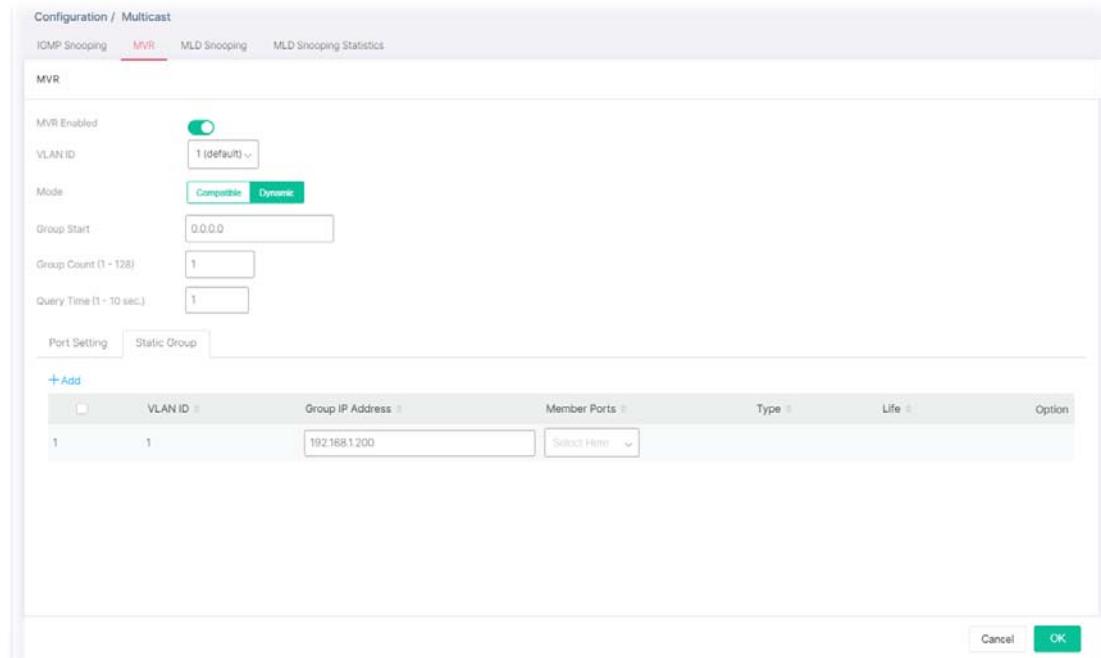


Available settings are explained as follows:


Item	Description
<b>VLAN ID</b>	Display the ID number of the VLAN.
<b>Group IP Address</b>	Define a range of IP address(es) with the format of "xxx.xxx.xxx.xxx - xxx.xxx.xxx.xxx".
<b>Member Ports</b>	Choose GE/LAG port to be grouped under the selected VLAN.
<b>OK</b>	Save the settings.

## II-6-3 MLD Snooping

MLD snooping does the same thing as IGMP snooping. The difference is that IGMP snooping acts on IPv4 packets; MLD snooping acts on IPv6 packets. MLD snooping is the process of listening to Multicast Listener Discovery network traffic. It can examine IPv6 packets and forward these packets to designate location via VLAN port members.

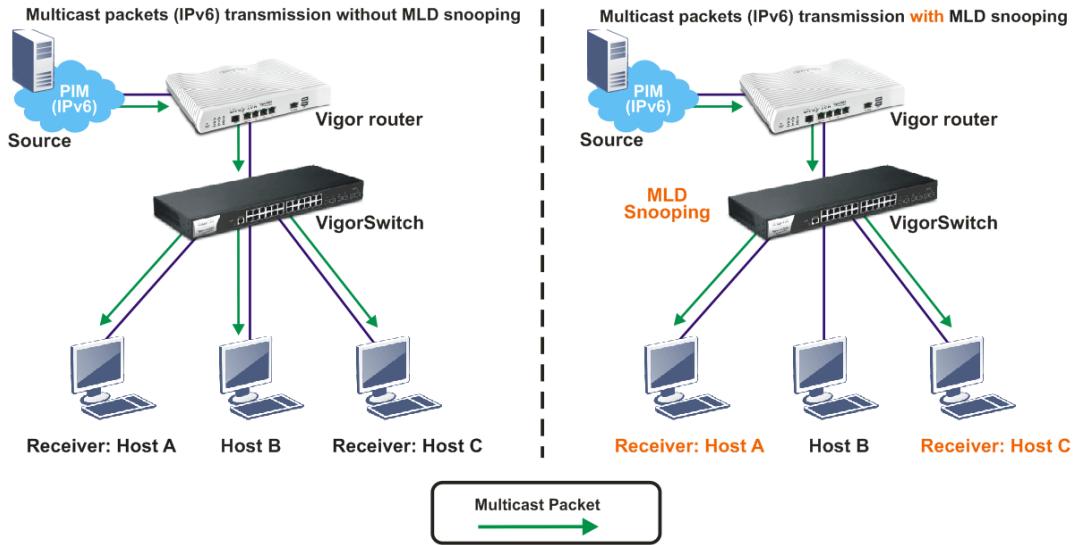

## II-6-3-1 MLD Snooping

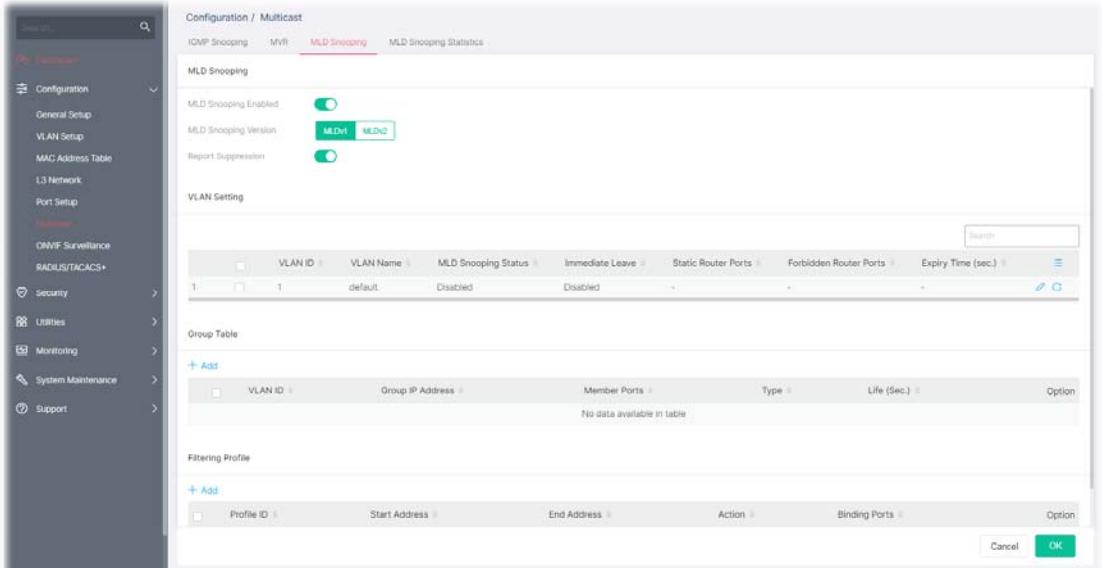

Available settings are explained as follows:

Item	Description
<b>MLD Snooping Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>MLD Snooping Version</b>	VigorSwitch supports two versions of MLD snooping. <b>MLDv1</b> – When it is selected, VigorSwitch will detect packets controlled by MLDv1 and <i>bridge</i> the traffic to IPv6 destination defined with multicast address(es). <b>MLDv2</b> - When it is selected, VigorSwitch will detect packets controlled by MLDv1 and <i>forward</i> the traffic to destination defined with multicast address(es).
<b>Report Suppression</b>	It allows the switch to handle MLD reports between router and host, suppressing bandwidth used by MLD.

	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>OK</b>	Save the settings.

## II-6-3-2 VLAN Setting

This page allows you to enable/disable MLD snooping function, select snooping version, and enable/disable snooping report suppression.

VLAN Setting						
	VLAN ID	VLAN Name	MLD Snooping Status	Immediate Leave	Static Router Ports	Forbidden Router Ports
1	1	default	Disabled	Disabled	-	-

Available settings are explained as follows:

Item	Description
<b>VLAN ID</b>	Displays the VLAN ID number of the VLAN profile.
<b>VLAN Name</b>	Displays the name of the VLAN profile.
<b>MLD Snooping Status</b>	Displays the status (Enabled/Disabled) of the MLD snooping function.
<b>Immediate Leave</b>	Displays the status (Enabled/Disabled) of the immediate leave function.
<b>Static Router Ports</b>	Displays the LAN Port (GE/LAG) to send out query to remote host.
<b>Forbidden Router Ports</b>	Displays the forbidden LAN Port (GE/LAG).
<b>Expiry Time (sec.)</b>	Displays the time before querier is considered no longer existed.
	Click it to modify the MLD setting.
	Clear current settings and return to factory default settings.

To modify settings for a port, click the  link to open the setting page.

Available settings are explained as follows:

Item	Description
<b>MLD Setting</b>	
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>VLAN ID</b>	Displays the VLAN ID number of the VLAN profile.
<b>VLAN Name</b>	Displays the name of the VLAN profile.
<b>General</b>	<b>MLD Snooping Enable</b> – Click the toggle to enable / disable this MLD snooping function. - means "Enable". - means "Disable".

#### Below shows settings for Advanced Mode

<b>Router Ports Auto Learn</b>	Click the toggle to enable / disable this function. Set the enabling status of MLD router port learning. The server will learn router port by IGMP query.
<b>Query Robustness</b>	Set a number which allows tuning for the expected packet loss on a subnet.
<b>Query Interval</b>	Set the interval of querier to send the general query.
<b>Query Response Interval</b>	It specifies the maximum allowed time before sending a responding report in units of 1/10 second.
<b>Last Member Query Counter</b>	After querying for specified times (defined here) and still not receiving any response from the subscribed member, VigorSwitch will stop transmitting data to the related GE port(s).
<b>Last Member Query Interval</b>	The maximum time interval between counting each member query message with no responses from any subscribed member.
<b>Immediate Leave</b>	Leave the multicast group immediately on the port & VLAN where leave message is sent from, regardless there is still a subscribed

	member or not. Click the toggle to enable Fastleave function.
<b>MLD Static Group</b>	<p>The MLD static group is allowed to assign a VLAN/port as a specific IPv4 multicast member. Every IPv6 multicast stream that belongs to the specified group IP address will be forwarded to the specified port/VLAN member.</p> <p><b>+Add</b> - Click to create a new group.</p> <ul style="list-style-type: none"> <li>● <b>Group IP Address</b> - Specify the IPv6 multicast address you wish to assign for the static group (defined in VLAN ID).</li> <li>● <b>Member Ports</b> - Specify the port(s) that static group with given IPv6 multicast address shall include.</li> </ul>
<b>MLD Router</b>	<p><b>Static Router Ports</b> - Specify LAN Port (GE/LAG) to send out query to remote host.</p> <p><b>Forbidden Router Ports</b> - Use the drop down list to specify forbidden LAN Port (GE/LAG).</p>
<b>MLD Forward All</b>	<p><b>Static Forward All Ports</b> - Use the drop down list to specify LAN Port (GE/LAG). Later, the multicast packets will be delivered to the network device connected by these ports.</p> <p><b>Forbidden Forward All Ports</b> - Use the drop down list to specify forbidden LAN Port (GE/LAG). Later, the multicast packets will not be delivered to the network device connected by these ports.</p>

After finishing this web page configuration, please click **OK** to save the settings.

### II-6-3-3 Group Table

This page shows currently known and dynamically learned by IGMP snooping or shows the assigned IPv4 multicast address group in operation.

Group Table						
<a href="#">+ Add</a>		VLAN ID	Group IP Address	Member Ports	Type	Life (Sec.)
						No data available in table

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to create a new profile.
<b>VLAN ID</b>	Display the VLAN of this multicast group belongs to.
<b>Group IP Address</b>	Display the multicast address of this multicast group.
<b>Member Ports</b>	Display the port(s) where subscribing member of this multicast group belongs to.
<b>Type</b>	Display if it is dynamically learned or statically assigned.
<b>Life (Sec.)</b>	Display the life time of this multicast member left if no membership report sent again.

To add a new group, click the **+Add** link to open the setting page.

Available settings are explained as follows:

Item	Description
<b>VLAN ID</b>	Specify a VLAN profile as IGMP Static Group.
<b>Group IP Address</b>	It is an identifier for the group member. Packets sent to such address will be transferred to all interfaces defined in Member Ports. Specify the IPv6 multicast address you wish to assign for the static group (defined in VLAN ID).
<b>Member Ports</b>	Specify the port(s) that static group with given IPv4 multicast address shall include.

After finishing this web page configuration, please click **OK** to save the settings.

#### II-6-3-4 Filtering Profile

The administrator can configure the user on a switch port (GE/LAG port) belonging to which multicast group and restrict the number of multicast group that the user on the switch can join. Then the administrator is able to control the network service (e.g, IP/TV service) that the user can enjoy.


The filtering profile page allows to configure up to 128 IP-group (for multicast servie) profiles (starting and ending point within an IP range shall be specified). Each IP group profile can be set for permission of / denial of network service respectively.

In addition, such filtering profile is only effective for controlling the query for multicast. It has nothing to do with the general IGMP query.

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to create a new profile.
<b>Profile ID</b>	Displays the index number of a filtering profile.
<b>Start Address</b>	Displays the starting point for the IP range.
<b>End Address</b>	Displays the ending point for the IP range.
<b>Action</b>	Displays the action performed for this profile.
<b>Binding Ports</b>	Displays the interface (GE/LAG) selected for this profile.

To add a new profile, click the **+Add** link to open the setting page.

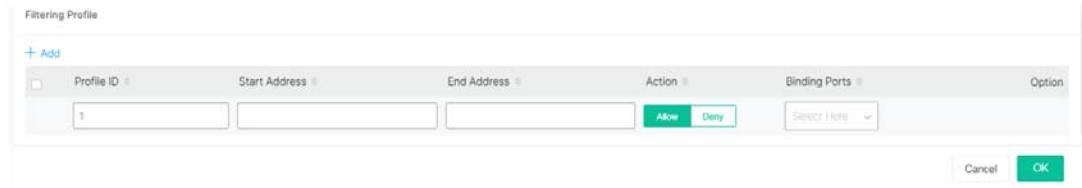

Available settings are explained as follows:

Item	Description
<b>+Add</b>	Click to have new fields for creating a new profile.
<b>Profile ID</b>	Enter one filtering profile (1~128) for MLD snooping.
<b>Start Address</b>	Enter an IP address as the starting point for the IP range.
<b>End Address</b>	Enter an IP address as the ending point for the IP range.
<b>Action</b>	<b>Allow</b> – When it is selected, the request for multicast traffic will be forwarded to the multicast group normally. <b>Deny</b> – It is default setting. The forwarding request of multicast traffic will be discarded.
<b>Binding Ports</b>	Select the GE/LAG port(s) (interfaces) for filtering profile to process multicast traffic.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-6-4 MLD Snooping Statistics

This page displays the MLD snooping statistics.

The screenshot shows a network management interface with a sidebar menu on the left and a main content area on the right. The sidebar includes options like Dashboard, Configuration, General Setup, VLAN Setup, MAC Address Table, L3 Network, Port Setup, Multicast (which is selected), ONVIF Surveillance, RADIUS/TACACS+, Security, Utilities, Monitoring, System Maintenance, and Support. The main content area has a header 'Configuration / Multicast' with tabs for IGMP Snooping, MVR, MLD Snooping, and MLD Snooping Statistics. The 'MLD Snooping Statistics' tab is active. Below it is a table titled 'MLD Snooping Statistics' with two columns: 'Rx' and 'Tx'. The 'Rx' column lists categories: Total, Valid, Invalid, Other, Leave, Report, General Query, Special Group Query, and Source-Specific Group Query. The 'Tx' column shows the count for each category. All counts are zero.


MLD Snooping Statistics			
	Rx	Tx	
Total	0	Leave	0
Valid	0	Report	0
Invalid	0	General Query	0
Other	0	Special Group Query	0
Leave	0	Source-Specific Group Query	0
Report	0		
General Query	0		
Special Group Query	0		
Source-Specific Group Query	0		

## II-7 ONVIF Surveillance

ONVIF (Open Network Video Interface Forum), an International standard for current surveillance system industry, focuses on security products based on network IP address.

With this feature, VigorSwitch can:


- Integrate the ONVIF device and surveillance network
- Centralize management of IP video products
- View video images directly on VigorSwitch WUI
- Offer remote IP video products maintenance

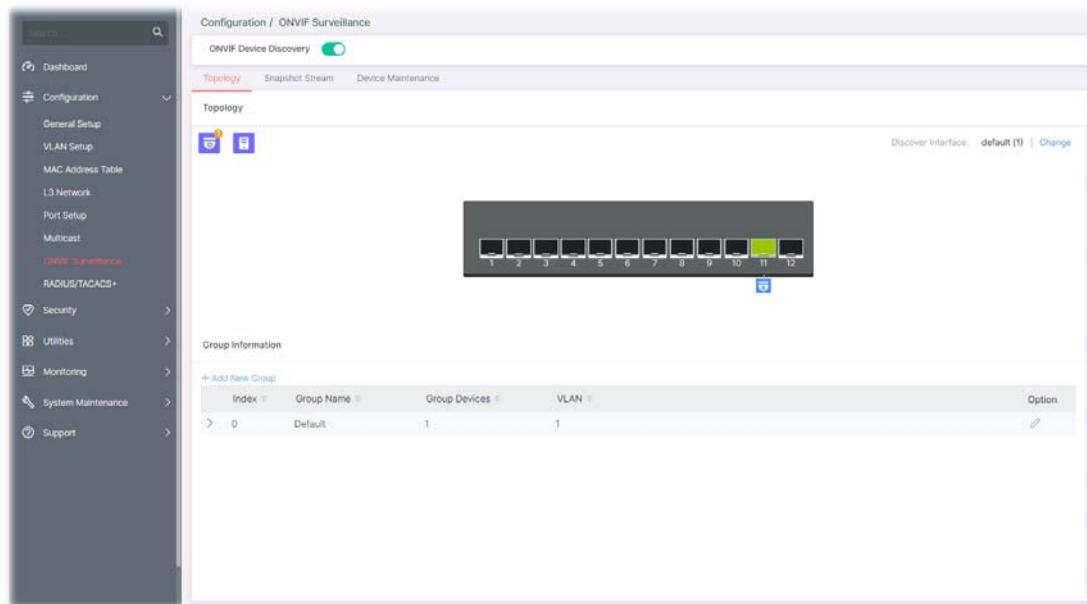

Switch the toggle to enable the **ONVIF Device Discovery** function. Then click **Apply**.

### II-7-1 Topology


ONVIF devices can be centralized and managed remotely via VigorSwitch. With a hierarchy view, the administrator can manage several ONVIF devices and check abnormal traffic detected by the Vigor system.

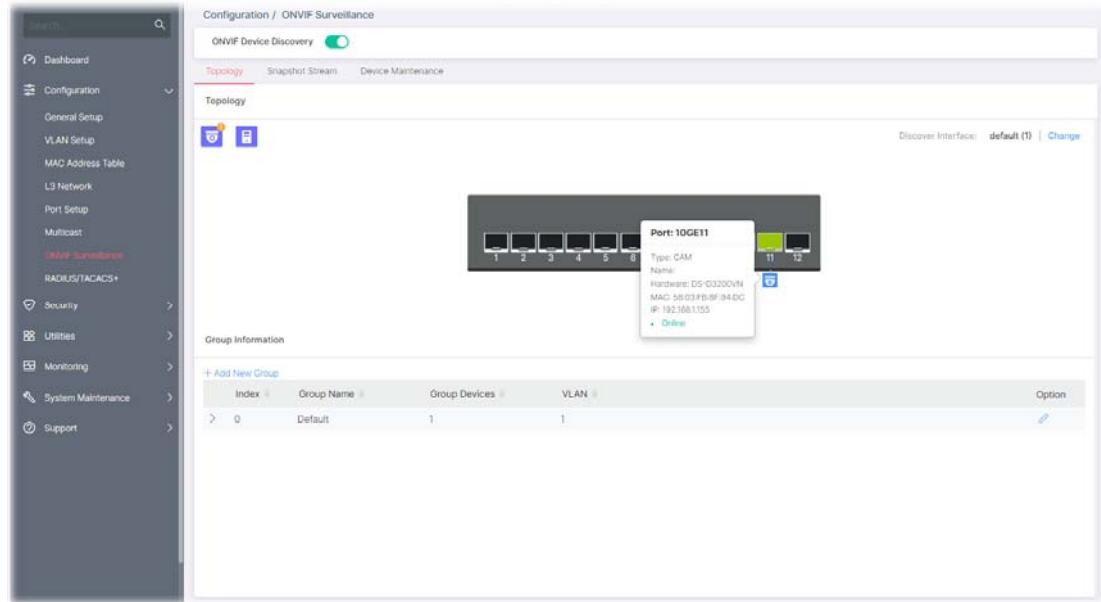

Available settings are explained as follows:

Item	Description
	<b>Camera</b> - Displays the number of IP camera(s) connected to VigorSwitch. The panel sketch on the screen will display which LAN port that the IP camera connected. <b>NVR</b> - Displays the number of NVR device(s) connected to VigorSwitch. The panel sketch on the screen will display which LAN port that the NVR device connected.
<b>Change</b>	VigorSwitch will detect the ONVIF device based on the interface selected. 
<b>+Add New Group</b>	A group can contain one (IP camera or NVR, as group leader) to several devices (IP cameras as group devices). Click to create a new group for managing multiple devices.
<b>Index</b>	Displays the index number of the group profile.
<b>Group Name</b>	Displays the name of the group profile.
<b>Group Devices</b>	Displays the number of the devices grouped under this profile.
<b>VLAN</b>	Displays the VLAN profile.
	Click it to modify the group setting.

To modify settings for a port, click the link to open the setting page.

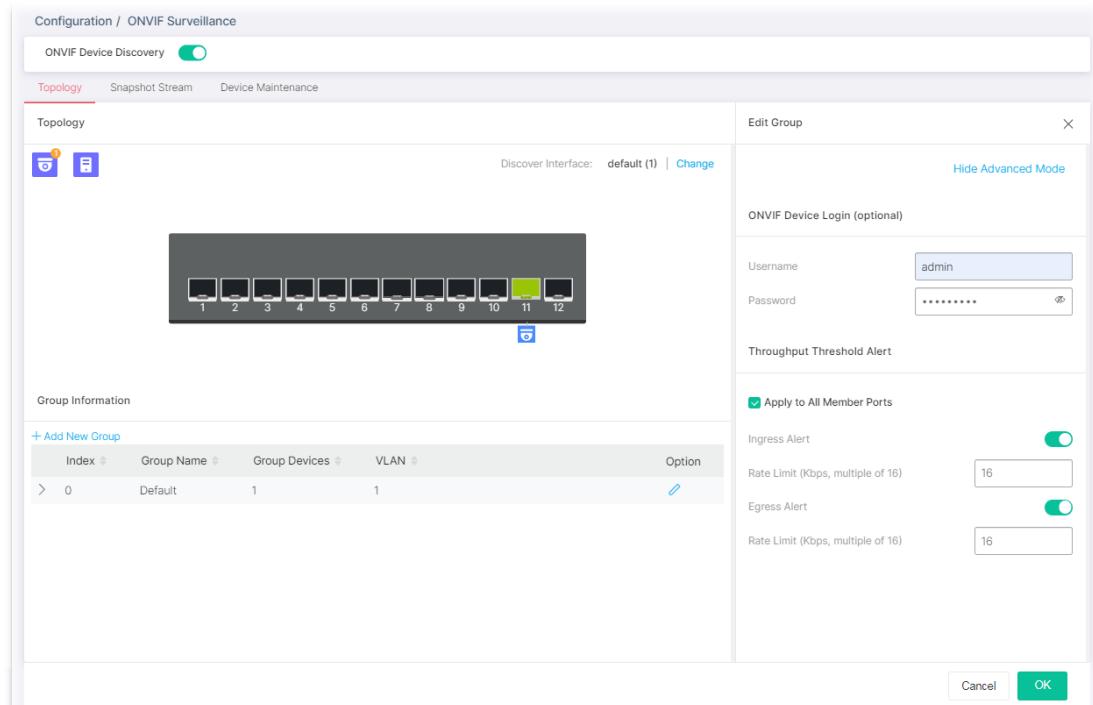


Available settings are explained as follows:

Item	Description
<b>Edit Group</b>	
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>ONVIF Device Login (optional)</b>	
<b>Username / Password</b>	<p>Enter a name / password as the default value. In the entire ONVIF Surveillance menu, VigorSwitch will input this value in advanced and retrieve data. System administrator can access the IP device in which the username and password are as same as the default values. However, you can also input another username/password manually if the IP device username/password is different from the one you enter in Default Username/Default Password.</p>
<b>Advanced Mode - Throughput Threshold Alert</b>	
<b>Apply to All Member Ports</b>	Check the box to apply the throughput threshold setting to all member ports.
<b>Ingress Alert</b>	<p>Toggle the switch to enable the function. Set the ingress limit value. When the incoming traffic (packet) of the GE port reaches the limit, the Vigor System will send an alert email to the system administrator. <b>Rate Limit</b> - Enter the ingress rate as a threshold to send mail alert.</p>
<b>Egress Alert</b>	<p>Toggle the switch to enable the function. <b>Rate Limit</b> - Enter the egress rate as a threshold to send mail alert.</p>

After finishing this web page configuration, please click **OK** to save the settings.

To create a new group, click the **+Add New Group** link to open the setting page.

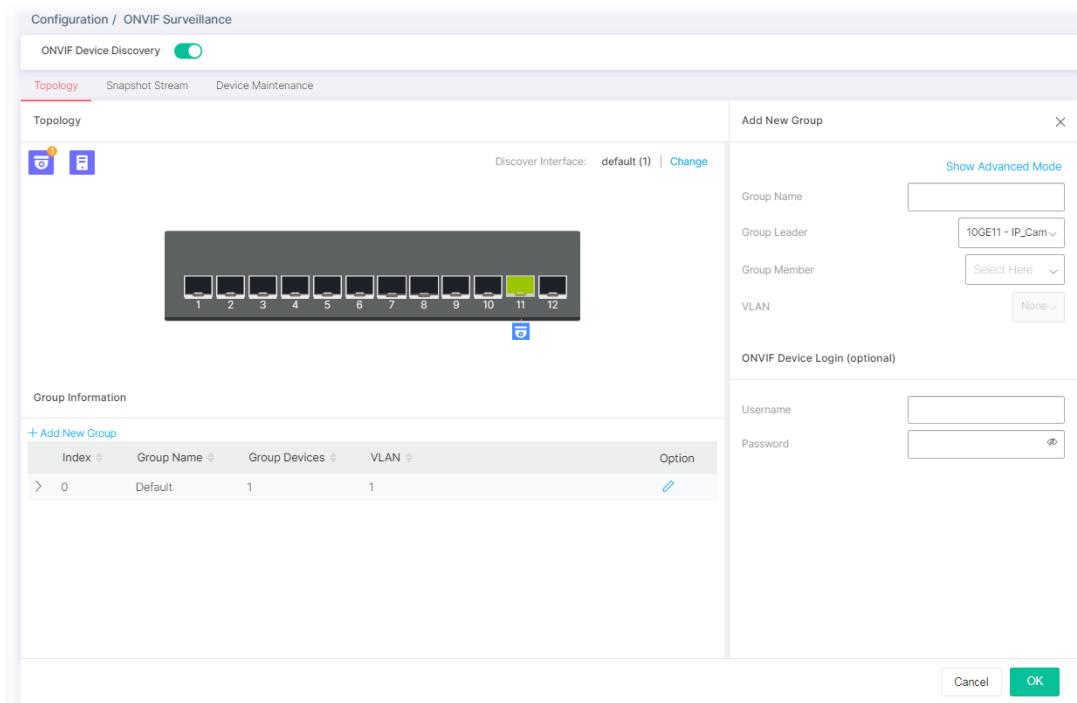

Available settings are explained as follows:

Item	Description
<b>Add New Group</b>	
<b>Show / Hide Advanced Mode</b>	Click to display or hide the advanced settings.
<b>Group Name</b>	Enter the name of a group.
<b>Group Leader</b>	The system will detect the NVR or IP cameras, and list them on the field of NVR or Group Leader.
<b>Group Member</b>	This field lists all devices (IP cameras) not included by other group. Select one IP device to multiple devices or select all the devices for managed by this group.
<b>ONVIF Device Login (optional)</b>	
<b>Username / Password</b>	Enter a name / password as the default value. In the entire ONVIF Surveillance menu, VigorSwitch will input this value in advanced and retrieve data. System administrator can access the IP device in which the username and password are as same as the default values. However, you can also input another username/password manually if the IP device username/password is different from the one you enter in Default Username/Default Password.
<b>Throughput Threshold Alert</b>	
<b>Apply to All Member Ports</b>	Check the box to apply the throughput threshold setting to all member ports.
<b>Ingress Alert</b>	Toggle the switch to enable the function. Set the ingress limit value. When the incoming traffic (packet) of the GE port reaches the limit, the Vigor System will send an alert email to the system administrator. <b>Rate Limit</b> - Enter the ingress rate as a threshold to send mail alert.


### Egress Alert

Toggle the switch to enable the function. Set the egress limit value. When the incoming traffic (packet) of the GE port reaches the limit, the Vigor System will send an alert email to the system administrator.  
**Rate Limit** - Enter the ingress rate as a threshold to send mail alert.

After finishing this web page configuration, please click **OK** to save the settings.

## II-7-2 Snapshot Stream


This page can offer a real-time video of specified IP camera for monitoring and control environments.

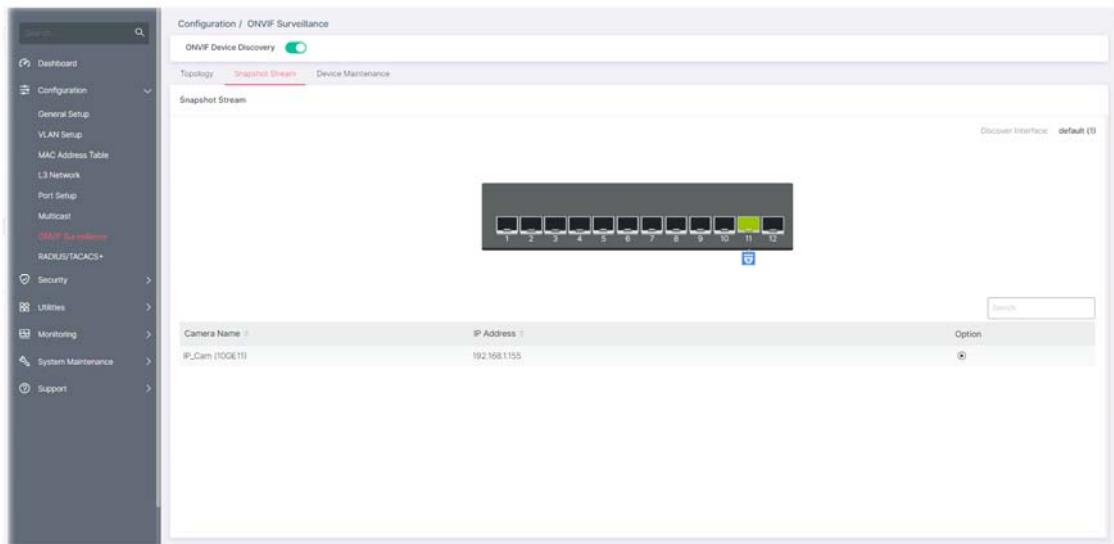

Available settings are explained as follows:

Item	Description
<b>Snapshot Stream</b>	
<b>Camera Name</b>	Displays the device name of the IP camera.
<b>IP Address</b>	Displays the IP address of the IP camera.
	After authenticated with correct username and password, the image of the specified IP camera (supported by VigorSwitch) will be shown immediately.
	<b>Username / Password</b> - The default username/password will be input if it is configured on the Topology page. However, if the default input is not the correct username/password, enter the correct one of the IP camera instead.
	<b>Login</b> - Click it to authenticate the username and password for the specified IP camera.

A pop-up window (Video Preview) appears to display a live image on the screen.

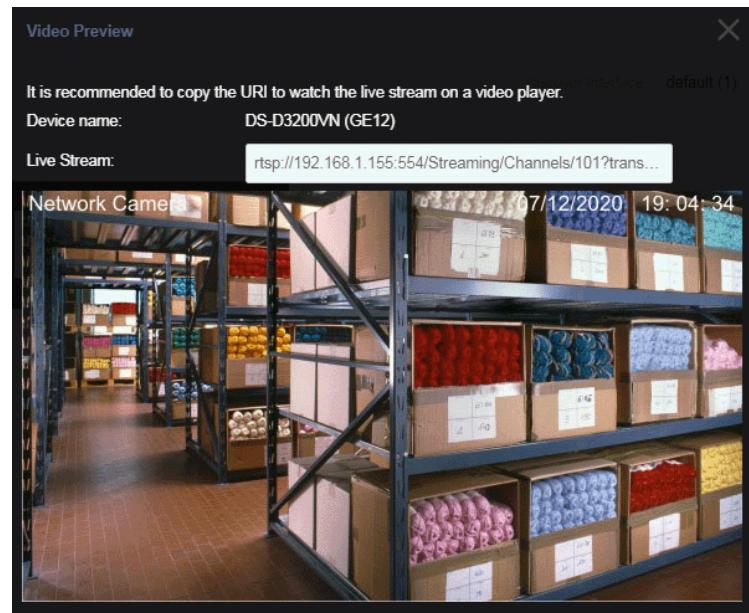

## II-7-3 Device Maintenance

The system administrator can remotely configure time setting and reboot the devices (IP cameras or NVRs) managed by Vigor switch.


Camera Name	IP Address	MAC Address	Status	Option
IP_Cam (100E11)	192.168.1.155	58:03:FB:8F:94:DC	Enabled	38

Available settings are explained as follows:

Item	Description
<b>Device Maintenance</b>	
<b>Camera Name</b>	Displays the device name of the IP camera.
<b>IP Address</b>	Displays the IP address of the IP camera.
<b>MAC Address</b>	Displays the MAC address of the IP camera.
<b>Status</b>	Displays the status (enabled or disabled) of the IP camera.

<b>Option</b>	 - Click to configure detailed settings.
---------------	---

Click  to configure detailed settings. First you have to login the ONVIF device.

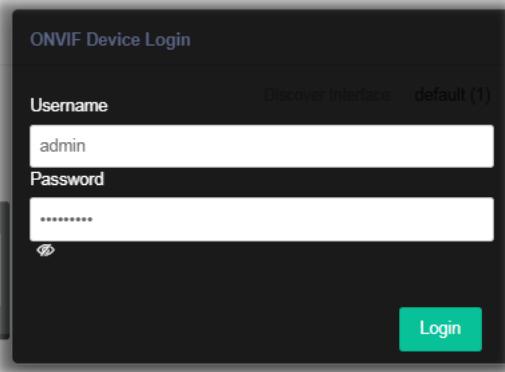

After entering the correct username and password of the device, the detailed settings page will be shown as follows:

Camera Name	IP Address	MAC Address	Status	Option
IP_Cam (100E11)	192.168.1.155	58:03:FB:BF:94:DC	●	28

**Edit IP\_Cam**

General Information	Access Information
Factory Default	 
Device Reboot	
Device Name	
MAC	58:03:FB:BF:94:DC
Admin IP	192.168.1.155
Manufacturer	Hikvision
Model	DS-D3200VN
Firmware	V5.5.54 build 180821
Location	cityhangzhou
Group	Default
Current Time	2011-1-12 18:26:11
UTC Time	2011-1-12 10:26:11
Time Zone	CST-8:00:00

Available settings are explained as follows:

Item	Description
<b>General Information</b>	
<b>Factory Default</b>	<b>Reset</b> - Reset the factory default to the IP device.
<b>Device Reboot</b>	<b>Reboot</b> - Reboot the IP device immediately.
<b>Device Name</b>	Click  to modify the name of the device.
<b>MAC</b>	Displays the MAC address of the device.
<b>Admin IP</b>	Displays the IP address of the device.
<b>Manufacturer</b>	Displays the manufacturer of the device.
<b>Model</b>	Displays the model name of the device.
<b>Firmware</b>	Displays the firmware version used by the device.

<b>Location</b>	Displays the location of the device.
<b>Group</b>	Displays the name of the group.
<b>Current Time</b>	Displays the time set for the device.
<b>UTC Time</b>	Display the time and date information related to the selected device.
<b>Time Zone</b>	Displays the time zone based on the location of the device.
<b>Daylight Saving</b>	Displays the status (enabled/disabled) of the daylight saving function.
<b>Auto Device Check</b>	<p>Click the toggle to enable / disable this function.</p>  - means "Enable".  - means "Disable".
	<p><b>Failure Action</b> - Configure the power behavior for each LAN port.</p> <ul style="list-style-type: none"> <li>● <b>Power Cycle</b> - Once the device is offline, Vigorswitch will power off the device and then power on the device again.</li> <li>● <b>Power Off</b> - When the device is offline, power off the device immediately.</li> <li>● <b>Nothing</b> - When the device is offline, no action will be performed.</li> </ul> <p><b>Note:</b> When a PoE hub connecting to LAN port of VigorSwitch, the power behavior (on/off) to the PoE hub also will apply to all the devices connecting to the PoE hub.</p> <p><b>Mail Alert</b> - Click the toggle to enable / disable this function. When the device is offline, Vigor system will send an alert mail to notify the recipient.</p> <ul style="list-style-type: none"> <li>● <b>With Snapshot</b> - If enabled, the switch will try to get snapshot from the device per half hour. Before using this feature, set the group authentication information when adding group or configure Default Username/Password in the Topology page first.</li> </ul> <p>When the device is offline, no action will be performed.</p>

#### Access Information

<b>Mode</b>	<p>Change the connection mode for this device.</p> <p><b>Static</b> - When it is selected, you have to enter value for network setting manually for the IP device.</p> <ul style="list-style-type: none"> <li>● <b>IP Address</b> - Enter an IPv4 address for the IP device.</li> <li>● <b>Prefix Length</b> - Specify the subnet mask for the IP address.</li> <li>● <b>Gateway</b> - Enter the IPv4 address for the gateway.</li> <li>● <b>DNS Server1/2</b> - Enter the IP address for primary / secondary DNS server.</li> </ul> <p><b>DHCP</b> - When it is selected, the IP device will be assigned with the settings by the network's DHCP server automatically to access the Internet.</p> <ul style="list-style-type: none"> <li>● <b>Hostname</b> - Display the hostname of the DHCP server.</li> </ul>
<b>Zero Configuration</b>	<p>Click the toggle to enable / disable this function.</p> <p><b>Enable</b> - The network settings for the IP device will be configured automatically.</p> <p><b>Disable</b> - The network settings for the IP device must be configured manually.</p>

<b>HTTP Port</b>	Click the toggle to enable / disable this function. <b>Enable</b> - Click it to enable the HTTP port configuration and enter a port value if required. <b>Disable</b> - Disable the HTTP port configuration.
<b>HTTPS Port</b>	Click the toggle to enable / disable this function. <b>Enable</b> - Click it to enable the HTTPS port configuration and enter a port value if required. <b>Disable</b> - Disable the HTTPS port configuration.
<b>RTSP Port</b>	Click the toggle to enable / disable this function. <b>Enable</b> - Click it to enable the RTSP port configuration and enter a port value if required. <b>Disable</b> - Disable the RTSP port configuration.

## II-8 RADIUS/TACACS+

---

### II-8-1 RADIUS


This page allows the network administrator to add and configure multiple RADIUS servers.

The screenshot shows a web-based network management interface. On the left is a dark sidebar menu with various options like Dashboard, Configuration, General Setup, and RADIUS/TACACS+. The main area is titled 'Configuration / RADIUS/TACACS+' and has tabs for 'RADIUS' and 'TACACS+'. Under 'RADIUS', there is a table with columns: Server Address, Server Port, Priority, Retry, Timeout, and Usage. A button '+ Add Server' is at the top left of the table. A search bar and an 'Option' button are at the top right. The table displays the message 'No data available in table'.

Available settings are explained as follows:

Item	Description
<b>+Add Server</b>	Click to create a new server profile.
<b>Edit Default</b>	Click to modify the value(s) for Retry, Timeout and Key String. These values will be saved as default settings.  <p>The dialog box contains three input fields: 'Retry(1-10)' with value '3', 'Timeout(1-30)' with value '3', and 'Key String' with an empty field. At the bottom are 'Cancel' and 'Apply' buttons.</p>

To create a new profile, click the **+ Add Server** link to open the setting page.

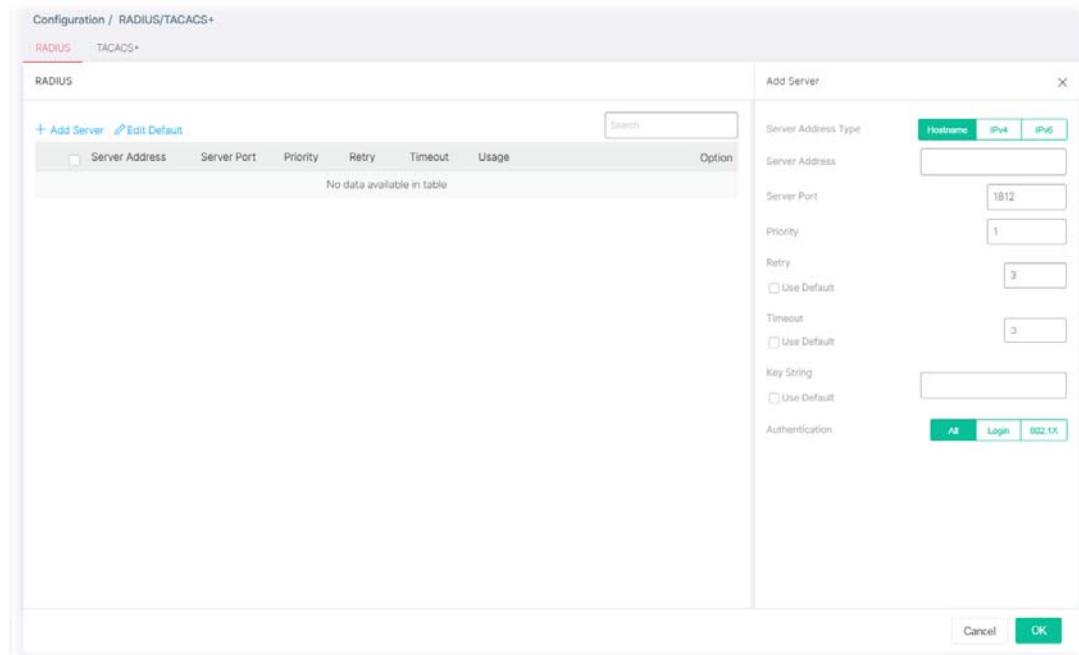

Available settings are explained as follows:

Item	Description
<b>Add Server</b>	
<b>Server Address Type</b>	Specify whether switch uses a hostname to resolve address by DNS to connect to server, or directly connect using IPv4 address. <input type="radio"/> Hostname <input type="radio"/> IPv4 <input type="radio"/> IPv6
<b>Server Address</b>	Enter the server's address corresponding with address type given.
<b>Server Port</b>	Enter the port number used by RADIUS server.
<b>Priority</b>	Specify the priority that switch uses this server. The higher number, the lower priority. Switch will start with server with lowest priority.
<b>Retry</b>	Set the retry time before this server being considered not-reachable. <b>Use Default</b> - Use the default value.
<b>Timeout</b>	Set the time (in seconds) before this server being considered lost connection. <b>Use Default</b> - Use the default value.
<b>Key String</b>	Enter the string used to encrypt and authenticate with RADIUS server. <b>Use Default</b> - Use the default setting.
<b>Authentication</b>	Specify whether you would like to use this server for switch login authentication or 802.1x access port authentication, or both. <input type="radio"/> All <input type="radio"/> Login <input type="radio"/> 802.1X
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## II-8-2 TACACS+

This page allows the network administrator to add and configure multiple TACACS+ server.

Available settings are explained as follows:

Item	Description
<a href="#">+Add Server</a>	Click to create a new server profile.
<a href="#">Edit Default</a>	Click to modify the value(s) for Timeout and Key String. These values will be saved as default settings.


+ Add Server    [Edit Default](#)

Timeout(1-30)

Key String

[Cancel](#) [Apply](#)

To create a new profile, click the **+ Add Server** link to open the setting page.

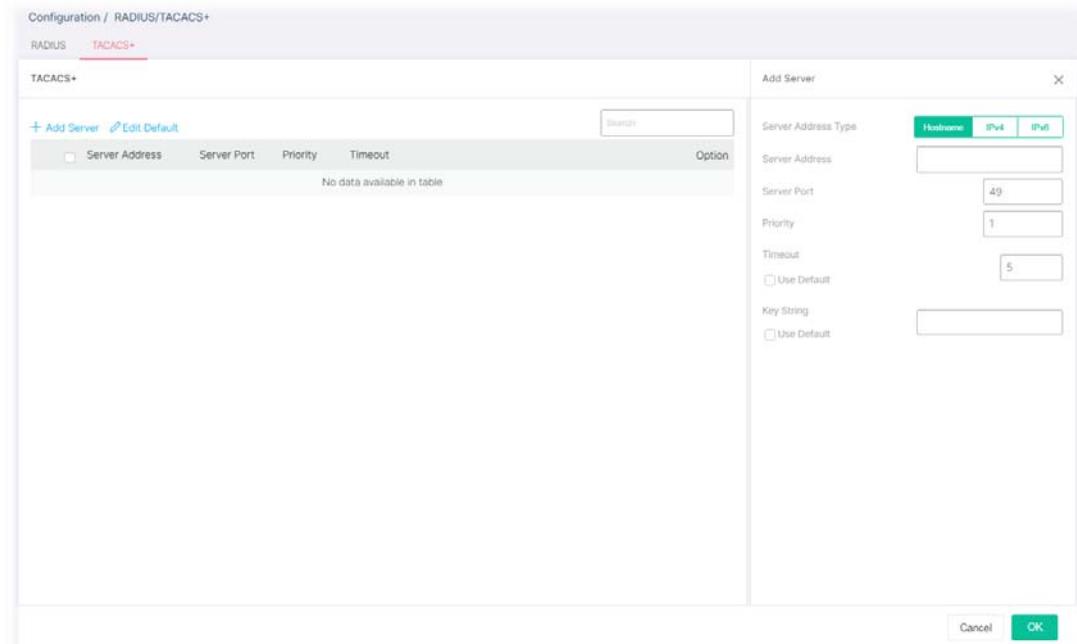

Item	Description
<b>Add Server</b>	
<b>Server Address Type</b>	Specify whether switch uses a hostname to resolve address by DNS to connect to server, or directly connect using IPv4 address. <ul style="list-style-type: none"> <li><input type="radio"/> Hostname</li> <li><input type="radio"/> IPv4</li> <li><input type="radio"/> IPv6</li> </ul>
<b>Server Address</b>	Enter the server's address corresponding with address type given.
<b>Server Port</b>	Enter the port number used by TACACS+ server.
<b>Priority</b>	Specify the priority that switch uses this server. The higher number, the lower priority. Switch will start with server with lowest priority.
<b>Timeout</b>	Set the time (in seconds) before this server being considered lost connection. <b>Use Default</b> - Use the default value.
<b>Key String</b>	Enter the string used to encrypt and authenticate with TACACS+ server. <b>Use Default</b> - Use the default setting.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


# Chapter III Security



# III-1 802.1x/MAC Authentication

## III-1-1 Authentication Settings

The authentication manager allows you to configure securely access from any host connected to physical ports. You may apply multiple ways of authentication to each port.

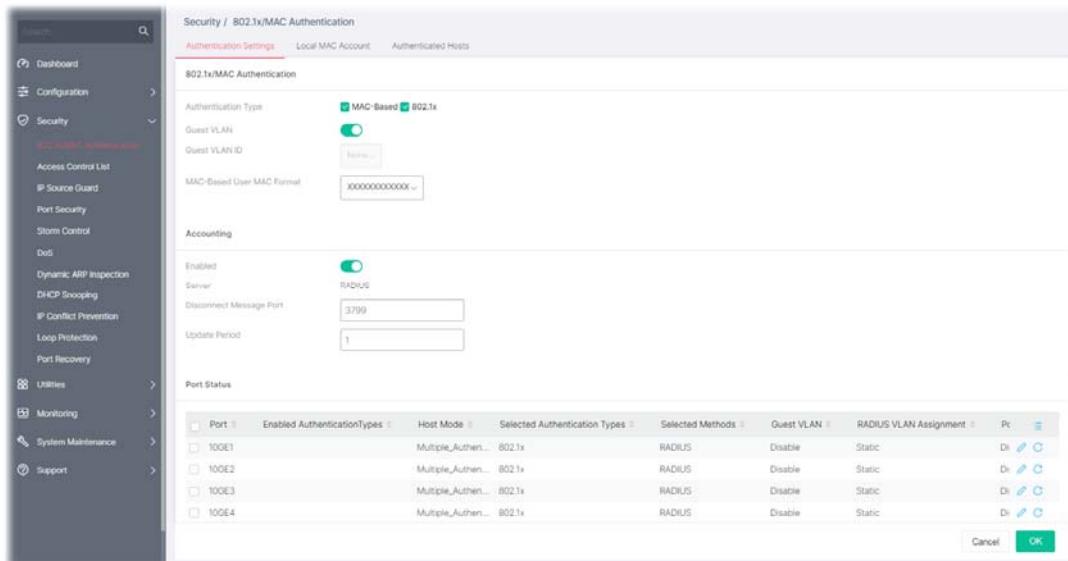


Available settings are explained as follows:

Item	Description
<b>802.1x/MAC Authentication</b>	
<b>Authentication Type</b>	Specify which type (802.1x, MAC-based) will be used for authentication. Choose to enable 802.1x or MAC-based authenticate method for host connecting to Ethernet port. You may configure which type to be used per port, but enabling any per port without enabling here will not be effective. <ul style="list-style-type: none"><li><input checked="" type="radio"/> MAC-Based</li><li><input type="radio"/> 802.1x</li></ul>
<b>Guest VLAN</b>	Click the toggle to enable/disable a Guest VLAN for those who have not successfully authenticated with any given methods.  - means "Enable". If enabled, specify a VLAN ID number.  - means "Disable". <b>Guest VLAN ID</b> - Choose one of the VLAN ID as a Guest VLAN.
<b>MAC-Based User MAC Format</b>	Specify how the MAC-based user ID should be expressed in EAP message between AAA server and switch.
<b>Accounting</b>	
<b>Enable</b>	Click the toggle to enable / disable this function. <b>Server</b> - Displays the type of the server.
<b>Port Status</b>	

<b>Port</b>	Displays the index number of the GE ports. Select physical port(s) for applying settings. Note that port authentication will not be effective if none of them were enabled.
<b>Enabled Authentication Types</b>	Displays the authentication type (802.1x and/or MAC-based) used by this port.
<b>Host Mode</b>	Displays the host mode used by this port.
<b>Selected Authentication Types</b>	Displays the authentication type (e.g., 802.1x) used by this port.
<b>Selected Methods</b>	Displays the authentication method (e.g., RADIUS) used by this port.
<b>Guest VLAN</b>	Displays the status (enable/disable) of guest VLAN function.
	Click it to modify the port setting.
	Clear current settings and return to factory default settings.

To modify settings for a port, click the  link to open the setting page.

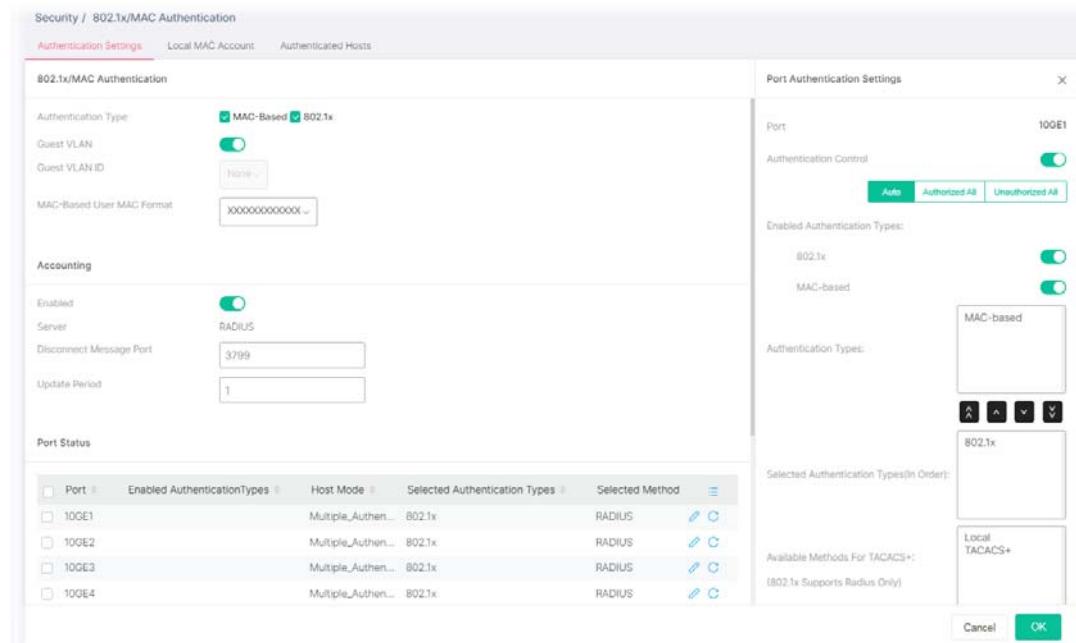

Available settings are explained as follows:

Item	Description
<b>Port Authentication Settings</b>	
<b>Port</b>	Displays the GE port number.
<b>Authentication Control</b>	Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable". If enabled, select <b>Auto</b> , <b>Authorized All</b> or <b>Unauthorized All</b> as the control mode.
<b>Enable Authentication Types</b>	Select 802.1x and/or MAC-based authenticate method for host connecting to this port.

	<ul style="list-style-type: none"> <li><input type="radio"/> 802.1x</li> <li><input type="radio"/> MAC-based</li> </ul>
<b>Authentication Types</b>	Displays available authentication types of AAA server (or local) you wish to have on this port.
<b>Selected Authentication Types (In Order)</b>	Specify the order of authentication type (e.g., 802.1x) you wish to have on this port.
<b>Available Methods For TACACS+</b>	Display available methods of AAA server (or local) you wish to have on this port.
<b>Selected Methods (In Order)</b>	Specify the order of authentication methods (e.g., RADIUS) you wish to have on this port.
<b>Host Mode</b>	<p><b>Multi-Auth</b> - Each host are authenticated individually.</p> <p><b>Multi Hosts</b> - Authentication is done on port basis, only one authenticated host is required; other hosts connected to this port can access freely as authenticated host.</p> <p><b>Single Host</b> - Only one host can be authenticated, and access the port.</p>
<b>Advanced Mode</b>	
<b>Guest VLAN</b>	Click the toggle to enable / disable this function. Select <b>Enable</b> to enable Guest VLAN on this port for those didn't authenticated successfully.
<b>RADIUS VLAN Assignment</b>	<p><b>Static</b> - Switch will use the VLAN assignment from the RADIUS server if it receives the information. If there is not VLAN information, it will keep the original VLAN of the host.</p> <p><b>Disabled</b> - Switch will ignore the VLAN assignment from the RADIUS server and keep the original VLAN of the host.</p> <p><b>Reject</b> - Switch will reject the host if it does not receive the VLAN information from the RADIUS server.</p>
<b>Max. Hosts</b>	If <b>Multi-Auth</b> mode is selected as Host Mode, the total number of hosts cannot exceed the maximum number of hosts configured here.
<b>Periodic Reauthentication</b>	<p>The hosts via the selected GE port will be re-authenticated periodically.</p> <p>Click the toggle to enable / disable this function. If enabled, specify the time setting.</p> <p><b>Periodic Reauthentication Period</b> - Enter a time period. When the time is up, the host shall return to initial state and prepare to pass authentication procedure again. Default is 3600 seconds.</p>
<b>Inactive Timeout</b>	When there is no packet coming from the authenticated host, the system will start the inactive timer. After inactive timeout, the host will be unauthorized and corresponding session will be deleted. In <b>Multi Hosts</b> mode, the packet is counted on the authorized host only and not all packets on the port.
<b>Quiet Period</b>	<p>When a GE port is disabled just because authentication fails several times, the host connected to that port will be blocked for a period of time configured in quiet period.</p> <p>Later, after the time period set in this field, the host will be allowed to perform authentication again.</p>
<b>EAP Resent Period</b>	Set the period for host to re-send EAP (Ethernet Automatic Protection)

	requests. Default value is 30 (seconds).
<b>Suplicant Timeout</b>	Set a period of time for the maximum number of EAP requests will be sent.  If a response from the host is not received by VigorSwitch after the defined period (suplicant timeout), the authentication process will be started again.
<b>Server Timeout</b>	Set a period of time for the server. The EAP requests shall be resent to the supplicant within the time; otherwise, the time setting will lapse and the requests won't be sent out.
<b>Max. EAP Request</b>	Set a period of time for the server. The EAP requests shall be resent to the supplicant within the time; otherwise, the time setting will lapse and the requests won't be sent out.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

### III-1-2 Local/MAC Account

This page allows the network administrator to create profiles by entering MAC address of the hosts to be authenticated.

Available settings are explained as follows:

Item	Description
<b>+Add Local MAC Account</b>	Click to create a new MAC account.
<b>MAC Address</b>	Displays the MAC address of the host.
<b>Policy</b>	Displays the policy (pass or block) of the host.
<b>VLAN</b>	Displays the VLAN ID assigned by the host.
<b>Reauthentication Period</b>	Displays the time this account is required to be authenticated again.
<b>Inactive Timeout</b>	Displays the time to log off this account.

To add a new profile, click the **+Add Local MAC Account** link to open the setting page.

Available settings are explained as follows:

Item	Description
<b>Local MAC Account</b>	
<b>MAC Address</b>	Enter the MAC address of the host.
<b>Policy</b>	<b>Pass</b> - Click it to forcefully authenticate the host specified above. <b>Block</b> - The host specified above will not be authenticated by VigorSwitch. If <b>Pass</b> is selected, advanced mode will be shown below.
<b>Advanced Mode</b>	
<b>Assign VLAN</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable". Specify which VLAN will be assigned by the host of this account.
<b>Reauthentication Period</b>	Click the toggle to enable / disable this function. Set the time this account is required to be authenticated again after authentication has taken place.
<b>Inactive Timeout</b>	Click the toggle to enable / disable this function. Set a time. When the account is still inactive after the set time, it will be logged out by the system.

After finishing this web page configuration, please click **OK** to save the settings.

### III-1-3 Authentication Hosts

This page displays information related to the host authenticated by VigorSwitch.

The screenshot shows a network management interface with a dark sidebar on the left and a light-colored main content area. The sidebar contains a search bar at the top, followed by a tree-like navigation menu:

- Dashboard
- Configuration
  - 802.1x/MAC Authentication
  - Access Control List
  - IP Source Guard
  - Port Security
  - Storm Control
  - DoS
  - Dynamic ARP Inspection
  - DHCP Snooping
  - IP Conflict Prevention
  - Loop Protection
  - Port Recovery
- Utilities
- Monitoring
- System Maintenance
- Support

The main content area has a header "Security / 802.1x/MAC Authentication" with tabs: "Authentication Settings", "Local MAC Account", and "Authenticated Hosts" (which is underlined). Below the tabs is a table titled "Authenticated Hosts". The table has columns: Session ID, Port, MAC Address, Current Type, Status, Operational VLAN, Operational Ses., Operational Inac., Operational Quie., and Airt. A message "No data available in table" is displayed at the bottom of the table.

## III-2 Access Control List


---

An Access Control List (ACL) is a sequential list of permit or deny conditions that apply to IP addresses, MAC addresses, or other more specific criteria. This switch tests ingress packets against the conditions in an ACL one by one. A packet will be accepted as soon as it matches a permit rule, or dropped as soon as it matches a deny rule. If no rules match, the frame is accepted.

Users can create the Access Control List (ACL) based on Layer 2 filtering, the MAC layer, Layer 2 to Layer 4 filtering, the IPv4, and Layer 2 to Layer 4 filtering, the IPv6. The ACL is composed by many Access Control Element (ACE) rules. You can create a new ACL here; then add multiple ACEs.


You may provide filtering/matching criteria for one or more packet characteristics (such as Source/Destination MAC, VLAN, 802.1p) for this ACE to identify the packet.

### III-2-1 Access Control List

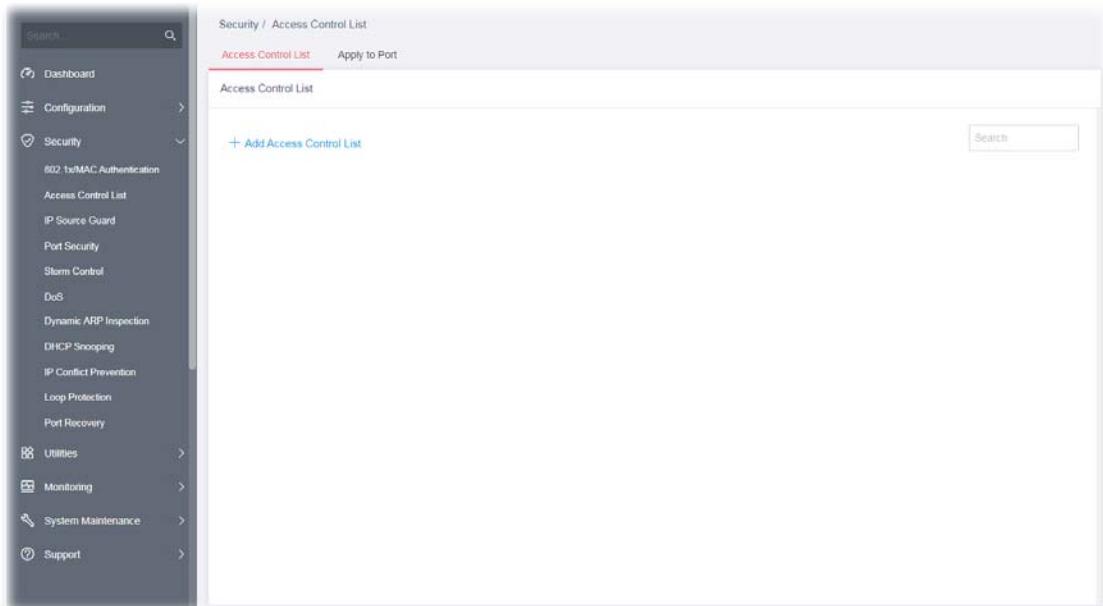

#### List Type - MAC

To create a new access control list, click the **+Add Access Control List** link to open the setting page.

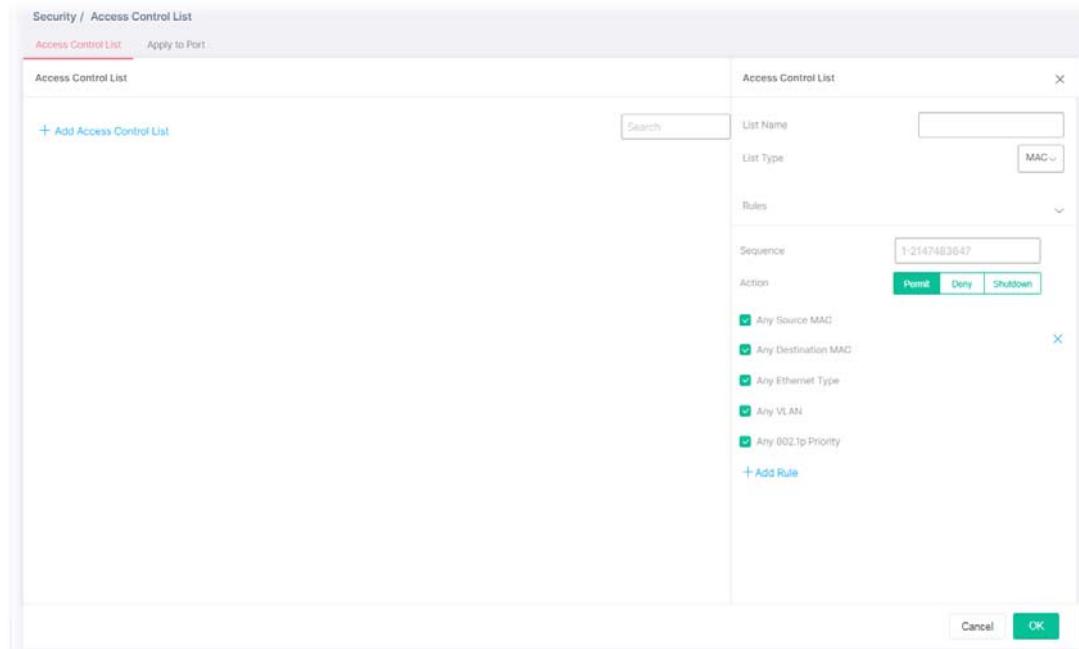

Available settings are explained as follows:

Item	Description
<b>Access Control List</b>	
<b>List Name</b>	Enter a name for creating a new ACL profile.
<b>List Type</b>	Specify the filtering type (MAC/IPv4/IPv6). Select MAC.
<b>Rules</b>	
<b>Sequence</b>	Assign a sequence number to this ACE. The sequence is used to identify which one of ACEs in an ACL is firstly used to match ingress packets. The switch port bound with an ACL use the contained ACE rules, start with the one with lower sequence number to match the packet first.
<b>Action</b>	Select the action applied to the packet matched this ACE. Permit or deny the packets into switch core, or shutdown the port for stopping further transmission. <ul style="list-style-type: none"> <li><input type="radio"/> <b>Permit</b></li> <li><input type="radio"/> <b>Deny</b></li> <li><input type="radio"/> <b>Shutdown</b></li> </ul>
<b>Any Source MAC</b>	If disabled, please enter IP address with the subnet mask.  <input type="text"/> <input type="checkbox"/> Any Source MAC / <input type="text"/> <span style="color: blue;">X</span>
<b>Any Destination MAC</b>	If disabled, please enter IP address with the subnet mask.
<b>Any Ethernet Type</b>	Specify Ethernet type for filtering. Select <b>Any Ethernet</b> . Or, enter the value with the format of "0x600 ~ 0xFFFF".

	<input type="checkbox"/> Any Ethernet <input type="text"/> Type (0x600-0xFFFF)
<b>Any VLAN</b>	Specify VLAN profile for filtering. Select <b>Any VLAN</b> . Or, enter a VLAN number. The packets coming from the VLAN specified here will be filtered by Vigor device. <input type="checkbox"/> Any VLAN (1-4094)
<b>Any 802.1p Priority</b>	Specify the 802.1p priority value for filtering. Select <b>Any 802.1p Priority</b> . Or, enter a number from 0 to 7. <input type="text"/>
<b>+Add Rule</b>	Click it to create more ACE rule(s) for this ACL. Each ACL profile can be added with 8 ACE rules.

After finishing this web page configuration, please click **OK** to save the settings.

The screenshot shows the 'Access Control List' configuration page. At the top, there are tabs for 'Access Control List' and 'Apply to Port'. Below the tabs, there's a search bar and filters for 'MAC', 'IPv4', and 'IPv6'. A table lists the ACLs, with one entry visible: 'ACL\_123' (Type: MAC, Applied Port: None). There are buttons for '+ Add Access Control List', '+ Add Rule', and 'Delete List'.


The screenshot shows the 'Access Control List' configuration page with two rules listed under 'ACL\_123'. The rules are:

Sequence	Action	Source MAC/Mask	Destination MAC/M...	Ethernet Type	VLAN	802.1p Priority
1 30000	Deny	Any/Any	Any/Any	Any	Any	Any/Any
2 200000	Permit	Any/Any	Any/Any	Any	Any	Any/Any

There are buttons for '+ Add Access Control List', '+ Add Rule', and 'Delete List'.

## List Type - IPv4


To create a new access control list, click the **+Add Access Control List** link to open the setting page.

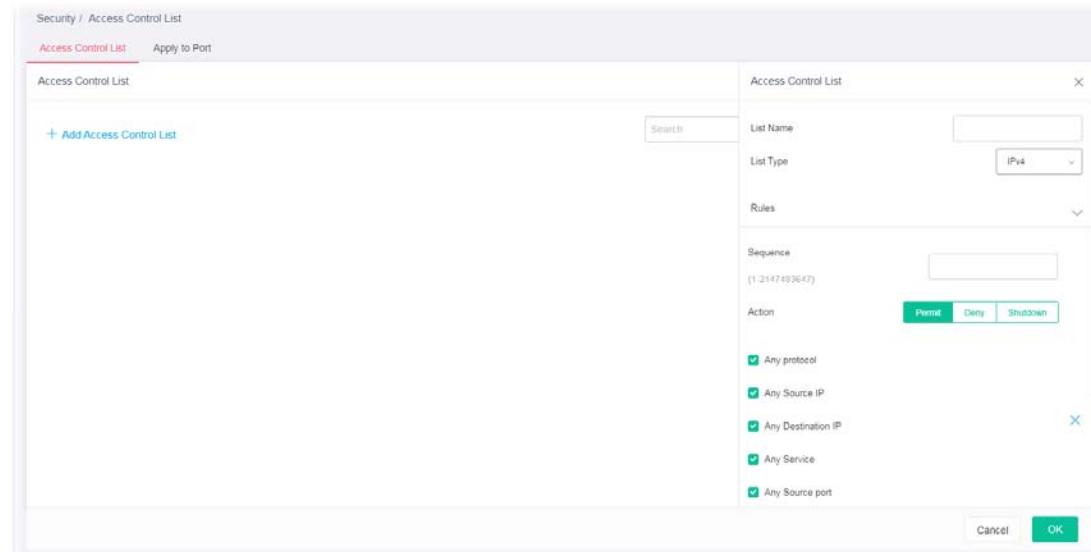

Available settings are explained as follows:

Item	Description
<b>Access Control List</b>	
<b>List Name</b>	Enter a name for creating a new ACL profile.
<b>List Type</b>	Specify the filtering type (IPv4).
<b>Rules</b>	
<b>Sequence</b>	Assign a sequence number to this ACE. The sequence is used to identify which one of ACEs in an ACL is firstly used to match ingress packets. The switch port bound with an ACL use the contained ACE rules, start with the one with lower sequence number to match the packet first.
<b>Action</b>	Select the action applied to the packet matched this ACE. Permit or deny the packets into switch core, or shutdown the port for stopping further transmission. <ul style="list-style-type: none"> <li><input type="radio"/> <b>Permit</b></li> <li><input type="radio"/> <b>Deny</b></li> <li><input type="radio"/> <b>Shutdown</b></li> </ul>
<b>Any Protocol</b>	Specify the protocol for filtering. <b>Any Protocol</b> – Default setting. All packets will be filtered. <b>Self-Define</b> – Enter a number (0 – 255) to specify a protocol. For example, 1 means “Internet Control Message”; 6 means “Transmission Control”. <b>ICMP, IP in IP,...</b> – Choose one of the protocols (e.g., ICMP, IP in IP, TCP, EGP, IGP...) from the drop down list. Packets passing through the selected protocol will be filtered.

	<p>Sequence (1-2147483647)</p> <p>Action</p> <p><input type="checkbox"/> Any protocol (0-255)</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <p><b>Self-Define</b></p> <p>ICMP</p> <p>IP in IP</p> <p>TCP</p> <p>Self-Define</p> </div>
<b>Any Source IP</b>	<p>Specify the source IPv4 address for filtering.</p> <p><b>Any Source IP</b> – Default setting. All packets will be filtered.</p> <p>Select Any Source IP. Or, enter the IP address to filter the packets coming from that address.</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <input type="text"/> </div> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 5px;"> <p><input type="checkbox"/> Any Source IP</p> <p>/</p> <p>0-32</p> </div>
<b>Any Destination IP</b>	<p>Specify the destination IPv4 address for filtering.</p> <p><b>Any Destination IP</b> – Default setting. All packets will be filtered.</p> <p>Select Any Destination IP. Or, enter the IP address to filter the packets coming from that address.</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> <input type="text"/> </div> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 5px;"> <p><input type="checkbox"/> Any Destination IP</p> <p>/</p> <p>0-32</p> </div>
<b>Any Service</b>	<p><b>Any Service</b> – Default setting. All packets will be filtered.</p> <p><b>DSVP</b> – All IP traffic is mapped to queues based on the DSVP field in the IP header. If traffic is not IP traffic, it is mapped to the lowest priority queue.</p> <p><b>IP Precedence</b> - All IP traffic is mapped to queues based on the IP Precedence field in the IP header. If traffic is not IP traffic, it is mapped to the lowest priority queue.</p> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 10px;"> <p><input type="checkbox"/> Any Service (0-63)</p> <p><b>DSVP</b></p> <p><b>IP Precedence</b></p> </div> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> </div>
<b>Any Source Port</b>	<p>Specify the source port number for filtering the packets.</p> <p><b>Any Source Port</b> – Default setting. All packets will be filtered.</p> <p>Select Any Source Port. Or, enter the port number.</p> <p><b>Single</b> – Only the packets passing through the number defined here will be filtered.</p> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 10px;"> <p><input type="checkbox"/> Any Source port (0-65535)</p> <p><b>Single</b></p> <p><b>Range</b></p> </div> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 10px;"> </div> <p><b>Range</b> – Only the packets passing through the port range defined</p>

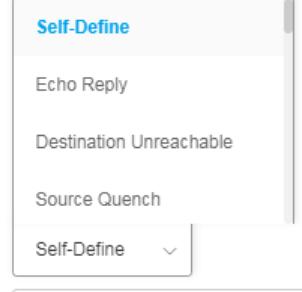	<p>here will be filtered.</p> <p><input type="checkbox"/> Any Source port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span> 0 - 65535 - 0 - 65535</p>
<b>Any Destination Port</b>	<p>Specify the destination port number for filtering the packets.</p> <p><b>Any Destination Port</b> – Default setting. All packets will be filtered.</p> <p>Select Any Destination Port. Or, enter the port number.</p> <p><b>Single</b> – Only the packets passing through the number defined here will be filtered.</p> <p><input type="checkbox"/> Any Destination port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span></p>
	<p><b>Range</b> – Only the packets passing through the port range defined here will be filtered.</p> <p><input type="checkbox"/> Any Destination port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span> 0 - 65535 - 0 - 65535</p>
<b>Any ICMP Type</b>	<p><b>Any ICMP Type</b> – Default setting. All packets will be filtered.</p> <p><b>Echo Reply, Destination Unreachable....</b> – Choose one of the type (e.g., Destination Unreachable, Echo Reply, MLD Query....) from the drop down list.</p> <p><b>Self-Define</b> – Specify a type number (0 – 255) for ICMP code. For example, 0 means “Echo Reply”; 254 means “RFC3692-style Experiment 2”.</p> <p><input checked="" type="checkbox"/> Any Service <input checked="" type="checkbox"/> Any Source port <input checked="" type="checkbox"/> Any Destination port <input type="checkbox"/> Any ICMP Type (0-255)</p> 
<b>Any ICMP Code</b>	<p>Each ICMP type can be defined with different codes. For example, if you define ICMP Type as “3”, then the available codes for Type 3 will be 0-15.</p> <p><b>Any ICMP Code</b> – Default setting. All packets will be filtered.</p> <p>Select Any ICMP Code. Or, enter 0 to 255 based on the ICMP type specified.</p> <p><input type="checkbox"/> Any ICMP Code (0-255)</p>
<b>+Add Rule</b>	<p>Click it to create more ACE rule(s).</p> <p>Each ACL profile can be added with 8 ACE rules.</p>


## List Type - IPv6


To create a new access control list, click the **+Add Access Control List** link to open the setting page.

The screenshot shows the 'Access Control List' configuration dialog. It includes fields for 'List Name' (empty), 'List Type' (set to 'IPv6'), 'Rules' (empty), 'Sequence' (set to 1-2147403647), and an 'Action' section with 'Permit' selected. There are also checkboxes for 'Any protocol', 'Any Source IP', 'Any Destination IP', 'Any Service', and 'Any Source port'. At the bottom are 'Cancel' and 'OK' buttons.

Available settings are explained as follows:

Item	Description
<b>Access Control List</b>	
<b>List Name</b>	Enter a name for creating a new ACL profile.
<b>List Type</b>	Specify the filtering type (IPv6).
<b>Rules</b>	
<b>Sequence</b>	Assign a sequence number to this ACE. The sequence is used to identify which one of ACEs in an ACL is firstly used to match ingress packets. The switch port bound with an ACL use the contained ACE rules, start with the one with lower sequence number to match the packet first.
<b>Action</b>	Select the action applied to the packet matched this ACE. Permit or deny the packets into switch core, or shutdown the port for stopping further transmission. <ul style="list-style-type: none"> <li><input type="radio"/> <b>Permit</b></li> <li><input type="radio"/> <b>Deny</b></li> <li><input type="radio"/> <b>Shutdown</b></li> </ul>
<b>Any Protocol</b>	
	Specify the protocol for filtering. <b>Any Protocol</b> – Default setting. All packets will be filtered. <b>Self-Define</b> – Enter a number (0 – 255) to specify a protocol. For example, 1 means “Internet Control Message”; 6 means “Transmission Control”. <b>ICMP, IP in IP,...</b> – Choose one of the protocol (e.g., ICMP, TCP, EGP...) from the drop down list. Packets passing through the selected protocol will be filtered.

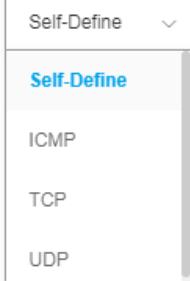	<p><input type="checkbox"/> Any protocol (0-255)</p> <p><input checked="" type="checkbox"/> Any Source IP</p> <p><input checked="" type="checkbox"/> Any Destination IP</p> 
<b>Any Source IP</b>	<p>Specify the source IPv6 address for filtering.</p> <p><b>Any Source IP</b> – Default setting. All packets will be filtered.</p> <p>Select Any Source IP. Or, enter the IP address to filter the packets coming from that address.</p> <div style="display: flex; align-items: center;"> <input style="width: 200px; margin-right: 10px;" type="text"/> <span>/</span> <input style="width: 200px; margin-left: 10px;" type="text"/> </div>
<b>Any Destination IP</b>	<p>Specify the destination IPv6 address for filtering.</p> <p><b>Any Destination IP</b> – Default setting. All packets will be filtered.</p> <p>Select Any Destination IP. Or, enter the IP address to filter the packets coming from that address.</p> <div style="display: flex; align-items: center;"> <input style="width: 200px; margin-right: 10px;" type="text"/> <span>/</span> <input style="width: 200px; margin-left: 10px;" type="text"/> </div>
<b>Any Service</b>	<p><b>Any Service</b> – Default setting. All packets will be filtered.</p> <p><b>DSCP</b> – All IP traffic is mapped to queues based on the DSCP field in the IP header. If traffic is not IP traffic, it is mapped to the lowest priority queue.</p> <p><b>IP Precedence</b> - All IP traffic is mapped to queues based on the IP Precedence field in the IP header. If traffic is not IP traffic, it is mapped to the lowest priority queue.</p> <div style="display: flex; justify-content: space-between;"> <input type="checkbox"/> Any Service (0-63)         <div style="border: 1px solid #ccc; padding: 2px;"> <input style="border: none; background-color: #00aaff; color: white; padding: 2px 10px; margin-right: 5px;" type="button" value="DSCP"/> <input style="border: none; background-color: #00aaff; color: white; padding: 2px 10px;" type="button" value="IP Precedence"/> </div> </div>
<b>Any Source Port</b>	<p>Specify the source port number for filtering the packets.</p> <p><b>Any Source Port</b> – Default setting. All packets will be filtered.</p> <p>Select Any Source Port. Or, enter the port number.</p> <p><b>Single</b> – Only the packets passing through the number defined here will be filtered.</p> <div style="display: flex; justify-content: space-between;"> <input type="checkbox"/> Any Source port (0-65535)         <div style="border: 1px solid #ccc; padding: 2px;"> <input style="border: none; background-color: #00aaff; color: white; padding: 2px 10px; margin-right: 5px;" type="button" value="Single"/> <input style="border: none; background-color: #00aaff; color: white; padding: 2px 10px;" type="button" value="Range"/> </div> </div> <p><b>Range</b> – Only the packets passing through the port range defined</p>

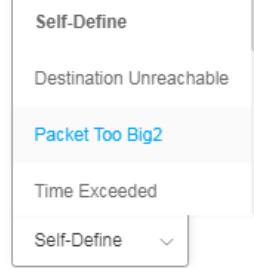	<p>here will be filtered.</p> <p><input type="checkbox"/> Any Source port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span> 0 - 65535 - 0 - 65535</p>
<b>Any Destination Port</b>	<p>Specify the destination port number for filtering the packets.</p> <p><b>Any Destination Port</b> – Default setting. All packets will be filtered.</p> <p>Select Any Destination Port. Or, enter the port number.</p> <p><b>Single</b> – Only the packets passing through the number defined here will be filtered.</p> <p><input type="checkbox"/> Any Destination port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span></p>
	<p><b>Range</b> – Only the packets passing through the port range defined here will be filtered.</p> <p><input type="checkbox"/> Any Destination port (0-65535) <span style="border: 1px solid #ccc; padding: 2px;">Single Range</span> 0 - 65535 - 0 - 65535</p>
<b>Any ICMP Type</b>	<p><b>Any ICMP Type</b> – Default setting. All packets will be filtered.</p> <p><b>Echo Reply, Destination Unreachable....</b> – Choose one of the type (e.g., Destination Unreachable, Echo Reply, MLD Query....) from the drop down list.</p> <p><b>Self-Define</b> – Specify a type number (0 – 255) for ICMP code. For example, 0 means “Echo Reply”; 254 means “RFC3692-style Experiment 2”.</p> <p><input checked="" type="checkbox"/> Any Service <input checked="" type="checkbox"/> Any Source port <input checked="" type="checkbox"/> Any Destination port <input type="checkbox"/> Any ICMP Type (0-255)</p> 
<b>Any ICMP Code</b>	<p>Each ICMP type can be defined with different codes. For example, if you define ICMP Type as “3”, then the available codes for Type 3 will be 0-15.</p> <p><b>Any ICMP Code</b> – Default setting. All packets will be filtered.</p> <p>Select Any ICMP Code. Or, enter 0 to 255 based on the ICMP type specified.</p> <p><input type="checkbox"/> Any ICMP Code (0-255)</p>
<b>+Add Rule</b>	<p>Click it to create more ACE rule(s).</p> <p>Each ACL profile can be added with 8 ACE rules.</p>

## III-1-2 Apply to Port

It allows you to bind Access Control Lists created in previous section to an interface (physical port or aggregation).

A physical port can only be bound with one of the **MAC, IPv4, or IPv6** ACLs, not all.

Port	MAC Access Control List	IPv4 Access Control List	IPv6 Access Control List	Option
10GE1	None	None	None	
10GE2	None	None	None	
10GE3	None	None	None	
10GE4	None	None	None	
10GE5	None	None	None	
10GE6	None	None	None	
10GE7	None	None	None	
10GE8	None	None	None	
10GE9	None	None	None	
10GE10	None	None	None	
10GE11	None	None	None	
10GE12	None	None	None	

Available settings are explained as follows:

Item	Description
<b>Port</b>	Select the port profiles (10GE1 to 10GE12) for binding ACL.
<b>MAC Access Control List</b>	Displays the ACL (MAC) to be bound on this interface (port), so the switch may filter packets by using it.
<b>IPv4 Access Control List</b>	Displays the ACL (IPv4) to be bound on this interface (port), so the switch may filter packets by using it.
<b>IPv6 Access Control List</b>	Displays the ACL (IPv6) to be bound on this interface (port), so the switch may filter packets by using it.
<b>Option</b>	- Click it to modify the port setting. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

Port	MAC Access Control List	IPv4 Access Control List	IPv6 Access Control List	Option
10GE1	None	None	None	
10GE2	None	None	None	

Available settings are explained as follows:

Item	Description
<b>MAC Access Control List</b>	Select an ACL (MAC) to be bound on this interface (port).
<b>IPv4 Access Control List</b>	Select an ACL (IPv4) to be bound on this interface (port).
<b>IPv6 Access Control List</b>	Select an ACL (IPv6) to be bound on this interface (port).

## III-3 IP Source Guard

By using the source IP address filtering function, IP source guard can prevent a malicious host from feigning a legal host with its IP address and performing malicious attack.


IP source guard is a port-based feature. Therefore, it is necessary to configure detailed settings for each GE/LAG port interface separately.

Port	Enabled	Source Verification	Max. Entry	Current Entry	Option
10GE1	<input type="checkbox"/>	IP	Unlimited	0	
10GE2	<input type="checkbox"/>	IP	Unlimited	0	
10GE3	<input type="checkbox"/>	IP	Unlimited	0	
10GE4	<input type="checkbox"/>	IP	Unlimited	0	
10GE5	<input type="checkbox"/>	IP	Unlimited	0	
10GE6	<input type="checkbox"/>	IP	Unlimited	0	
10GE7	<input type="checkbox"/>	IP	Unlimited	0	
10GE8	<input type="checkbox"/>	IP	Unlimited	0	
10GE9	<input type="checkbox"/>	IP	Unlimited	0	
10GE10	<input type="checkbox"/>	IP	Unlimited	0	
10GE11	<input type="checkbox"/>	IP	Unlimited	0	
10GE12	<input type="checkbox"/>	IP	Unlimited	0	
LAG1	<input type="checkbox"/>	IP	Unlimited	0	
LAG2	<input type="checkbox"/>	IP	Unlimited	0	
LAG3	<input type="checkbox"/>	IP	Unlimited	0	
LAG4	<input type="checkbox"/>	IP	Unlimited	0	
LAG5	<input type="checkbox"/>	IP	Unlimited	0	
LAG6	<input type="checkbox"/>	IP	Unlimited	0	
LAG7	<input type="checkbox"/>	IP	Unlimited	0	
LAG8	<input type="checkbox"/>	IP	Unlimited	0	

Available parameters are explained as follows:

Item	Description
<b>Port</b>	Displays the port profile (10GE1 to 10GE12, LAG1 to LAG8). Check the box to the left side for applying the IP source guard function.
<b>Enabled</b>	Click the toggle to enable / disable this profile. - means "Enable". - means "Disable".
<b>Source Verification</b>	Displays the type of source IP for the packet coming from.
<b>Max. Entry</b>	Displays the total number (0~50) of accessible entries allowed for this port.
<b>Current Entry</b>	Displays the number of accessible entries of this port.
<b>Option</b>	- Click it to modify the IP Source Guard setting of the selected port. - Clear current settings and return to factory default settings.

To modify settings for a port, click the link to open the setting page.

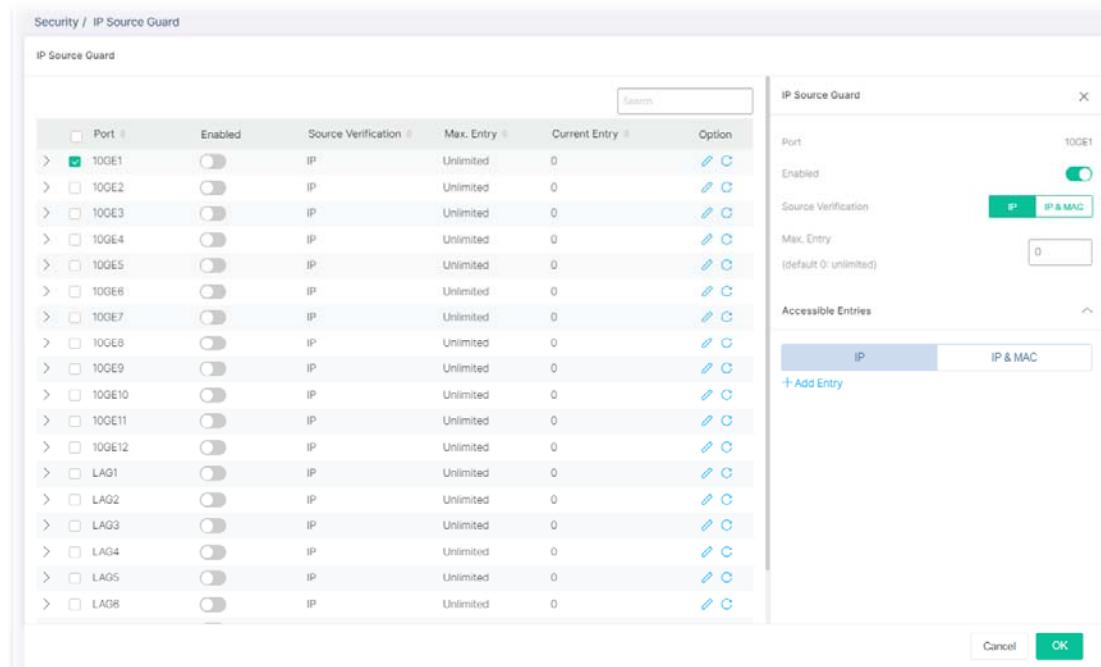

Available settings are explained as follows:

Item	Description
<b>IP Source Guard</b>	
<b>Port</b>	Displays the port profile (10GE1 to 10GE12, LAG1 to LAG8).
<b>Enabled</b>	Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>Source Verification</b>	Specify the type of source IP for the packet coming from. <b>IP</b> - Only the packet with specified IP address will be verified. <b>IP &amp; MAC</b> - Only the packet with specified IP address and MAC address will be verified.
<b>Max. Entry</b>	Define the total number (0~50) of accessible entries allowed for this port. The default is 0 (no limit).
<b>Accessible Entries</b>	Define the entry for applying the IP source guard function. <b>IP</b> - Select this type to enter an IPv4 address and set a VLAN ID. <b>IP &amp; MAC</b> - Select this type to enter an IP address, MAC address and IPv4 address. <b>+Add Entry</b> - Click to display blank entry boxes for configuring a new IP address, MAC address, and VLAN ID.

After finishing this web page configuration, please click **OK** to save the settings.

## III-4 Port Security

This page allows the network administrator to configure security settings for each port interface (GE port /LAG group). When port security is enabled for each interface, related action will be performed once detecting that the number of MAC address exceeds the limit.


The screenshot shows the 'Port Security' configuration page. On the left is a navigation sidebar with options like Dashboard, Configuration, Security (selected), IP Source Guard, Port Security (selected), and Utilities. The main area is titled 'Security / Port Security' and contains a table with columns: Port, Enabled, Max. Allowed MAC Address, Action, and Option. The table lists 24 ports (10GE1 to 10GE12, LAQ1 to LAQ8) all set to 'Enabled' with a maximum of 1 allowed MAC address. The 'Action' column shows 'Discard' for all ports, and the 'Option' column has edit icons. A green toggle switch at the top is set to 'On'.

Port	Enabled	Max. Allowed MAC Address	Action	Option
10GE1	<input checked="" type="checkbox"/>	1	Discard	
10GE2	<input checked="" type="checkbox"/>	1	Discard	
10GE3	<input checked="" type="checkbox"/>	1	Discard	
10GE4	<input checked="" type="checkbox"/>	1	Discard	
10GE5	<input checked="" type="checkbox"/>	1	Discard	
10GE6	<input checked="" type="checkbox"/>	1	Discard	
10GE7	<input checked="" type="checkbox"/>	1	Discard	
10GE8	<input checked="" type="checkbox"/>	1	Discard	
10GE9	<input checked="" type="checkbox"/>	1	Discard	
10GE10	<input checked="" type="checkbox"/>	1	Discard	
10GE11	<input checked="" type="checkbox"/>	1	Discard	
10GE12	<input checked="" type="checkbox"/>	1	Discard	
LAQ1	<input checked="" type="checkbox"/>	1	Discard	
LAQ2	<input checked="" type="checkbox"/>	1	Discard	
LAQ3	<input checked="" type="checkbox"/>	1	Discard	
LAQ4	<input checked="" type="checkbox"/>	1	Discard	
LAQ5	<input checked="" type="checkbox"/>	1	Discard	
LAQ6	<input checked="" type="checkbox"/>	1	Discard	
LAQ7	<input checked="" type="checkbox"/>	1	Discard	
LAQ8	<input checked="" type="checkbox"/>	1	Discard	

Available settings are explained as follows:

Item	Description
<b>Port Security</b>	Click the toggle to enable / disable this function. After clicking, press <b>Apply</b> . - means "Enable". - means "Disable". Enable this function to configure the settings.
<b>Port</b>	Displays the index number of the GE/LAG port.
<b>Enabled</b>	Click the toggle to enable / disable this function. <b>Enabled</b> - The selected port applies the port security settings. <b>Disabled</b> - The selected port does not apply the port security settings.
<b>Max. Allowed MAC Address</b>	Displays the maximum number of MAC addresses that the port is allowed to learn.
<b>Action</b>	Displays the action performed by the selected port.
<b>Option</b>	- Click it to modify the port security setting of the selected port.

To modify settings for a port, click the  link to open the setting page.

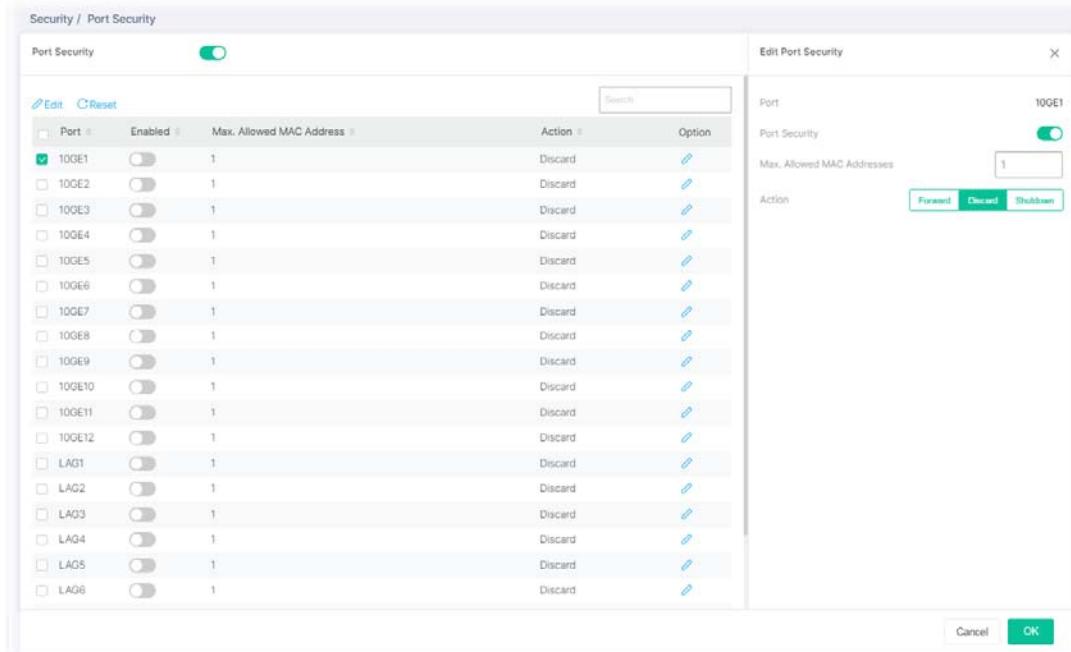

Port	Enabled	Max. Allowed MAC Address	Action	Option
10GE1	<input checked="" type="checkbox"/>	1	Discard	
10GE2	<input type="checkbox"/>	1	Discard	
10GE3	<input type="checkbox"/>	1	Discard	
10GE4	<input type="checkbox"/>	1	Discard	
10GE5	<input type="checkbox"/>	1	Discard	
10GE6	<input type="checkbox"/>	1	Discard	
10GE7	<input type="checkbox"/>	1	Discard	
10GE8	<input type="checkbox"/>	1	Discard	
10GE9	<input type="checkbox"/>	1	Discard	
10GE10	<input type="checkbox"/>	1	Discard	
10GE11	<input type="checkbox"/>	1	Discard	
10GE12	<input type="checkbox"/>	1	Discard	
LAG1	<input type="checkbox"/>	1	Discard	
LAG2	<input type="checkbox"/>	1	Discard	
LAG3	<input type="checkbox"/>	1	Discard	
LAG4	<input type="checkbox"/>	1	Discard	
LAG5	<input type="checkbox"/>	1	Discard	
LAG6	<input type="checkbox"/>	1	Discard	

Available settings are explained as follows:

Item	Description
<b>Edit Port Security</b>	
<b>Port</b>	Displays the index number of the GE/LAG port.
<b>Port Security</b>	Click the toggle to enable / disable this function. <b>Enabled</b> - The selected port applies the port security settings. <b>Disabled</b> - The selected port does not apply the port security settings.
<b>Max. Allowed MAC Address</b>	Enter the maximum number of MAC addresses that the port is allowed to learn.
<b>Action</b>	Select an action to perform when there is an unknown MAC address on the port. <b>Forward</b> - Forward a packet whose source MAC is unknown to the switch. <b>Discard</b> - Discard a packet whose source MAC is unknown to the switch. <b>Shutdown</b> - Shutdown this port when a packet with unknown source MAC is received.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## III-5 Storm Control

Storm Control helps to suppress possible broadcast, unknown multicast or unknown unicast storm by applying a rate limit on those packets.

This page allows a user to configure general settings for Storm Control. In addition, it is used to configure port settings for Storm Control. The configuration result for each port will be displayed on the table listed on the lower side of this web page.

Port	Enabled	Broadcast	Unknown Multicast	Unknown Unicast	Action	Option
10GE1	<input type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE2	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE3	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE4	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE5	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE6	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE7	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE8	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE9	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE10	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE11	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	
10GE12	<input checked="" type="checkbox"/>	Disabled	Disabled	Disabled	Drop	


Available settings are explained as follows:

Item	Description
<b>Storm Control Mode</b>	Select the mode of storm control. <b>Kbits/sec</b> - Storm control rate will be calculated by octet-based. <b>Packet/sec</b> - Storm control rate will be calculated by packet-based.
<b>Preamble &amp; Inter Frame Gap</b>	Select the rate calculation with/without preamble & IFG (20 bytes). <b>Excluded</b> - Exclude preamble & IFG (20 bytes) when count ingress storm control rate. <b>Included</b> - Include preamble & IFG (20 bytes) when count ingress storm control rate.
<b>Port</b>	Enable/disable the port (GE1 to GE28) profiles.
<b>Enabled</b>	Click the toggle to enable / disable this profile.  - means "Enable".  - means "Disable".
<b>Broadcast</b>	Displays the storm control rate limited for broadcast.
<b>Unknown Multicast</b>	Displays the storm control rate limited for unknown multicast.
<b>Unknown Unicast</b>	Displays the storm control rate limited for unknown unicast.
<b>Action</b>	Displays the action performed.

**Option**

 - Click to modify the storm control settings of the selected port.

To modify settings for a port, click the  link to open the setting page.

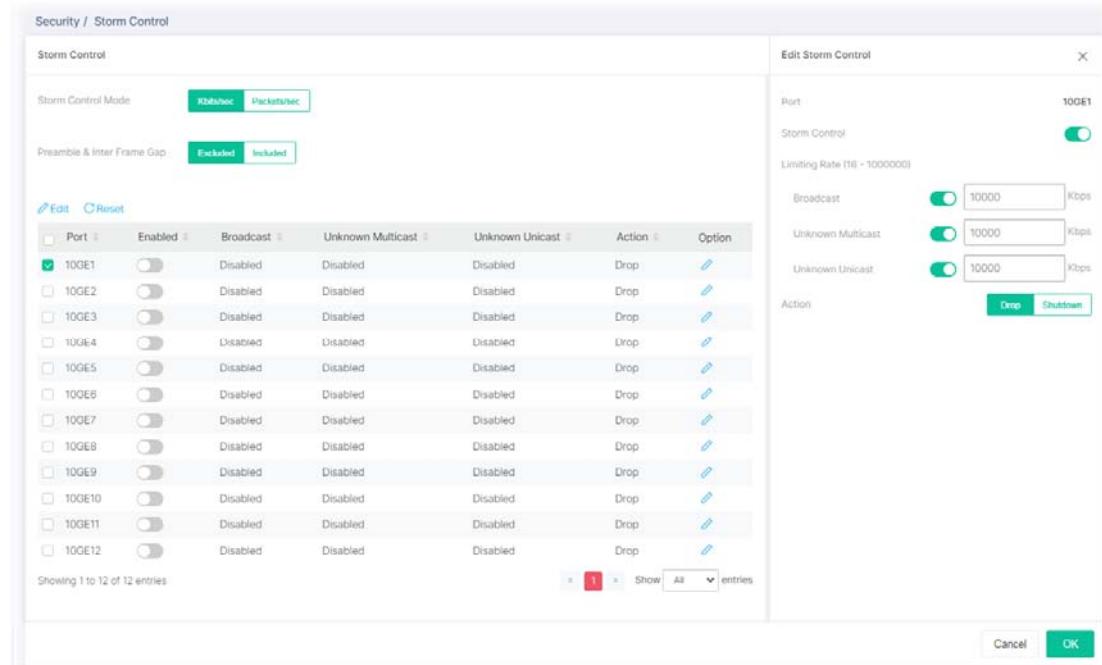

The screenshot shows the 'Security / Storm Control' interface. On the left, there's a table with columns: Port, Enabled, Broadcast, Unknown Multicast, Unknown Unicast, Action, and Option. The 'Broadcast' column has two tabs: 'Kbits/sec' (selected) and 'Packets/sec'. The 'Unknown Multicast' and 'Unknown Unicast' columns also have tabs: 'Excluded' (selected) and 'Included'. The 'Action' column has two buttons: 'Drop' and 'Shutdown'. The 'Option' column has a pencil icon. The table lists 12 ports from 10GE1 to 10GE12, all with 'Enabled' checked and 'Broadcast' set to 'Disabled'. The 'Edit Storm Control' modal window is open for port 10GE1. It shows the 'Port' as 10GE1, 'Storm Control' enabled, and 'Limiting Rate (16 ~ 1000000)' for Broadcast, Unknown Multicast, and Unknown Unicast at 10000 Kbps. It also shows 'Action' buttons for 'Drop' and 'Shutdown'.

Available settings are explained as follows:

Item	Description
<b>Edit Storm Control</b>	
<b>Port</b>	Display the port profile selected to be modified.
<b>Storm Control</b>	Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>Limiting Rate</b>	<b>Broadcast</b> - Specify the storm control rate for Broadcast packet. Value of storm control rate, Unit: Kbps (Kbits per-second). The range is from 16 to 1000000. <b>Unknown Multicast</b> - Specify the storm control rate for unknown multicast packet. Value of storm control rate, Unit: Kbps (Kbits per-second). The range is from 16 to 1000000. <b>Unknown Unicast</b> - Specify the storm control rate for unknown unicast packet. Value of storm control rate, Unit: Kbps (Kbits per-second). The range is from 16 to 1000000.
<b>Action</b>	Select the state of setting. <b>Drop</b> - Packets exceed storm control rate will be dropped. <b>Shutdown</b> - Port exceeds storm control rate will be shutdown.

After finishing this web page configuration, please click **OK** to save the settings.


## III-6 DoS

A Denial of Service (DoS) attack is a hacker attempt to make a device unavailable to its users. DoS attacks saturate the device with external communication requests, so that it cannot respond to legitimate traffic. These attacks usually lead to a device CPU overload.

The DoS protection feature is a set of predefined rules that protect the network from malicious attacks. The DoS Security Suite Setting enables activating the security suite.

### III-6-1 Properties

This page allows a user to configure DoS setting to enable/disable DoS function for global setting.

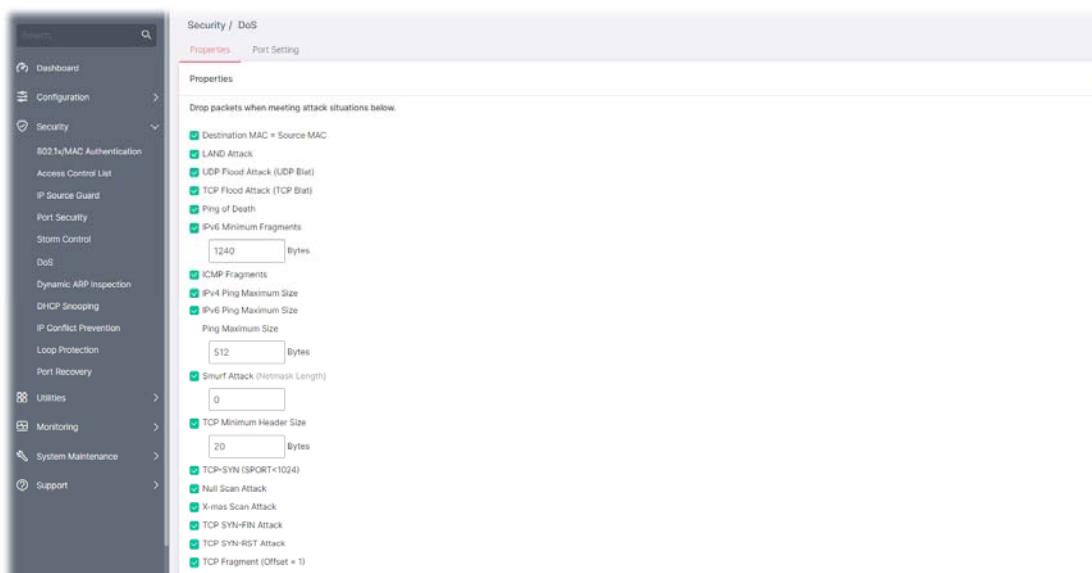

Available settings are explained as follows:

Item	Description
<b>Destination MAC=Source MAC</b>	Drops the packets if the destination MAC address is equal to the source MAC address. Check/uncheck the box to enable/disable the function.
<b>LAND Attack</b>	Drops the packets if the source IP address is equal to the destination IP address. Check/uncheck the box to enable/disable the function.
<b>UDP Flood Attack (UDP Blat)</b>	Drops the packets if the UDP source port equals to the UDP destination port. Check/uncheck the box to enable/disable the function.
<b>TCP Flood Attack (TCP Blat)</b>	Drops the packages if the TCP source port is equal to the TCP destination port. Check/uncheck the box to enable/disable the function.
<b>Ping to Death</b>	Avoids ping of death attack. Ping packets that length are larger than 65535 bytes. Check/uncheck the box to enable/disable the function.
<b>IPv6 Minimum Fragments</b>	Checks the minimum size of IPv6 fragments, and drop the packets smaller than the minimum size. The valid range is from 0 to 65535.

	bytes, and default value is 1240 bytes. Check/uncheck the box to enable/disable the function.
<b>ICMP Fragments</b>	Drops the fragmented ICMP packets. Check/uncheck the box to enable/disable the function.
<b>IPv4 Ping Maximum Size</b>	Determines the IPv4 PING packet with the length. Check/uncheck the box to enable/disable the function.
<b>IPv6 Ping Maximum Size</b>	Determines the IPv6 PING packet with the length. Check/uncheck the box to enable/disable the function. <b>Ping Maximum Size</b> - Determine the IPv4/IPv6 PING packet with the length. Specify the maximum size of the ICMPv4/ICMPv6 ping packets. The valid range is from 0 to 65535 bytes, and the default value is 512 bytes.
<b>Smurf Attack</b>	Avoids smurf attack. The length range of the netmask is from 0 to 323 bytes, and default length is 0 byte. Check/uncheck the box to enable/disable the function.
<b>TCP Minimum Header Size</b>	Checks the minimum TCP header and drops the TCP packets with the header smaller than the minimum size. The length range is from 0 to 31 bytes, and default length is 20 bytes. Check/uncheck the box to enable/disable the function.
<b>TCP-SYN (SPORT&lt;1024)</b>	Drops SYN packets with sport less than 1024. Check/uncheck the box to enable/disable the function.
<b>Null Scan Attack</b>	Drops the packets with NULL scan. Check/uncheck the box to enable/disable the function.
<b>X-mas Scan Attack</b>	Drops the packets if the sequence number is zero, and the FIN, URG and PSH bits are set. Check/uncheck the box to enable/disable the function.
<b>TCP SYN-FIN Attack</b>	Drops the packets with SYN and FIN bits set. Check/uncheck the box to enable/disable the function.
<b>TCP SYN-RST Attack</b>	Drops the packets with SYN and RST bits set. Check/uncheck the box to enable/disable the function.
<b>TCP Fragment (Offset=1)</b>	Drops the fragmented ICMP packets. Check/uncheck the box to enable/disable the function.

After finishing this web page configuration, please click **OK** to save the settings.

## III-6-2 Port Setting

This page allows a user to configure and display the state of DoS protection for interfaces. The configuration result for each port will be displayed on the table listed on the lower side of this web page.

The screenshot shows a web-based management interface for a network device. The left sidebar contains a navigation menu with options like Dashboard, Configuration, Security, DDoS, Utilities, Monitoring, System Maintenance, and Support. The main content area is titled "Security / DoS" and "Port Setting". It displays a table with 12 rows, each representing a port (10GE1 to 10GE12) and its status for DoS Protection. The table includes a header row with "Port" and "DoS Protection". The "DoS Protection" column contains toggle switches, all of which are currently in the "off" position (gray). A message at the bottom of the table says "Showing 1 to 12 of 12 entries". At the bottom right of the main area, there are buttons for "OK", "Cancel", and "Reset", along with a "Show" dropdown menu.

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the port profile (10GE1 to 10GE12). Check the box to the left side to select the port profile.
<b>DoS Protection</b>	Click the toggle to enable / disable the function of DoS Protection. - means "Enable". - means "Disable".

After finishing this web page configuration, please click **OK** to save the settings.

## III-7 Dynamic ARP Inspection

Dynamic ARP inspection (DAI) can prevent ARP spoofing attacks by validating ARP packet in a network. It can intercept, record, and discard ARP packets with invalid IP-to-MAC address bindings; and then protect the network against malicious attacks.

### III-7-1 Properties

This page allows a user to configure detailed settings of DAI for each port (GE/LAG).

The screenshot shows a network management interface for configuring Dynamic ARP Inspection (DAI) properties. The left sidebar contains navigation links for Dashboard, Configuration, Security (selected), 802.1x/MAC Authentication, Access Control List, IP Source Guard, Port Security, Storm Control, DoS, Dynamic ARP Inspection (selected), DHCP Snooping, IP Conflict Prevention, Loop Protection, Port Recovery, Utilities, Monitoring, System Maintenance, and Support. The main panel title is "Security / Dynamic ARP Inspection" with tabs for "Properties" (selected) and "Statistics". The "Properties" tab displays the "Enabled" status (which is checked) and a "VLAN ID" dropdown menu. Below these are "Port Settings" for ports 10GE1 through 10GE10. Each port row includes columns for Port, Trust, Source MAC Address, Destination MAC Address, IP Address, Allow IP 0.0.0.0, Rate Limit, and Option. The "Rate Limit" column for port 10GE10 is set to "Unlimited pps". At the bottom right are "Cancel" and "OK" buttons.

Available settings are explained as follows:

Item	Description
<b>Enable</b>	Click the toggle to enable / disable the function of Dynamic ARP Inspection. The green switch icon means "Enable". The grey switch icon means "Disable".
<b>VLAN ID</b>	Select VLAN profile(s) to apply the function of Dynamic ARP Inspection. Only the GE/LAG port within the selected VLAN will apply DAI function.

#### Port Settings


<b>Port</b>	Displays the port (10GE1 to 10GE12, LAG1 to LAG8) or ports for applying DAI function.
<b>Trust</b>	Click the toggle to enable/disable the function of DAI for this port.
<b>Source MAC Address</b>	Click the toggle to enable/disable the function of the source MAC address validation mechanism for this port.
<b>Destination MAC Address</b>	Click the toggle to enable/disable the function of the destination MAC address validation mechanism for this port.

<b>IP Address</b>	Click the toggle to enable/disable the function of IP address validation mechanism for this port.
<b>Allow IP 0.0.0.0</b>	Click the toggle to enable/disable the function. The IP address of "0.0.0.0" can be applied to this port if it is enabled.
<b>Rate Limit</b>	Enter a rate limitation value (0~50) for this port.
<b>Option</b>	 - Clear current settings and return to factory default settings.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

### III-7-2 Statistics

This page displays all statistics recorded by Dynamic ARP Inspection function.

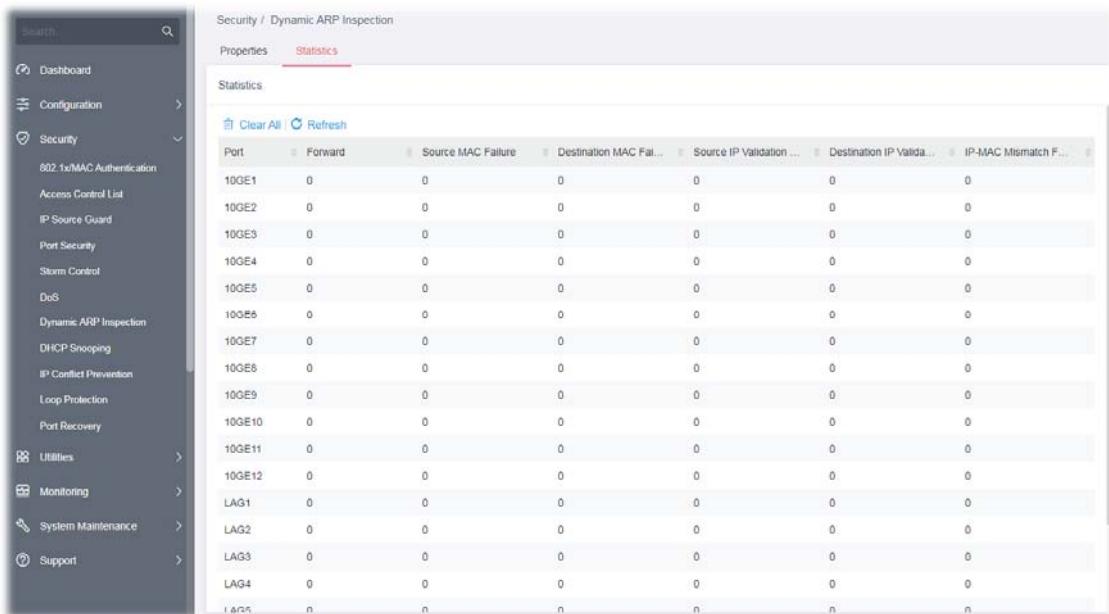

Port	Forward	Source MAC Failure	Destination MAC Failure	Source IP Validation Failure	Destination IP Validation Failure	IP-MAC Mismatch Failure
10GE1	0	0	0	0	0	0
10GE2	0	0	0	0	0	0
10GE3	0	0	0	0	0	0
10GE4	0	0	0	0	0	0
10GE5	0	0	0	0	0	0
10GE6	0	0	0	0	0	0
10GE7	0	0	0	0	0	0
10GE8	0	0	0	0	0	0
10GE9	0	0	0	0	0	0
10GE10	0	0	0	0	0	0
10GE11	0	0	0	0	0	0
10GE12	0	0	0	0	0	0
LAG1	0	0	0	0	0	0
LAG2	0	0	0	0	0	0
LAG3	0	0	0	0	0	0
LAG4	0	0	0	0	0	0
LAG5	n	n	n	n	n	n

## III-8 DHCP Snooping

DHCP snooping is able to validate DHCP messages obtained from untrusted sources and filter out invalid message.


For DHCP snooping to function properly, it is suggested to connect DHCP servers to VigorSwitch through trusted interfaces; because untrusted DHCP messages will be forwarded to trusted interfaces only.

### III-8-1 DHCP Snooping

By default, DHCP snooping is inactive on all VLANs. You can enable such a feature on a single VLAN or a range of VLANs.

This page allows a user to configure detailed settings of DHCP Snooping for each port (GE/LAG).

Any device that is not in the service provider network will be regarded as an untrusted source (such as a customer switch). Host ports are untrusted sources. In VigorSwitch, you can assign a source as a trusted device by configuring the trust state of its connecting port.

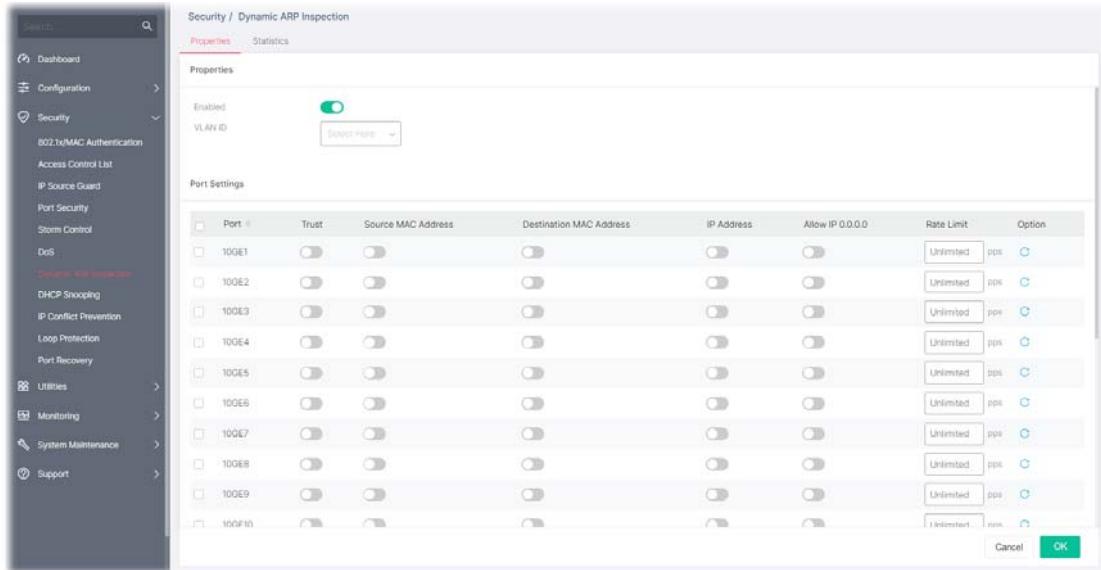

Available settings are explained as follows:

Item	Description
<b>Enable</b>	Click the toggle to enable / disable the function of DHCP Snooping.  - means "Enable".  - means "Disable".
<b>VLAN ID</b>	Select VLAN profile(s) to apply the function of DHCP Snooping function. Only the GE/LAG port within the selected VLAN will apply DHCP Snooping function.
<b>Port Settings</b>	
<b>Port</b>	Displays the port (10GE1 to 10GE12, LAG1 to LAG8) or ports for

	applying the DHCP snooping function.
<b>Trust</b>	Click the toggle to enable/disable the function of DHCP snooping for this port.
<b>Verify Hardware Address</b>	Click the toggle to enable/disable chaddr (client hardware address) validation of GE/LAG port. All DHCP packets will be checked if the client hardware MAC address is the same as the source MAC in Ethernet header or not. Default is disabled.
<b>Rate Limit</b>	Enter the rate limitation (0~300) of DHCP packets. The unit is "pps". "0" means unlimited. Default is unlimited.
<b>Option</b>	 - Clear current settings and return to factory default settings.
<b>OK</b>	Save the settings.


After finishing this web page configuration, please click **OK** to save the settings.

## III-8-2 Option82

You can use information settings including Remote ID and Circuit ID for Option82, also known as the DHCP relay agent, to protect VigorSwitch against spoofing attacks.


This page allows a user to set a string as remote ID for DHCP option82. For example, use a switch-configured hostname or specify an ASCII text string as remote ID.

In addition, it allows a user to set string as circuit ID for DHCP option82 setting. Circuit ID shall be combined with VLAN name (or VLAN ID number) and interface name (GE/LAG port).

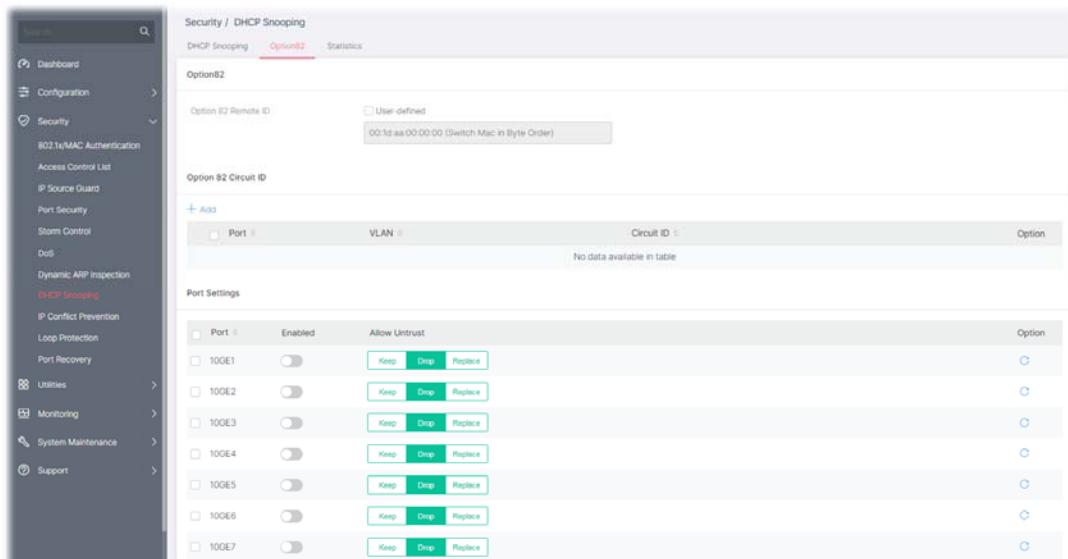

Available settings are explained as follows:

Item	Description
<b>Option82</b>	
<b>Option 82 Remote ID</b>	The string specified here is used to identify the remote host. <b>User-defined</b> - Check it and manually enter switch MAC in byte order in the entry box.
<b>Option 82 Circuit ID</b>	
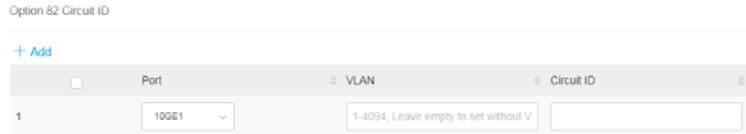
<b>+Add</b>	<p>Click to have new fields for creating a new profile.</p> <p>Option 82 Circuit ID</p>  <p><b>Port</b> - Use the drop down list to select the port (10GE1 to 10GE12, LAG1 to LAG8) or ports for applying DHCP snooping, Option82 function.</p> <p><b>VLAN</b> - Choose a number as VLAN ID which is easy to be identified for a packet containing with it.</p> <p><b>Circuit ID</b> - Enter ASCII text string in the entry box. Later, any packet passes through the specified interface (GE/LAG port) will be inserted with such information.</p>
<b>Port Settings</b>	
<b>Port</b>	Displays the port (10GE1 to 10GE12, LAG1 to LAG8) or ports for applying the Option82 function.
<b>Enabled</b>	<p>Click the toggle to enable / disable the function of Option82 Property.</p>  - means "Enable".  - means "Disable".
<b>Allow Untrust</b>	<p>Untrusted packets detected by VigorSwitch will be performed by the action determined here.</p> <p><b>Keep</b> – Packets are allowed to pass through.</p> <p><b>Drop</b> – Packets are blocked and discarded.</p> <p><b>Replace</b> – Packets will be replaced.</p>
<b>Option</b>	 - Clear current settings and return to factory default settings.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

### III-8-3 Statistics

This page displays all statistics recorded by DHCP snooping function.

Search... 🔍

🔗 Dashboard 🔗

🔗 Configuration 🔗

🔗 Security 🔗

- 802.1x/MAC Authentication
- Access Control List
- IP Source Guard
- Port Security
- Storm Control
- DoS
- Dynamic ARP Inspection
- DHCP Snooping
- IP Conflict Prevention
- Loop Protection
- Port Recovery

🔗 Utilities 🔗

🔗 Monitoring 🔗

🔗 System Maintenance 🔗

🔗 Support 🔗

Security / DHCP Snooping

DHCP Snooping Statistics

🔗 Clear All 🔗 Refresh


Ports	Forward	Client Hardware Address Check Drop	Untrust Port Drop	Untrust Port Drop With Option82 Drop	Invalid Drop
10GE1	0	0	0	0	0
10GE2	0	0	0	0	0
10GE3	0	0	0	0	0
10GE4	0	0	0	0	0
10GE5	0	0	0	0	0
10GE6	0	0	0	0	0
10GE7	0	0	0	0	0
10GE8	0	0	0	0	0
10GE9	0	0	0	0	0
10GE10	0	0	0	0	0
10GE11	0	0	0	0	0
10GE12	0	0	0	0	0
LAG1	0	0	0	0	0
LAG2	0	0	0	0	0
LAG3	0	0	0	0	0
LAG4	0	0	0	0	0

## III-9 IP Conflict Prevention


A user can configure IP addresses for network devices manually. However, it might result in conflict between different devices due to using the same IP address, and cause the devices not working correctly.

IP Conflict Prevention allows you to prevent IP conflict by binding the port with the specified IP address.

### Prevention Level: Off



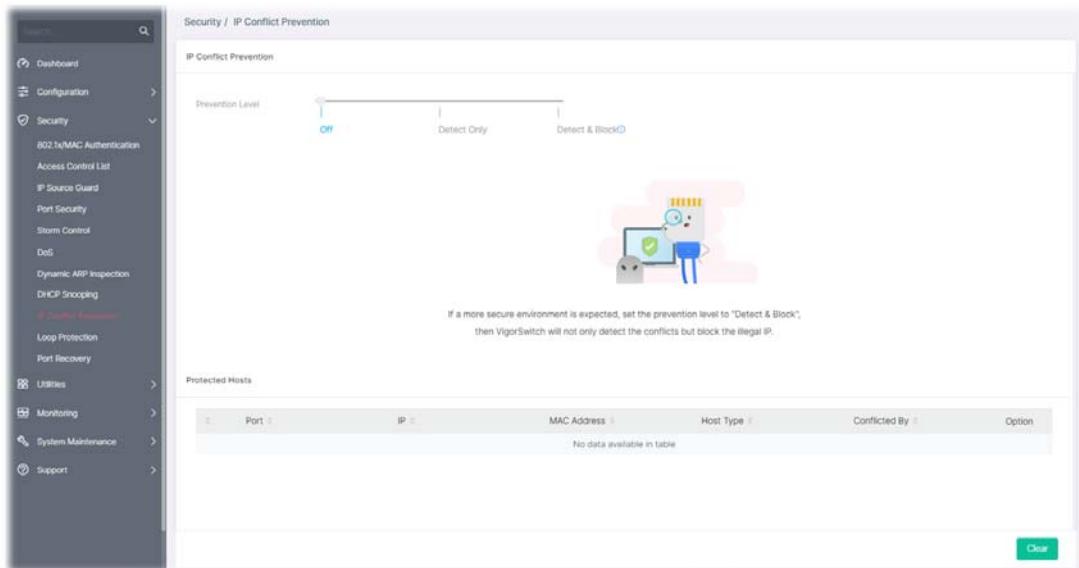



### Prevention Level: Detect & Block

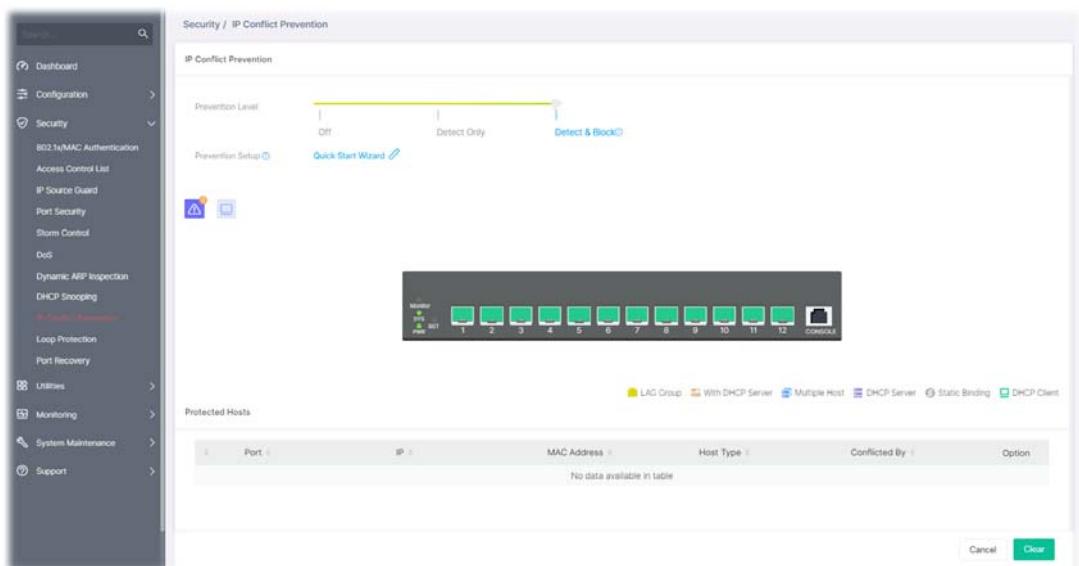


Available settings are explained as follows:

Item	Description
<b>IP Conflict Prevention</b>	
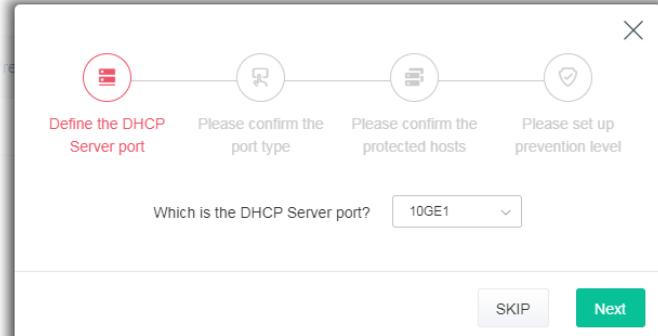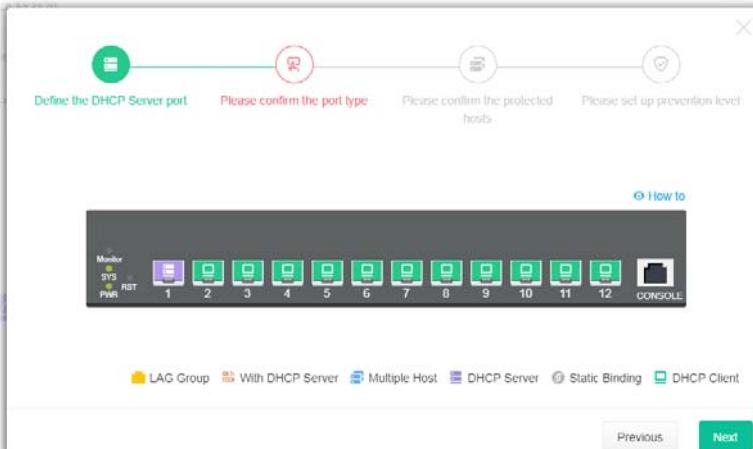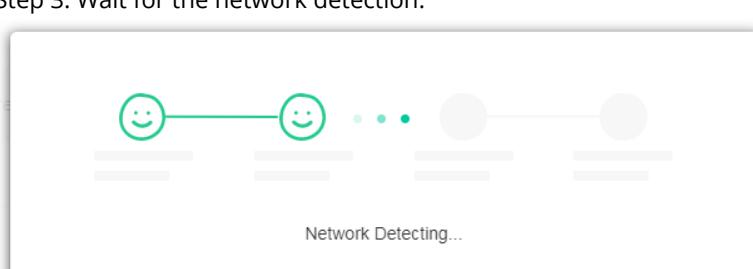
<b>Prevention Level</b>	<p><b>Off</b> - The function of IP conflict prevention is disabled.</p> <p><b>Detect Only</b> - VigorSwitch will detect the host but no further action executed.</p> <p><b>Detect &amp; Block</b> - VigorSwitch will detect the host and block the host if it meets the configuration on this page.</p>
<b>Prevention Setup</b>	<p><b>Quick Setup Wizard</b> - It is available only when <b>Detect &amp; Block</b> is selected as Prevention Level. The system will guide to bind server port with an IP address step by step.</p> <p>Step 1: Choose a server port. Click <b>Next</b>.</p>  <p>Step 2: Confirm the port type. Click Next.</p>  <p>Step 3: Wait for the network detection.</p>  <p>Step 4: Confirm / modify the protected host. Click Next.</p>

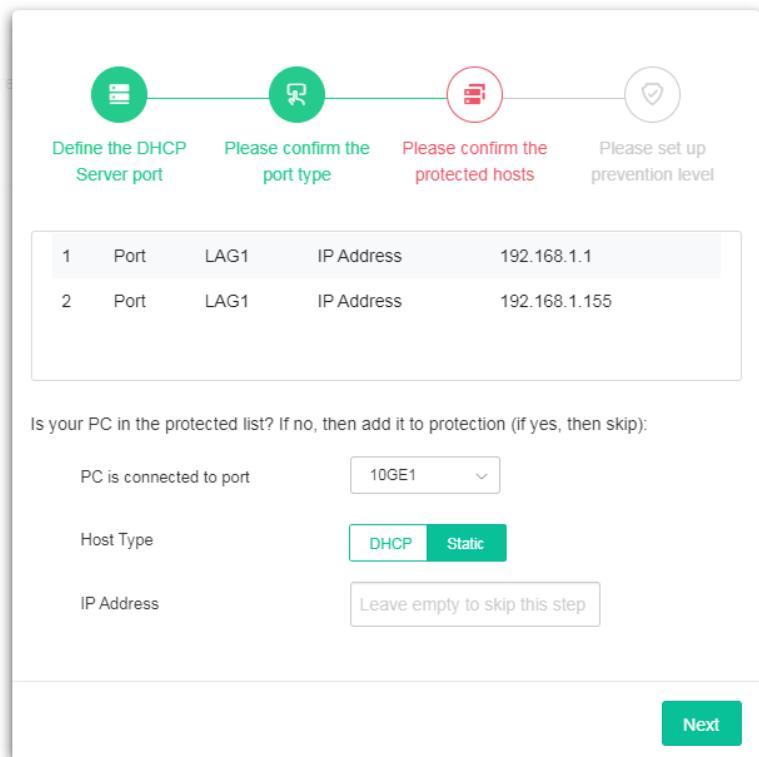

Step 5: Set up the prevention level. Click Next.

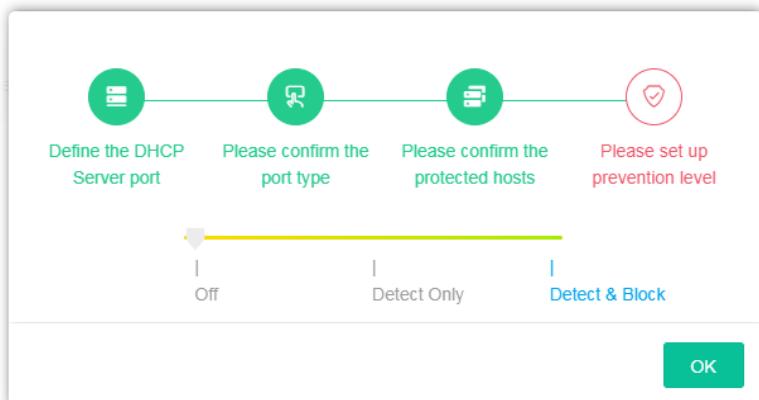

After clicking **OK**, the IP address specified for the GE port will be unavailable for other network devices.

Port	IP	MAC Address	Host Type	Conflicted By
LAG1	192.168.1.1	14:49:BC:00:8F:00	Dynamic Binding	


<b>Permit Link Aggregation</b>	It appears after running the quick start wizard for IP conflict prevention. The devices connected to the LAG ports will not be blocked due to using the same IP.
--------------------------------	--

### Protected Host

<b>Port</b>	Displays the LAN port number (GE1 to GE28, LAG1 to LAG8) of the DHCP server.
<b>IP</b>	Displays the IP address of the DHCP server.
<b>MAC Address</b>	Displays the MAC address of the DHCP server.
<b>Host Type</b>	Displays the result of host type (e.g., Dynamic Binding) of the DHCP server.
<b>Conflicted By</b>	Displays the object conflicting with the host.
<b>Option</b>	 - Click to modify the settings of the selected port.  - Click it to remove the selected entry.
<b>Clear</b>	Click it to remove all entries.

After finishing this web page configuration, please click **OK** to save the settings.

To modify settings for a host, click the  link of each port to open the setting page.

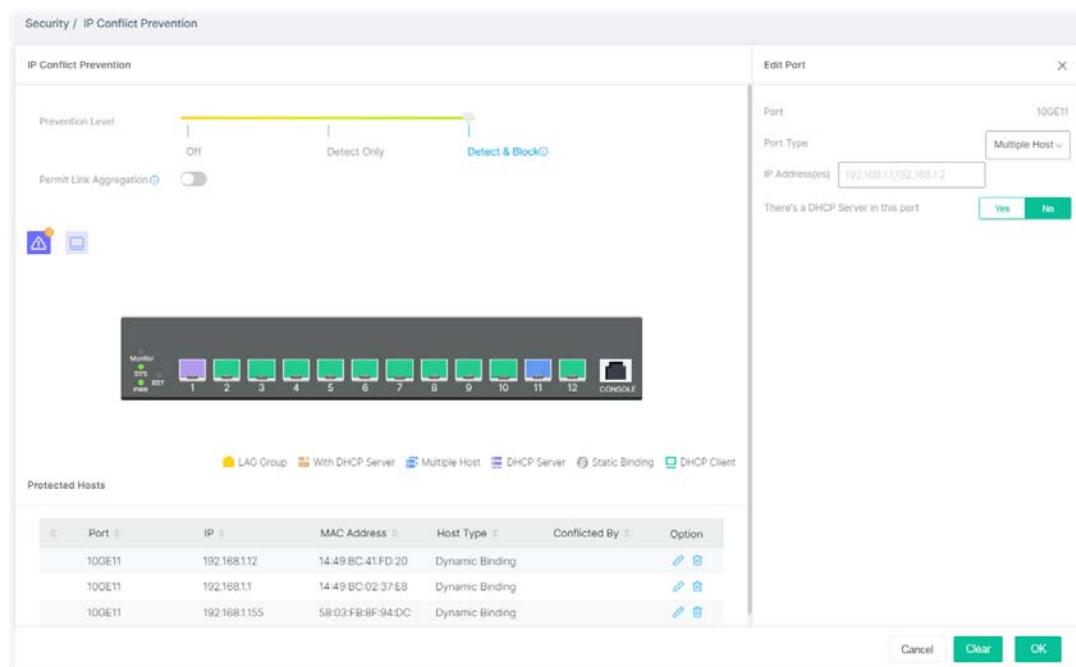

Available settings are explained as follows:

Item	Description
<b>Edit Port</b>	
<b>Port</b>	Displays the LAN port number (GE1 to GE28, LAG1 to LAG8) of the selected host.
<b>Port Type</b>	Displays the port type of the selected host.
<b>IP Address(es)</b>	Enter the IP address based on the port type.


---

<b>There's a DHCP Server in this port</b>	<b>Yes</b> - If there is a DHCP server in this port already, click Yes. <b>No</b> - If there is no DHCP server in this port already, click No.
---	---

---

## III-10 Loop Protection


Loop event might be caused due to wrong hardware connection. VigorSwitch will periodically send packets out to check if they loopback or not. This page allows you to set conditions and perform an action when VigorSwitch detects the looped packet.

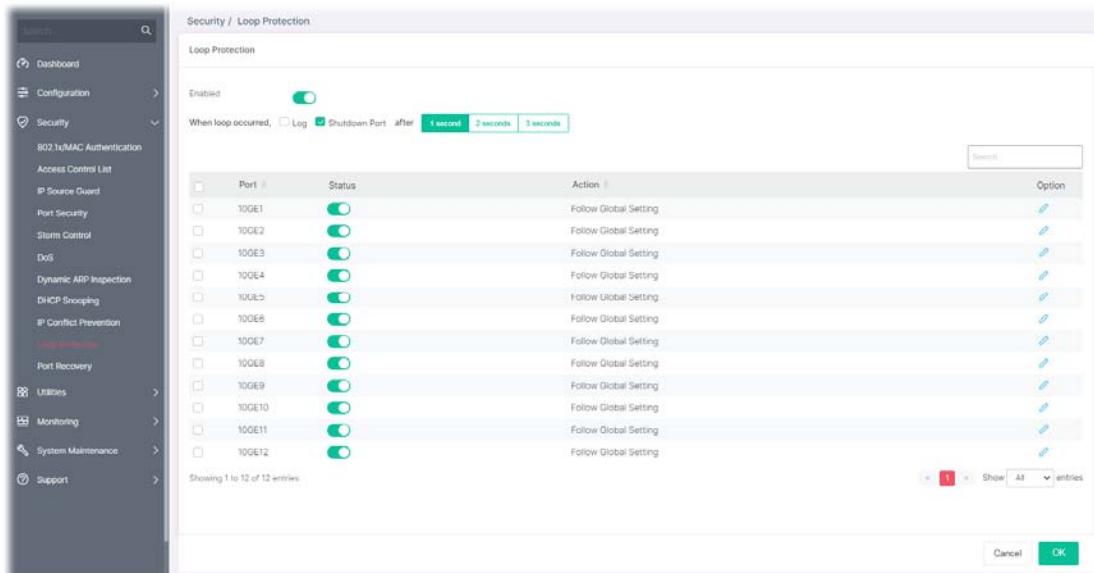

Available settings are explained as follows:

Item	Description
<b>Loop Protection</b>	
<b>Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. VigorSwitch will detect the loop event of the GE port automatically. - means "Enable". - means "Disable".
<b>When loop occurred..</b>	When the switch detects loop situation occurred to a port; it will perform the action selected in this field. <b>Log</b> - The switch will record such event as a log. <b>Shutdown Port</b> - The switch will shut down the port. <b>After 1 second/2 seconds/3 seconds</b> - Determine the time to record the event and / or shutdown the port. The settings configured here will be treated as global setting for all GE ports.
<b>Port</b>	Displays the port number (GE1 to GE28). Check the box to the left to enable the selected port.
<b>Status</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.
<b>Action</b>	Display the specified action for the selected port.
<b>Option</b>	- Click to modify the loop protection settings of the selected port.

To modify settings for a port, click the link to open the setting page.

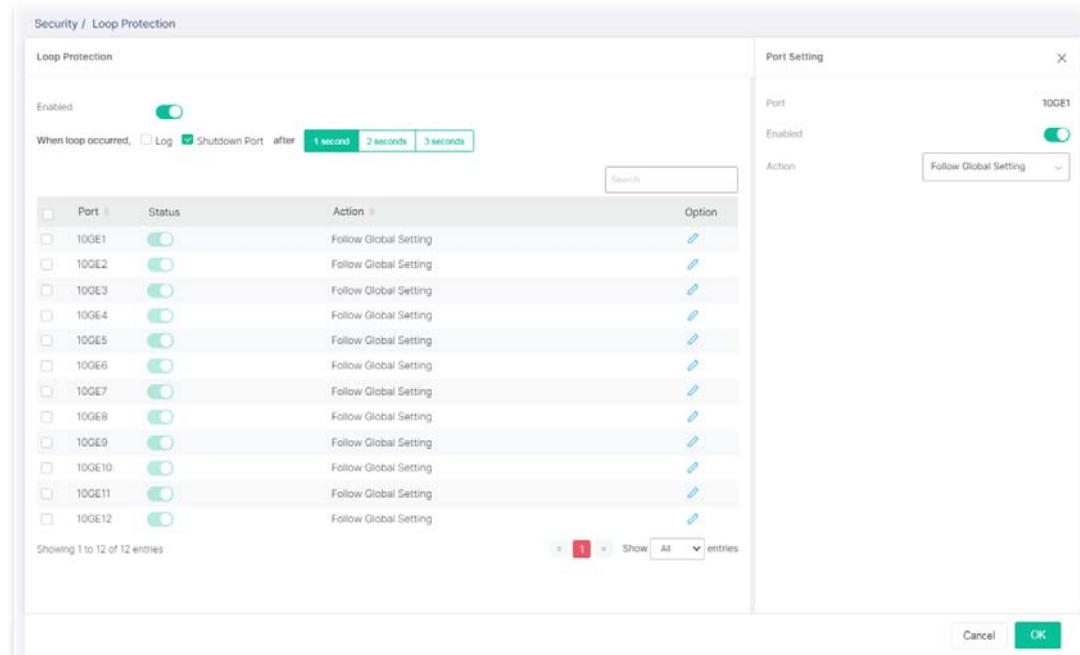


Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the port number (10GE1 to 10GE12).
<b>Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. VigorSwitch will detect the loop event of the GE port automatically.  - means "Enable".  - means "Disable".
<b>Action</b>	<b>Follow Global Setting</b> - Adopts the settings configured for <b>When loop occurred</b> . <b>Log</b> - The switch will record such event as a log. <b>Shutdown Port</b> - The switch will shut down the port. <b>Shutdown Port and Log</b> - The switch will shut down the port and record the event as a log. The system administrator will view the content from system log.

After finishing this web page configuration, please click **OK** to save the settings.

## III-11 Port Recovery

This page is used for configuring settings to recover the port which is being blocked by the following functions after a defined period of time.

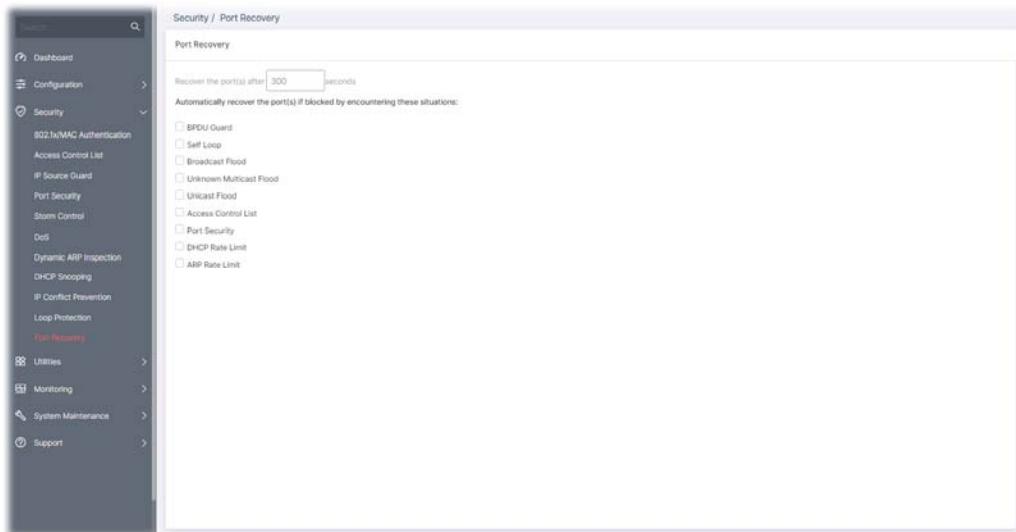


Available settings are explained as follows:

Item	Description
<b>Port Recovery</b>	
<b>Recover the port(s) after</b>	The port being blocked will be able to receive and send traffic after the time period configured here.
Check the box to block the port(s) if encountering the situations listed below.	
<b>BPDU Guard</b>	<b>Checked</b> - Recover the port being blocked by BPDU Guard after the time set in Recovery Interval.
<b>Self Loop</b>	<b>Checked</b> - Recover the port being blocked by self loop Guard after the time set in Recovery Interval.
<b>Broadcast Flood</b>	<b>Checked</b> - Recover the port being blocked by broadcast flood after the time set in Recovery Interval.
<b>Unknown Multicast Flood</b>	<b>Checked</b> - Recover the port being blocked by unknown multicast flood after the time set in Recovery Interval.
<b>Unicast Flood</b>	<b>Checked</b> - Recover the port being blocked by unicast flood after the time set in Recovery Interval.
<b>Access Control List</b>	<b>Checked</b> - Recover the port being blocked by ACL after the time set in Recovery Interval.
<b>Port Security</b>	<b>Checked</b> - Recover the port being blocked by port security after the time set in Recovery Interval.
<b>DHCP Rate Limit</b>	<b>Checked</b> - Recover the port being blocked by DHCP rate limit after the time set in Recovery Interval.
<b>ARP Rate Limit</b>	<b>Checked</b> - Recover the port being blocked by ARP rate limit after the time set in Recovery Interval.

This page is left blank.

# Chapter IV Utilities

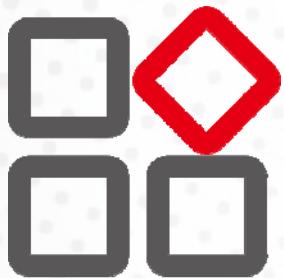

## IV-1 Device Check

When the system administrator is unable to get Ping information from the targeted LAN port, Vigor system will send an alert e-mail to the system administrator.

The configuration result for each port will be displayed on the table listed on the lower side of this web page.

The screenshot shows the 'Device Check' configuration page. On the left is a navigation sidebar with links like Dashboard, Configuration, Security, Utilities, Device Check (which is highlighted in red), Ping Test, Fan Test, SFP Vendor Info, sFlow, Monitoring, System Maintenance, and Support. The main area is titled 'Utilities / Device Check' and contains a table for 'Device Check'. The table has columns: Port, Checking Status, Ping IP Address, Interval Time (sec.), Retry Time, Mail Alert, and Reset. There are 12 rows for ports 10GE1 through 10GE12. Each row includes a checkbox for port selection, a toggle switch for checking status, an input field for ping IP address (set to 0.0.0.0), a dropdown for interval time (set to 15), a dropdown for retry time (set to 1), and checkboxes for mail alert and reset. At the bottom right of the table are 'Cancel' and 'OK' buttons.


Available settings are explained as follows:

Item	Description
<b>Port</b>	Display the port number (10GE1 to 10GE12). Check the box to the left to enable the port settings.
<b>Checking Status</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>Ping IP Address</b>	Enter the IP address of the PoE device for check.
<b>Interval Time(sec.)</b>	The ping check will be performed every 15, 30, 60 or 120 seconds for the selected port (PoE device).
<b>Retry Time</b>	The system will perform the ping check the selected port (PoE device) for 1, 3 or 5 times.
<b>Mail Alert</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function.
<b>Reset</b>	- Clear current settings and return to factory default settings.

After finishing this web page configuration, please click **OK** to save the settings.

## IV-2 Ping Test

This page is used for configuring the ping test and perform the ping test.

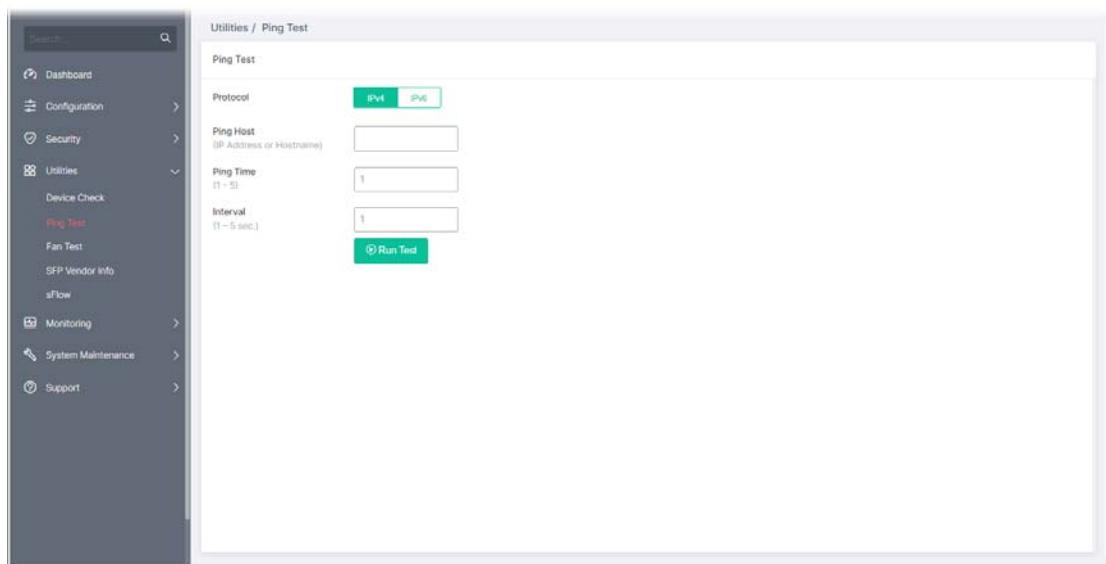


Available settings are explained as follows:

Item	Description
<b>Ping Test</b>	
<b>Protocol</b>	Choose IPv4/IPv6 to specify IP address for sending ping to check if network path is ok.
<b>Ping Host</b>	Enter the IP address of SNMP server based on the protocol selected above.
<b>Ping Time</b>	It means how many times to send ping request packet. Enter a number between 1 and 5 as the count and the default configuration is 4.
<b>Interval</b>	Defines the interval to perform ping action. For example, "1" means the ping action will be performed per second.
<b>Run Test</b>	Perform ping action.

## IV-3 Fan Test

---

The built-in fan in the VigorSwitch can be tested if it runs normally or not. Simply click **Test** to perform the fan test.

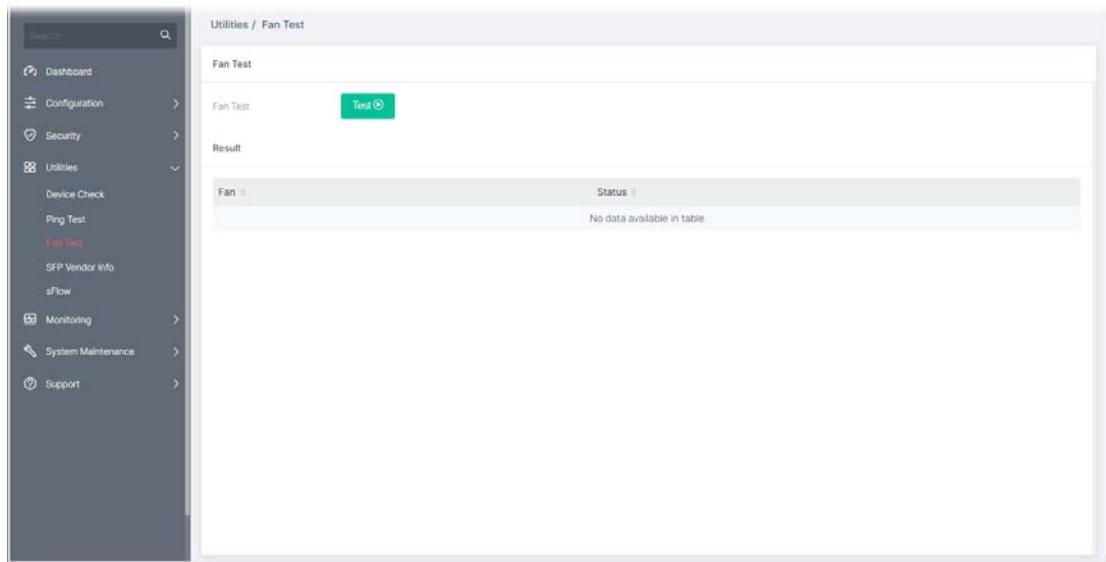

## IV-4 SFP Vendor Info

---

To get general information about the SFP vendor, select **Utilities>>SFP Vendor Info**.

The screenshot shows the 'SFP Vendor Info' page within a network management application. The left sidebar contains a navigation menu with options like Dashboard, Configuration, Security, Utilities (selected), Device Check, Cable Diagnostics, Ping Test, Fan Test, SFP Vendor Info (selected), sFlow, Monitoring, System Maintenance, and Support. The main panel title is 'Utilities / SFP Vendor Info'. A dropdown menu for 'SFP Ports' is set to '10GE1'. The 'Result' section contains a table with columns: Port, Temperature, Voltage, Current, Output power, Input power, OE-Present, and LOS. A message at the top of the table says 'No data available in table'. At the bottom right of the main panel are 'Cancel' and 'OK' buttons.

## IV-5 sFlow

sFlow (Sampled Flow) is a method which uses sampling to get the network packets information for the system administrator understanding the network operation and the network congestion.

VigorSwitch plays the role of sFlow agent which collects and sends the collected data to a sFlow controller (e.g., an external monitoring software) for executing data analysis. The system administrator shall install the sFlow controller on the device which can communicate with VigorSwitch. When the administrator wants to monitor the data traffic via VigorSwitch and get the statistics, he/she can configure VigorSwitch as sFlow agent by configuring the settings listed below. Later, the sFlow controller can analyze the data and offer statistics for the system administrator.

	Profile Status	Packet Sampling Rate	Counter Sampling Interval	Collector Address	Collector Port	Data Source Port	Option
1		400	30	-	6343	-	
2		400	30	-	6343	-	
3		400	30	-	6343	-	
4		400	30	-	6343	-	
5		400	30	-	6343	-	
6		400	30	-	6343	-	
7		400	30	-	6343	-	
8		400	30	-	6343	-	

Available settings are explained as follows:

Item	Description
<b>Profile Status</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>Packet Sampling Rate</b>	Displays the sampling rate of the packets for the server to capture.
<b>Counter Sampling Interval</b>	Displays the time (sec.) for the sFlow server to obtain the traffic on the interface (LAN port) periodically.
<b>Collector Address</b>	Displays the hostname, IPv4 address, or IPv6 address of the data collector device.
<b>Collector Port</b>	Displays the port number used for real-time monitoring traffic status.
<b>Data Source Port</b>	Displays the LAN interface (10GE1 to 10GE12) of the data source port.
<b>Option</b>	- Click to modify the loop protection settings of the selected port.

To modify settings for a port, click the link to open the setting page.

Utilities / sFlow

sFlow						sFlow Profile 1	
	Profile Status	Packet Sampling Rate	Counter Sampling Interval	Collector Address	Col	Profile Enabled	<input checked="" type="checkbox"/>
1	<input checked="" type="checkbox"/>	400	30	-	634	Packet Sampling Rate (1 – 65535, default 400, disable 0)	<input type="text" value="400"/>
2	<input type="checkbox"/>	400	30	-	634	Counter Sampling Interval (0 – 300 sec, default 30, disable 0)	<input type="text" value="30"/>
3	<input type="checkbox"/>	400	30	-	634	Collector Address Type	<input checked="" type="radio"/> Hostname <input type="radio"/> IPv4 <input type="radio"/> IPv6
4	<input type="checkbox"/>	400	30	-	634	Collector Address	<input type="text"/>
5	<input type="checkbox"/>	400	30	-	634	Collector Port (1 – 65535, default 6343)	<input type="text" value="6343"/>
6	<input type="checkbox"/>	400	30	-	634	Data Source Ports	<input type="button" value="Select Here"/>
7	<input type="checkbox"/>	400	30	-	634		
8	<input type="checkbox"/>	400	30	-	634		

Available settings are explained as follows:

Item	Description
<b>sFlow Profile #</b>	
<b>Profile Enable</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the settings for the selected profile.  <input checked="" type="checkbox"/> - means “Enable”. <input type="checkbox"/> - means “Disable”.
<b>Packet Sampling Rate</b>	Set the sampling rate of the packets for the server to capture.
<b>Counter Sampling Interval</b>	Set a time for the sFlow server to obtain the traffic on the interface (LAN port) periodically. Then, the sever will make statistics and transmit the data to the collector device. The default value is 30 (seconds).
<b>Collector Address Type</b>	Usually, you can specify a server or an IP address as a data collector device. Specify the role of the server (hostname, IPv4 or IPv6).
<b>Collector Address</b>	Enter the hostname, IPv4 address or IPv6 address according to the collector type selected.
<b>Collector Port</b>	The port number is the basic sampling unit which can be used for real-time monitoring traffic status. The default port number is 6343.
<b>Data Source Ports</b>	Specify the LAN interface (10GE1 to 10GE12) as the data source port.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

This page is left blank.

# Chapter V Monitoring



# V-1 Log Center

## V-1-1 System Log Information

This page allows the user to set filtering conditions and displays the filtering result.

Time	Log Type	Log Level	Log Category	Content
Jan 26 2021 15:38:14	FLASH	notice	System	Logging file is set to disabled
Jan 26 2021 15:32:37	FLASH	debug	LLDP	LLDP TTL expire and clear neighbor entry 10GigabitEthernet3 idx 0
Jan 26 2021 15:32:37	FLASH	notice	Port	10GigabitEthernet3 link down
Jan 26 2021 15:32:37	FLASH	notice	Port	10GigabitEthernet3 link up
Jan 26 2021 15:32:37	FLASH	notice	Port	10GigabitEthernet3 link down
Jul 21 19:27:22	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:28:52	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:26:12	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:25:52	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:25:02	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:24:52	RAM	notice	AAA	New telnet connection for user admin, source 192.168.1.1 ACCEPTED
Jul 21 19:24:27	RAM	alert	Platform	Hardware monitor The voltage of DC12V is 11.382 out of range

Available settings are explained as follows:

Item	Description
<b>Filter</b>	Click to set the conditions for filtering. 

**Type** - Specify the time (Past 1 Hour, Past 1 Day, Past 1 Week) for filtering.

**Log Type** - Select RAM (explore the logs contained in volatile memory (also known as RAM) or Flash (explore the logs contained in non-volatile memory).

**Log Level** - Select severity (emerg, alert, crit, error, warning, notice, info and debug) of log messages which you wish to filter out for review.


**Log Category** - Select the categories (related features) of logs you wish to review.

<b>Clear All</b>	Clear it to remove all logs displayed in this page.
<b>Refresh</b>	Click it to refresh the log.
<b>Time</b>	Displays the filtering time type.
<b>Log Type</b>	Displays the log type (RAM or Flash).
<b>Log Level</b>	Displays the severity of the log.
<b>Log Category</b>	Displays the category of the log.
<b>Content</b>	Displays the brief explanation of the log.

## V-1-2 System Log Settings

This page allows users to enable system logging into local Syslog and specific remote Syslog server for storage.

### V-1-2-1 Local

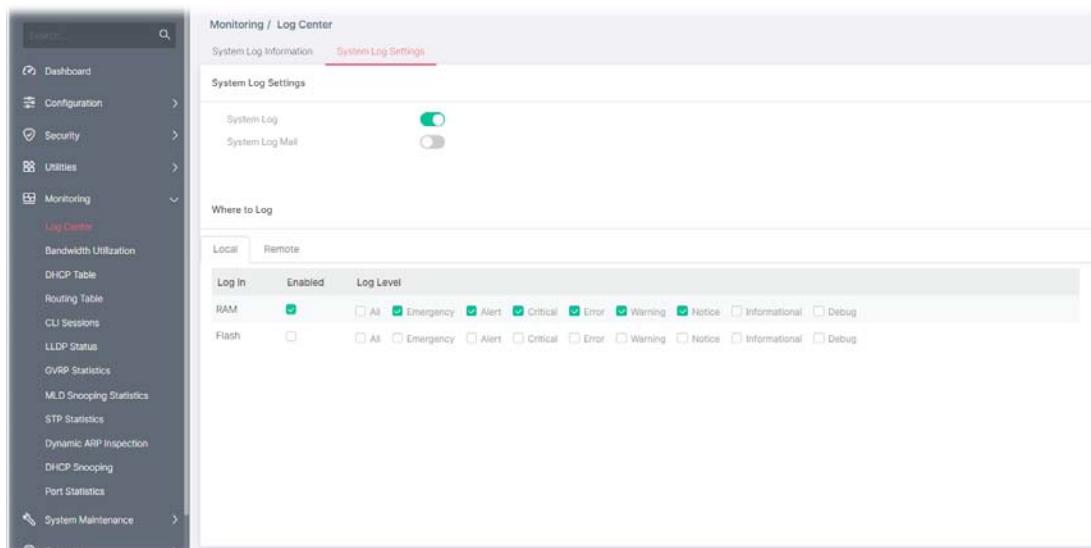


Available settings are explained as follows:

Item	Description
<b>System Log Settings</b>	
<b>System Log</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ●  - means "Enable". ●  - means "Disable".
<b>System Log Mail</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ● <b>Syslog Mail Server</b> - Click to configure Syslog Mail Server.
<b>Where to Log</b>	
<b>Local</b>	<b>Log in</b> - Displays the log type. <b>Enable</b> - Select the box to enable the log type (RAM/Flash).

**Log Level** - Select the box(es) to select the severity of the log.

To modify settings for the **Syslog Mail Server**, click the  link to open the setting page.

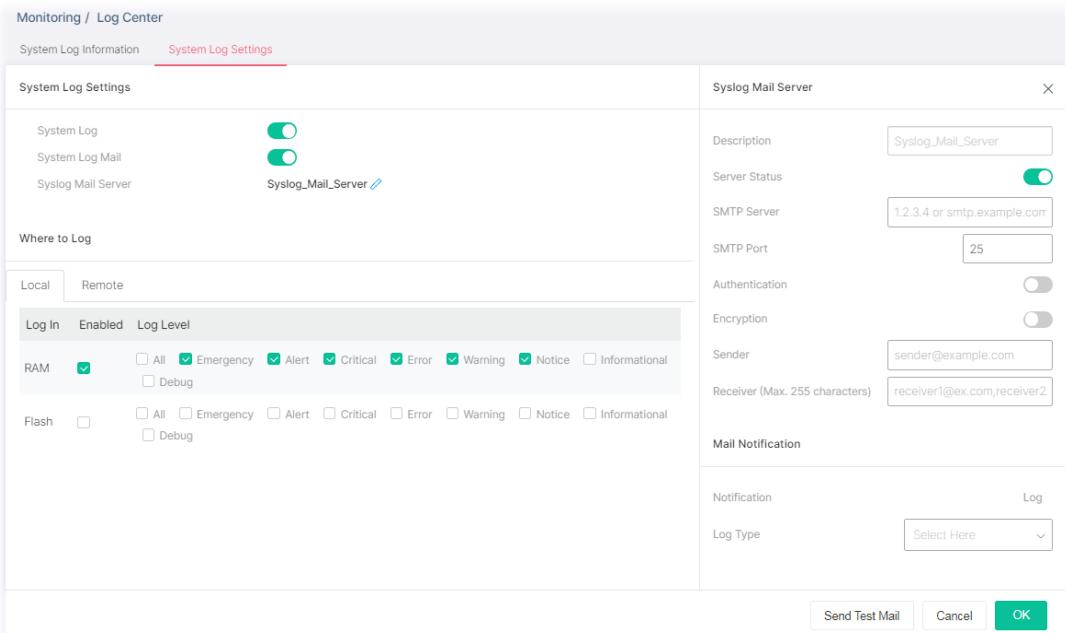

Available settings are explained as follows:

Item	Description
<b>Syslog Mail Server</b>	
<b>Description</b>	Displays the name of the Syslog Mail Server.
<b>Server Status</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the Syslog Mail Server settings.  - means "Enable".  - means "Disable".
<b>SMTP Server</b>	Enter IP address or URL of the SMTP server.
<b>SMTP Port</b>	Enter the port number for the SMTP server.
<b>Authentication</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable the authentication mechanism. <ul style="list-style-type: none"><li>● <b>Username</b> - Enter a user name for authentication.</li><li>● <b>Password</b> - Enter a password for authentication.</li></ul>
<b>Encryption</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. After enabling Authentication, choose one of the encryption servers for data encryption. <ul style="list-style-type: none"><li>● <b>STARTTLS</b> - The mail will be encrypted with StartTLS.</li><li>● <b>SSL/TLS</b> - The mail will be encrypted with StartTLS.</li></ul>
<b>Sender</b>	Enter the email address which will send the syslog mail out.
<b>Receiver</b>	Enter the email address which will receive the syslog mail.

### Mail Notification

<b>Log Type</b>	Vigor system will send the e-mail related to the selected feature(e.g., AAA, ACL) to the recipient.
<b>Send Test Mail</b>	After clicking this button, VigorSwitch system will send a test mail to the recipient.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.


## V-1-2-2 Remote

This page allows users to enable system logging into a specific remote Syslog server for storage.

Available settings are explained as follows:

Item	Description
<b>System Log Settings</b>	
<b>System Log</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ( - means "Enable".) ( - means "Disable").
<b>System Log Mail</b>	<b>Enable / Disable</b> – Click the toggle to enable / disable this function. ● <b>Syslog Mail Server</b> - Click to configure Syslog Mail Server.
<b>Where to Log</b>	
<b>+Add Server</b>	Click to create a new remote server.
<b>Log In</b>	Displays the index number of the remote server.
<b>Server IP: Port</b>	Displays the IP address and port number used by the server.
<b>Log Level</b>	Displays the severity of the system log.
<b>Facility</b>	Displays the facility of the remote Syslog server.

To add a remote server, click the "**+Add Server**" to open the edit page.

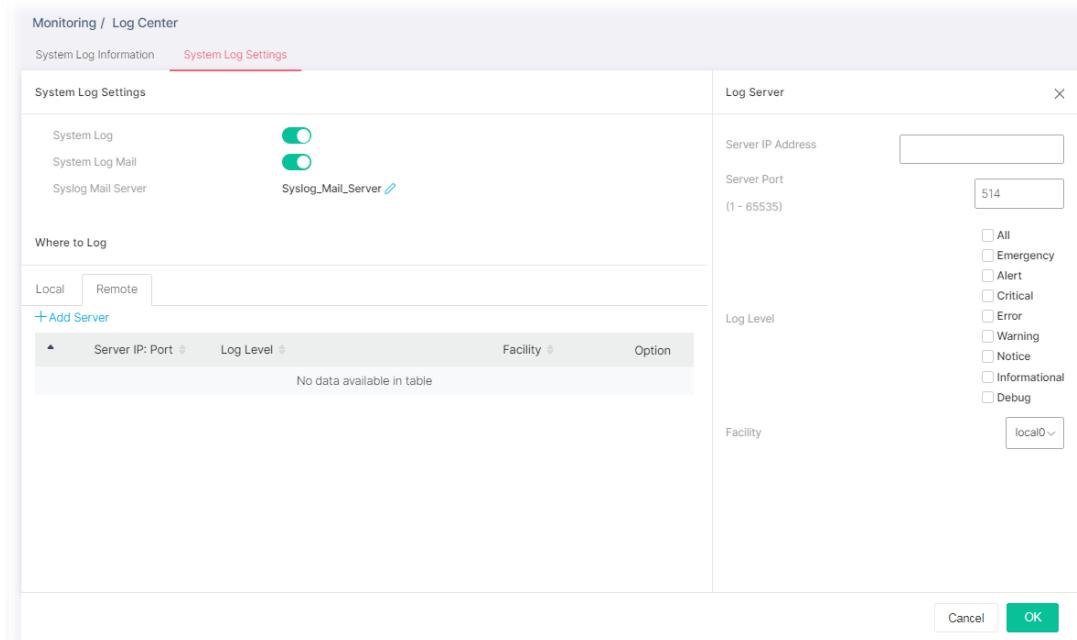

Available settings are explained as follows:


Item	Description
<b>Log Server</b>	
<b>Server IP Address</b>	Enter IP address of the Syslog server.
<b>Server Port</b>	Specify the port that syslog should be sent to.
<b>Log Level</b>	Select severity (emerg, alert, crit, error, warning, notice, info and debug) of log messages which will be stored.
<b>Facility</b>	One device supports multiple facilities (represented with facility ID, local0 to local7) of remote Syslog server. For each facility ID contains different Syslog server configuration, please choose a facility ID for this Syslog server.

After finishing this web page configuration, please click **OK** to save the settings.

## V-2 Bandwidth Utilization

---

This page offers the traffic statistics including data information and data of interframe gap for each port.

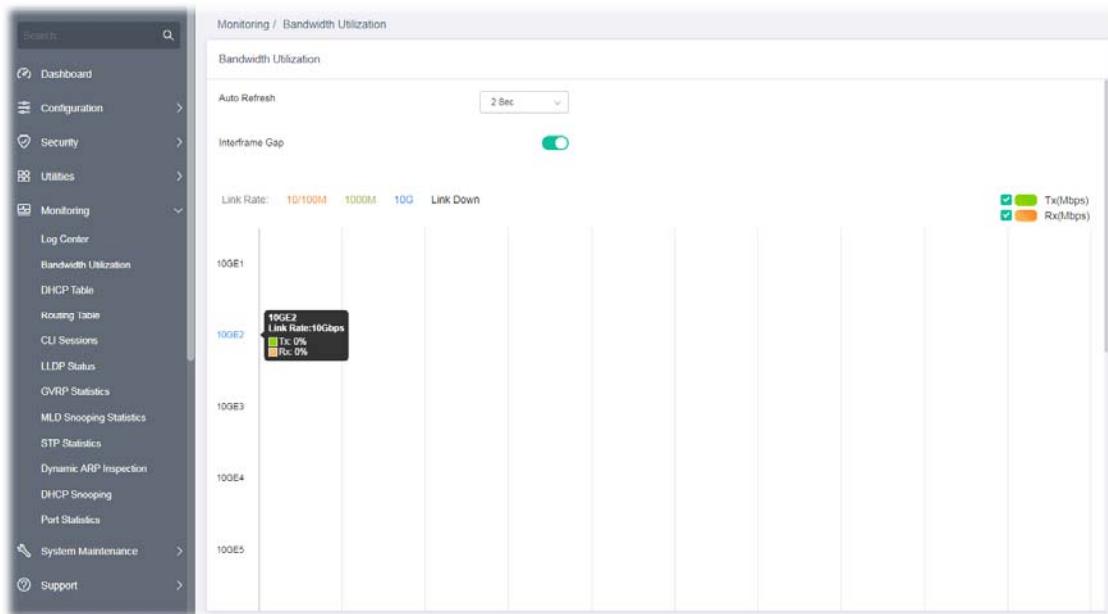

Available settings are explained as follows:

Item	Description
<b>Auto Refresh</b>	Select the time interval for refreshing this page.
<b>Interframe Gap</b>	The data of the interframe gap can be displayed or hidden by enabling/disabling for Interframe Gap. <b>Enable / Disable</b> – Click the toggle to enable / disable this function. - means "Enable". - means "Disable".

## V-3 DHCP Table

---

This page shows the IP list assigned by the DHCP server.

The screenshot displays the 'Monitoring / DHCP Table' interface. On the left, a navigation sidebar lists various monitoring and configuration options. The main area is titled 'DHCP Table' and contains a table header with columns for IP Address, MAC Address, Host ID, Leased Time Start, and Leased Time End. Below the header, a message states 'No data available in table'. At the bottom right, there is a pagination control showing '1' entry and a 'Show All' button.

IP Address	MAC Address	Host ID	Leased Time Start	Leased Time End
No data available in table				

Show All entries

## V-4 Routing Table

---

The screenshot shows the 'Monitoring / Routing Table' page. On the left is a dark sidebar menu with various navigation options. The main area displays a table titled 'Routing Table' with columns for Type, Destination IP / Mask, Gateway, and Interface. A message at the bottom of the table area states 'No data available in table'. At the bottom right, there is a pagination control showing 'Showing 0 to 0 of 0 entries' and a 'Show' button with a dropdown menu.

## V-5 CLI Sessions

---

This page shows a list of CLI command executed. You can delete the selected CLI session by click the Remove button under the Edit item.

The screenshot displays the 'Monitoring / CLI Sessions' page. On the left, a dark sidebar menu lists various system management options: Dashboard, Configuration, Security, Utilities, Monitoring (selected), Log Center, Bandwidth Utilization, CU Sessions, PFC Status, LLDP Status, STP Statistics, Port Statistics, System Maintenance, and Support. The main content area is titled 'Command-Line Interface Sessions'. It features a table header with columns: PID, Login Type, User, and Host. Below the header, a message reads 'No data available in table'. A blue 'Refresh' button is located at the top left of the table area.

# V-6 LLDP Status

---

## V-6-1 General Statistics

This page offers the statistics of LLDP packets of each port (10GE1 to 10GE12).

The screenshot shows the 'Monitoring / LLDP Status' page. The left sidebar includes options like Dashboard, Configuration, Security, Utilities, Monitoring (selected), Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLI Sessions, LLDP Status (selected), CVRP Statistics, MLD Snooping Statistics, STP Statistics, Dynamic ARP Inspection, DHCP Snooping, Port Statistics, System Maintenance, and Support. The main content area has tabs for General Statistics (selected), LLDP Device, and LLDP Overloading. Under General Statistics, there's a summary table with columns for Insertions, Deletions, Drops, and Age Outs. Below is a detailed table for each port from 10GE1 to 10GE12, showing metrics for Total Tx Frames, Total Rx Frames, Discarded Rx Frames, Error Rx Frames, Discarded Rx TLVs, Unrecognized Rx Frames, and Total Rx Age Outs.

Port	Total Tx Frames	Total Rx Frames	Discarded Rx Fr...	Error Rx Frames	Discarded Rx TLVs	Unrecognized Rx...	Total Rx Age Outs
10GE1	0	0	0	0	0	0	0
10GE2	5576	5569	0	0	0	0	0
10GE3	0	0	0	0	0	0	0
10GE4	0	0	0	0	0	0	0
10GE5	0	0	0	0	0	0	0
10GE6	0	0	0	0	0	0	0
10GE7	0	0	0	0	0	0	0
10GE8	0	0	0	0	0	0	0
10GE9	0	0	0	0	0	0	0
10GE10	0	0	0	0	0	0	0
10GE11	0	0	0	0	0	0	0
10GE12	0	0	0	0	0	0	0

Available settings are explained as follows:

Item	Description
<b>General Statistics</b>	
<b>Clear All</b>	Clear it to remove all logs displayed in this page.
<b>Refresh</b>	Click it to refresh the status page.

## V-6-2 LLDP Device

This page displays information for LLDP local and remote devices.

### V-6-2-1 Local

This page displays information for LLDP local device.

The screenshot shows the 'Monitoring / LLDP Status' interface. The left sidebar has a 'Monitoring' section with various sub-options like Log Center, Bandwidth Utilization, and LLDP Status. The main content area is titled 'LLDP Device' with tabs for 'Local' and 'Remote'. It shows a 'Device Summary' table with fields such as Chassis ID Subtype (MAC Address), Chassis ID (14:49:BC:41:3F:E3), System Name (FX2120), System Description (DrayTek Corp. 12-Port 1000M/10G SFP+ L2+ Switch), Capabilities Supported (Bridge), Capabilities Enabled (Bridge), and Port ID Subtype (Interface name). Below this is a 'Port Details' table listing three ports: 10GE1, 10GE2, and 10GE3, each with TX&RX status and 10g1, 10g2, or 10g3 port IDs.

Available settings are explained as follows:

Item	Description
<b>Refresh</b>	Click it to refresh the status page.
<b>Device Summary</b>	Display a summary of the LLDP information for this switch. <b>Chassis ID Subtype</b> - Display the type of chassis ID, such as the MAC address. <b>Chassis ID</b> - Display Identifier of chassis. Where the chassis ID subtype is a MAC address, the MAC address of the switch is displayed. <b>System Name</b> - Display model name of switch. <b>System Description</b> - Display description of switch. <b>Capabilities Supported</b> - Display the primary functions of the device, such as Bridge, WLAN AP, or Router. <b>Capabilities Enabled</b> - Primary enabled functions of the device. <b>Port ID Subtype</b> - Display the type of the port identifier that is shown.
<b>Port Details</b>	Display detailed information of the selected GE port. Click  to review the detailed information contained in TLVs sent out from each interface, containing MAC/PHY, 802.3, 802.3 Link Aggregation, 802.1 VLAN and Protocol for each LAN port (GE1 to GE28).

The screenshot shows the 'Monitoring / LLDP Status' interface. The 'LLDP Device' tab is selected. Under 'LLDP Device', it lists 'Capabilities Supported' as Bridge, 'Capabilities Enabled' as Bridge, and 'Port ID Subtype' as Interface name. In the 'Port Details' section, there is a table for port GE1 with columns: Port, LLDP Status, Port ID, Port Description, and Management (IPv4/IPv6). The table shows the following data:

Port	LLDP Status	Port ID	Port Description	Management (IPv4/IPv6)
GE1	TX&RX	g1	-	-
		<b>Global</b>	<b>802.3</b>	
Chassis ID Subtype	MAC Address	802.3 Maximum Frame Size	N/A	
Chassis ID	14:49:BC:43:CC:FC	802.3 Link Aggregation	-	
System Name	P1282	Aggregation Capability	N/A	
System Description	-	Aggregation Status	N/A	
Capabilities Supported	Bridge	Aggregation Port ID	N/A	
Capabilities Enabled	Bridges	802.1 VLAN & Protocol	-	

## V-6-2-2 Remote

This page is used to view the information sent from neighboring devices by LLDP protocol.

The screenshot shows the 'Monitoring / LLDP Status' interface. The 'LLDP Device' tab is selected. Under 'LLDP Device', the 'Remote' tab is selected. It displays a table of neighbors with the following columns: Port, Chassis ID Subtype, Chassis ID, Port ID Subtype, Port ID, System Name, and Time to Live. One entry is shown:

Port	Chassis ID Subtype	Chassis ID	Port ID Subtype	Port ID	System Name	Time to Live
10GE2	MAC address	14:49:BC:41:21:4D	Locally assigned	10gi5	P2540x	111


Showing 1 to 1 of 1 entries.

Available settings are explained as follows:

Item	Description
<b>Refresh</b>	Click it to refresh the status page.
<b>Port</b>	Displays the number of the local port to which the neighbor is connected.
<b>Chassis ID Subtype</b>	Displays the type of chassis ID (for example, MAC address).
<b>Chassis ID</b>	Displays the identifier of the 802 LAN neighboring device's chassis.
<b>Port ID Subtype</b>	Displays the type of port identifier.
<b>Port ID</b>	Displays the number of port identifier.
<b>System Name</b>	Displays the name of the switch.
<b>Time to Live</b>	Displays the time interval in seconds after which the information for remote device will be deleted.

## V-6-3 LLDP Overloading

This page allows user to review current size, overall size of LLDP packet and whether it is to exceed maximum allowed size of single LLDP packet.

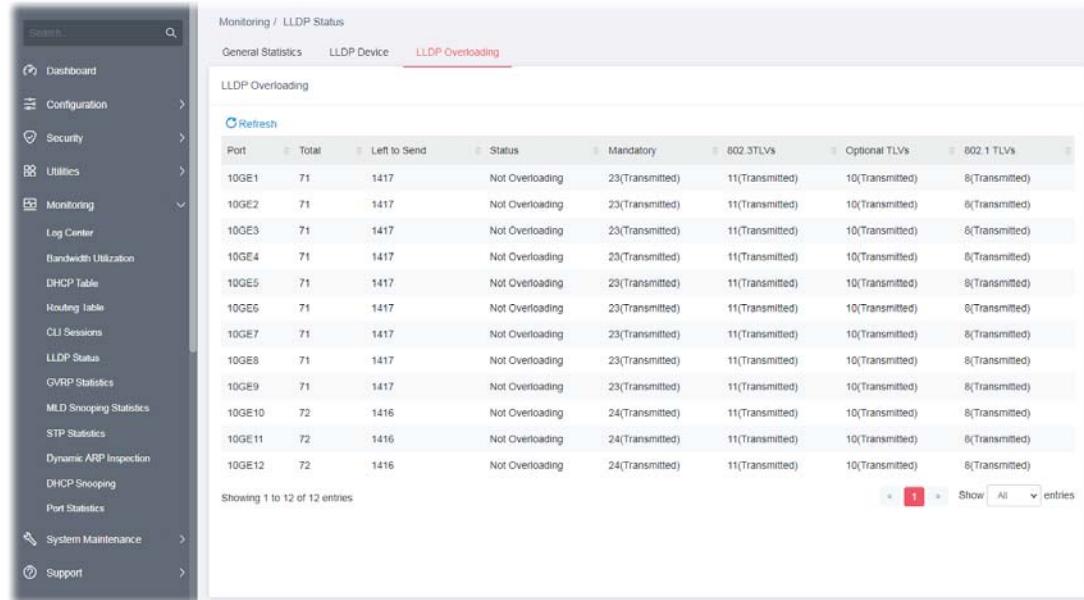

The screenshot shows a web-based monitoring interface for a network device. The left sidebar contains navigation links for Dashboard, Configuration, Security, Utilities, Monitoring (with sub-links for Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLI Sessions, LLDP Status, GVRP Statistics, MLD Snooping Statistics, STP Statistics, Dynamic ARP Inspection, DHCP Snooping, Port Statistics, System Maintenance, and Support), and a search bar at the top. The main content area is titled "Monitoring / LLDP Status" and has tabs for "General Statistics", "LLDP Device", and "LLDP Overloading". The "LLDP Overloading" tab is selected, displaying a table titled "LLDP Overloading". The table has columns: Port, Total, Left to Send, Status, Mandatory, 802.3TLVs, Optional TLVs, and 802.1 TLVs. The table lists 12 entries for ports 10GE1 through 10GE12, all showing "Not Overloading" status. The "Optional TLVs" column indicates values ranging from 10 to 11 transmitted. The "802.1 TLVs" column indicates values ranging from 8 to 10 transmitted. A footer at the bottom of the table says "Showing 1 to 12 of 12 entries".

Port	Total	Left to Send	Status	Mandatory	802.3TLVs	Optional TLVs	802.1 TLVs
10GE1	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE2	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE3	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE4	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE5	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE6	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE7	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE8	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE9	71	1417	Not Overloading	23(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE10	72	1416	Not Overloading	24(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE11	72	1416	Not Overloading	24(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)
10GE12	72	1416	Not Overloading	24(Transmitted)	11(Transmitted)	10(Transmitted)	8(Transmitted)

Available settings are explained as follows:

Item	Description
<b>Refresh</b>	Click it to refresh the status page.
<b>Port</b>	Displays the name of the port.
<b>Total</b>	Displays the total number of bytes of LLDP information in each packet.
<b>Left to Send</b>	Displays the total number of available bytes left for additional LLDP information in each packet.
<b>Status</b>	Displays if LLDP TLVs has overloaded the PDU maximum size or not.
<b>Mandatory</b>	Displays how many bytes used by mandatory TLVs.
<b>802.3TLVs</b>	Displays how many bytes used by 802.3 TLVs.
<b>Optional TLVs</b>	Displays how many bytes used by optional TLVs.
<b>802.1 TLVs</b>	Displays how many bytes used by 802.1 TLVs.

## V-7 GVRP Statistics

GVRP (Generic Attribute Registration Protocol) is used automatically for exchanging information for VLAN membership between switches. This page counts the GVRP information received on each port.

The screenshot shows the 'Monitoring / GVRP Statistics' page. On the left is a navigation sidebar with links like Dashboard, Configuration, Security, Utilities, Monitoring (selected), Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLI Sessions, LLDP Status, GVRP Statistics (selected), MLD Snooping Statistics, STP Statistics, Dynamic ARP Inspection, DHCP Snooping, Port Statistics, System Maintenance, and Support. The main area has tabs for 'GVRP Statistics' and 'Statistics of'. It includes a 'Display' dropdown set to '3 Selected' and a 'Statistics of' dropdown set to '20 Selected'. A 'Refresh Every' button is set to '10 sec'. The 'Tx' section shows a table for five ports (10GE1 to 10GE5) with columns for Join Empty, Empty, Leave Empty, Join In, Leave In, and Leave All. All values are 0. The 'Rx' section shows a similar table for four ports (10GE1 to 10GE4) with all values at 0. A pagination bar indicates entries 1 to 5 of 20.

Port	Join Empty	Empty	Leave Empty	Join In	Leave In	Leave All
10GE1	0	0	0	0	0	0
10GE2	0	0	0	0	0	0
10GE3	0	0	0	0	0	0
10GE4	0	0	0	0	0	0
10GE5	0	0	0	0	0	0

Port	Join Empty	Empty	Leave Empty	Join In	Leave In	Leave All
10GE1	0	0	0	0	0	0
10GE2	0	0	0	0	0	0
10GE3	0	0	0	0	0	0
10GE4	0	0	0	0	0	0

# V-8 MLD Snooping Statistics

---

This page counts the MLD messages received or transmitted on the network.

The screenshot shows the 'MLD Snooping Statistics' page within a network management interface. The left sidebar contains navigation links for Dashboard, Configuration, Security, Utilities, Monitoring (with sub-links for Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLU Sessions, LLDP Status, GVRP Statistics, and MLD Snooping Statistics), STP Statistics, Dynamic ARP Inspection, DHCP Snooping, Port Statistics, System Maintenance, and Support. The main content area is titled 'MLD Snooping Statistics' and displays a table with two columns: Rx and Tx. The Rx column lists categories: Total, Valid, Invalid, Other, Leave, Report, General Query, Special Group Query, and Source-Specific Group Query, all with a value of 0. The Tx column also lists these categories with a value of 0. There are 'Clear All' and 'Refresh' buttons at the top of the table.

	Rx	Tx	
Total	0	Leave	0
Valid	0	Report	0
Invalid	0	General Query	0
Other	0	Special Group Query	0
Leave	0	Source-Specific Group Query	0
Report	0		
General Query	0		
Special Group Query	0		
Source-Specific Group Query	0		

## V-9 STP Statistics

---

The Spanning Tree Protocol (STP) can be used to detect and disable network loops, and to provide backup links between switches, bridges, or routers.

This page allows users to edit the general setting of the STP CIST port and browser CIST port status.

The screenshot shows a web-based monitoring interface for a network device. On the left is a sidebar menu with options like Dashboard, Configuration, Security, Utilities, Monitoring (selected), Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLI Sessions, LLDP Status, GVRP Statistics, MLD Snooping Statistics, STP Statistics (selected), Dynamic ARP Inspection, DHCP Snooping, Port Statistics, System Maintenance, and Support. The main area is titled 'Monitoring / STP Statistics' and contains a table titled 'STP Statistics'. The table has columns for Port, Identifier (Priority/ID), Path Cost (Configured/Operational), Designated Root..., Root Path Cost, Designated Bridge, Configure BPDUs Rx, TCN BPDUs Rx, Configure BPDUs Tx, and TCN BPDUs Tx. The table lists 18 entries corresponding to ports 10GE1 through 10GE17 and LAG1 through LAG5, all showing 0/0 for Path Cost and 0 for all other metrics.

Port	Identifier (Priority/ID)	Path Cost (Configured/Operational)	Designated Root...	Root Path Cost	Designated Bridge	Configure BPDUs Rx	TCN BPDUs Rx	Configure BPDUs Tx	TCN BPDUs Tx
10GE1	128/1	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE2	128/2	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE3	128/3	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE4	128/4	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE5	128/5	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE6	128/6	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE7	128/7	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE8	128/8	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE9	128/9	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE10	128/10	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE11	128/11	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
10GE12	128/12	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
LAG1	128/13	0 / 0	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
LAG2	128/14	0 / 20000	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
LAG3	128/15	0 / 20000	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
LAG4	128/16	0 / 20000	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0
LAG5	128/17	0 / 20000	0000 00 00 00 00 00	0	0000 00 00 00 00 00	0	0	0	0

Available settings are explained as follows:

Item	Description
<b>Refresh</b>	Click it to refresh the status page.
<b>Port</b>	Displays the interface number for GE and LAG.
<b>Identifier</b>	Displays the spanning tree port identifier.
<b>Path Cost</b>	Displays current path cost of given port.
<b>Designated Root Bridge</b>	Displays the identifier of designated root bridge.
<b>Root Path Cost</b>	Displays the operational root path cost.
<b>Designated Bridge</b>	Displays the identifier of next bridge on this port.
<b>Configure BPDUs Rx</b>	Displays the counts of the received CONFIG BPDU.
<b>TCN BPDUs Rx.</b>	Displays the counts of the received TCN BPDU.
<b>Configure BPDUs Tx.</b>	Displays the counts of the transmitted CONFIG BPDU.
<b>TCN BPDUs Tx</b>	Displays the counts of the transmitted TCN BPDU.

# V-10 Dynamic ARP Statistics

The screenshot shows the 'Monitoring / Dynamic ARP Inspection' page. The left sidebar contains a navigation menu with options like Dashboard, Configuration, Security, Utilities, Monitoring (selected), Log Center, Bandwidth Utilization, DHCP Table, Routing Table, CLU Sessions, LLDP Status, GVRP Statistics, MLD Snooping Statistics, STP Statistics, Dynamic ARP Inspection (selected), DHCP Snooping, Port Statistics, System Maintenance, and Support.

The main content area displays a table titled 'Dynamic ARP Inspection Statistics' with the following columns: Port, Forward, Source MAC Failure, Destination MAC F..., Source IP Validatio..., Destination IP Valid..., and IP-MAC Mismatch ... . The table lists 16 ports (10GE1 to LAG6) with all values set to 0.

Port	Forward	Source MAC Failure	Destination MAC F...	Source IP Validatio...	Destination IP Valid...	IP-MAC Mismatch ...
10GE1	0	0	0	0	0	0
10GE2	0	0	0	0	0	0
10GE3	0	0	0	0	0	0
10GE4	0	0	0	0	0	0
10GE5	0	0	0	0	0	0
10GE6	0	0	0	0	0	0
10GE7	0	0	0	0	0	0
10GE8	0	0	0	0	0	0
10GE9	0	0	0	0	0	0
10GE10	0	0	0	0	0	0
10GE11	0	0	0	0	0	0
10GE12	0	0	0	0	0	0
LAG1	0	0	0	0	0	0
LAG2	0	0	0	0	0	0
LAG3	0	0	0	0	0	0
LAG4	0	0	0	0	0	0
LAG5	0	0	0	0	0	0
LAG6	0	0	0	0	0	0

# V-10 DHCP Snooping

The screenshot shows the V-10 web interface with a sidebar menu on the left and a main monitoring page on the right.

**Left Sidebar:**

- Dashboard
- Configuration
  - Security
  - Utilities
- Monitoring
  - Log Center
  - Bandwidth Utilization
  - DHCP Table
  - Routing Table
  - CLI Sessions
  - LLDP Status
  - GVRP Statistics
  - MLD Snooping Statistics
  - STP Statistics
  - Dynamic ARP Inspection
  - DHCP Snooping
  - Port Statistics
- System Maintenance
- Support

**Right Main Page:**

### Monitoring / DHCP Snooping

#### DHCP Snooping Statistics

Port	Forward	Client Hardware Address	Untrust Port Drop	Untrust Port Drop With MAC	Invalid Drop
10GE1	0	0	0	0	0
10GE2	0	0	0	0	0
10GE3	0	0	0	0	0
10GE4	0	0	0	0	0
10GE5	0	0	0	0	0
10GE6	0	0	0	0	0
10GE7	0	0	0	0	0
10GE8	0	0	0	0	0
10GE9	0	0	0	0	0
10GE10	0	0	0	0	0
10GE11	0	0	0	0	0
10GE12	0	0	0	0	0
LAG1	0	0	0	0	0
LAG2	0	0	0	0	0
LAG3	0	0	0	0	0
LAG4	0	0	0	0	0
LAG5	0	0	0	0	0
LAG6	0	0	0	0	0

# V-10 Port Statistics

---

This page displays statistics for GE/LAG ports.

The screenshot shows the 'Monitoring / Port Statistics' page. On the left is a dark sidebar menu with various monitoring and configuration options. The main area is titled 'Port Error Statistics' and contains a table with 16 rows, each representing a port (10GE1 through 10GE11, LAG1 through LAG6). The columns represent various error metrics: inRunt, inGiants, inThrottles, inCRCs, inFrames, inOverruns, ignore, outUnderruns, outCollisions, outReset, and outBubbles. All values in the table are currently 0.

Port	inRunt	inGiants	inThrottles	inCRCs	inFrames	inOverruns	ignore	outUnderruns	outCollisions	outReset	outBubbles
10GE1	0	0	0	0	0	0	0	0	0	0	0
10GE2	0	0	0	0	0	0	0	0	0	0	0
10GE3	0	0	0	0	0	0	0	0	0	0	0
10GE4	0	0	0	0	0	0	0	0	0	0	0
10GE5	0	0	0	0	0	0	0	0	0	0	0
10GE6	0	0	0	0	0	0	0	0	0	0	0
10GE7	0	0	0	0	0	0	0	0	0	0	0
10GE8	0	0	0	0	0	0	0	0	0	0	0
10GE9	0	0	0	0	0	0	0	0	0	0	0
10GE10	0	0	0	0	0	0	0	0	0	0	0
10GE11	0	0	0	0	0	0	0	0	0	0	0
LAG1	0	0	0	0	0	0	0	0	0	0	0
LAG2	0	0	0	0	0	0	0	0	0	0	0
LAG3	0	0	0	0	0	0	0	0	0	0	0
LAG4	0	0	0	0	0	0	0	0	0	0	0
LAG5	0	0	0	0	0	0	0	0	0	0	0
LAG6	0	0	0	0	0	0	0	0	0	0	0

Available settings are explained as follows:

Item	Description
<b>Clear All</b>	Clear it to remove all logs displayed in this page.
<b>Refresh</b>	Click it to refresh the status page.
<b>Port</b>	Displays the port number (GE/LAG).

# Chapter VI System Maintenance



# VI-1 General

## VI-1-1 Device Info

This page displays general information (name, location and contact) for the VigorSwitch.


Available settings are explained as follows:

Item	Description
<b>Device Name</b>	Displays the name of this VigorSwitch. Change the name if required.
<b>Location</b>	Define the location of this VigorSwitch.
<b>Contact</b>	Define the contact information of this VigorSwitch.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-1-2 Time

This page allows a user to specify time and activate SNTP server manually.

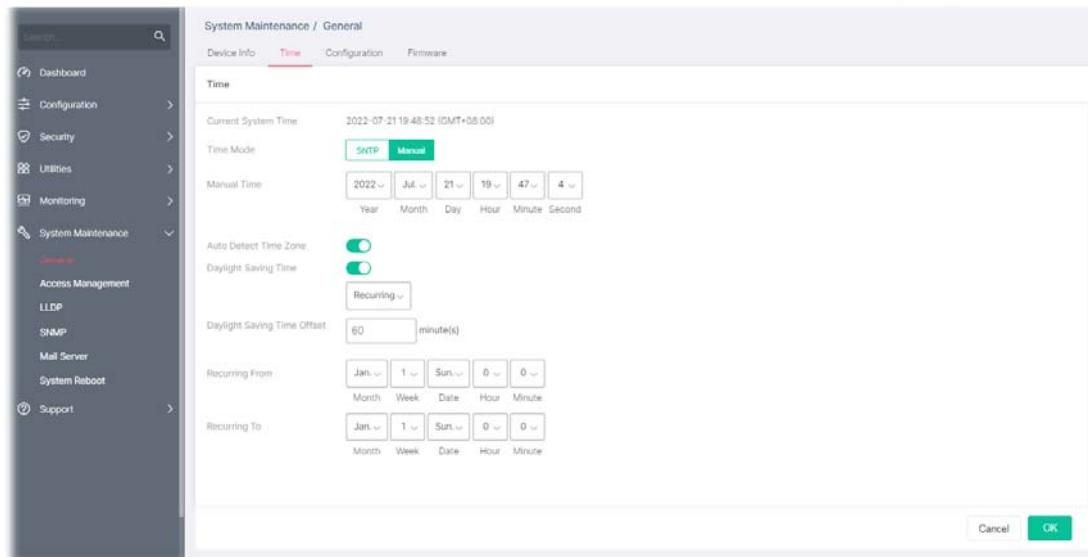

Available settings are explained as follows:

Item	Description
<b>Time</b>	
<b>Current System Time</b>	Display current system time based on the time server.
<b>Time Mode</b>	<p>Select <b>SNTP</b> or <b>Manual</b>.</p> <p>If SNTP is selected, configure:</p> <ul style="list-style-type: none"><li>● <b>SNTP/NTP Server</b> - Enter the web site of the time server or the IP address of the server.</li><li>● <b>Server Port</b> - Enter the port number use by the time server.</li></ul> <p>If Manual is selected, configure:</p> <ul style="list-style-type: none"><li>● <b>Manual Time</b> - Specify static time (year, month, day, hours, minutes and seconds) manually.</li></ul> <p><b>Auto Detect Time Zone</b> - Click the toggle to enable / disable this function.</p> <p> - means "Enable".</p> <p> - means "Disable".</p> <p><b>Daylight Saving Time</b> - Click the toggle to enable / disable this function. If enabled, select the mode of daylight saving time.</p> <ul style="list-style-type: none"><li>● <b>Recurring</b> - Using recurring mode of daylight saving time.</li><li>● <b>Non-Recurring</b> - Using non-recurring mode of daylight saving time.</li><li>● <b>USA</b> -Using daylight saving time in the United States that starts on the second Sunday of March and ends on the first Sunday of November.</li><li>● <b>European</b> - Using daylight saving time in the Europe that starts on the last Sunday.</li></ul>


when <b>Recurring</b> is selected	<b>Daylight Saving Time Offset</b> - Specify the adjust offset of daylight saving time.  <b>Recurring From</b> - Specify the starting time of recurring daylight saving time.  <b>Recurring To</b> - Specify the ending time of recurring daylight saving time.
when <b>Non-Recurring</b> is selected	<b>Daylight Saving Time Offset</b> - Specify the adjust offset of daylight saving time.  <b>Non-recurring From</b> - Specify the starting time of non-recurring daylight saving time.  <b>Non-recurring To</b> - Specify the ending time of recurring daylight saving time.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-1-3 Configuration

Configuration Backup allows a user to backup the firmware image or configuration file on the switch to remote TFTP server or host file system through HTTP protocol.

Configuration Restore allows a user to upgrade the firmware image or configuration file on the switch to remote TFTP server or host file system through HTTP protocol.

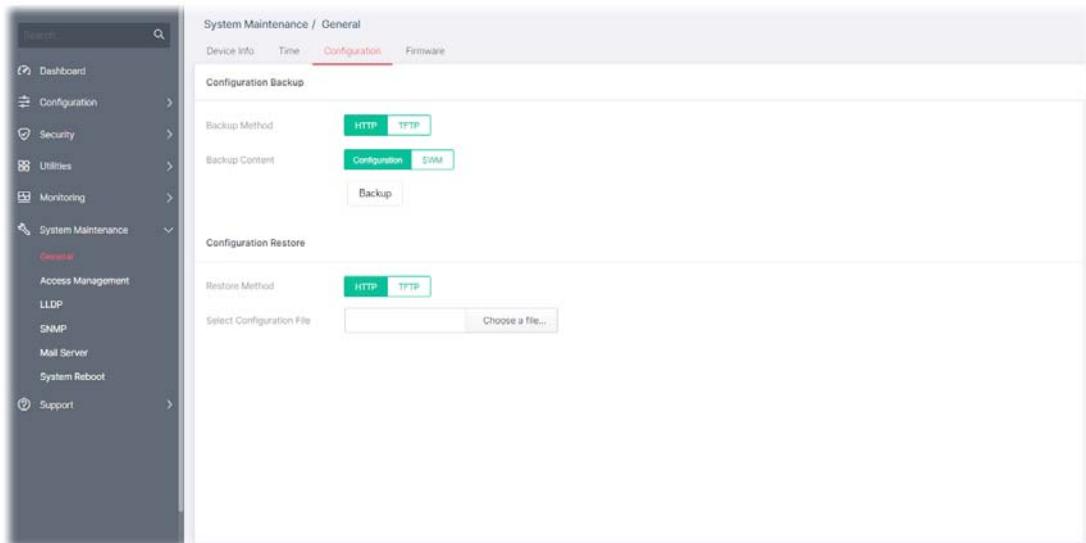


Available settings are explained as follows:

Item	Description
<b>Configuration Backup</b>	
<b>Backup Method</b>	Select Backup method. <b>HTTP</b> - Use WEB browser to backup firmware. <b>TFTP</b> - Use TFTP to backup firmware. <ul style="list-style-type: none"><li>● <b>Server IP Address</b> - Enter the IPv4/IPv6 address for the TFTP server.</li></ul>
<b>Backup Content</b>	
<b>Restore Method</b>	<b>Backup</b> - Make a backup copy for the configurations/SWM for VigorSwitch.
<b>Configuration Restore</b>	
<b>Restore Method</b>	Select <b>Restore</b> method. <b>HTTP</b> - Use WEB browser to restore firmware. <ul style="list-style-type: none"><li>● <b>Select Configuration File</b> - Choose the file which will be used to restore the configuration settings.</li><li><b>TFTP</b> - Use TFTP to restore firmware.</li><li>● <b>Server IP Address</b> - Enter the IPv4/IPv6 address for the TFTP server.</li><li>● <b>File Name</b> - Enter the firmware image or configuration file name on the TFTP server.</li></ul>

After finishing this web page configuration, please click **OK** to save the settings.

## VI-1-4 Firmware

This page allows a user to upgrade the firmware image or configuration file on the switch to remote TFTP server or host file system through HTTP protocol.

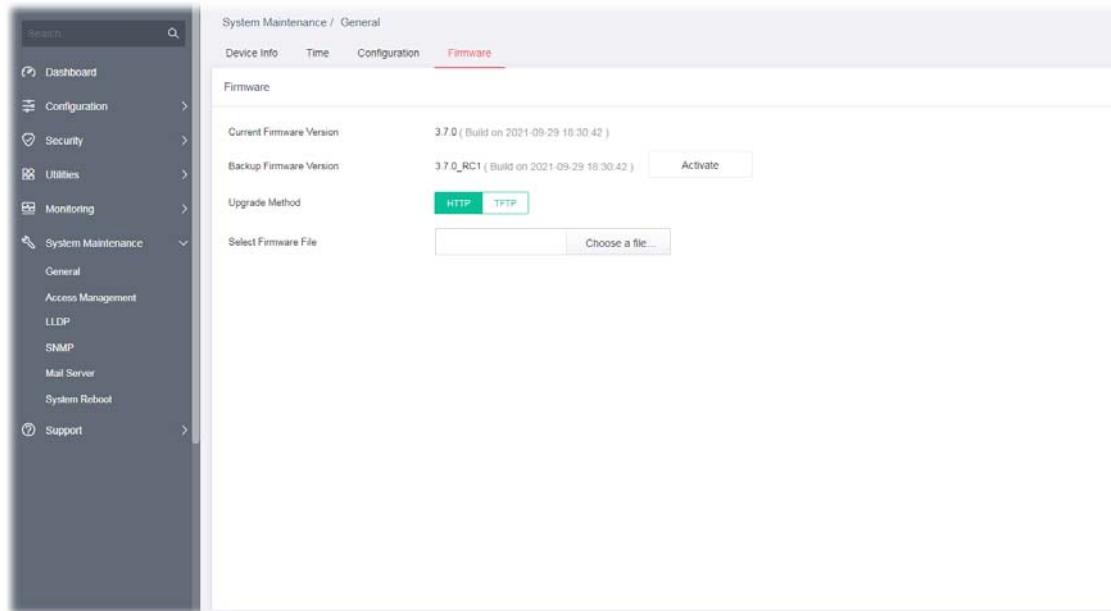

Available settings are explained as follows:

Item	Description
<b>Firmware</b>	
<b>Current Firmware Version</b>	Displays current used firmware.
<b>Upgrade Method</b>	Select Upgrade method: <b>HTTP</b> - Use WEB browser to upgrade firmware. ● <b>Select Firmware File</b> - Choose the firmware file located in your computer. <b>TFTP</b> - Use TFTP to upgrade firmware. ● <b>Server IP Address</b> - Enter the IPv4/IPv6 address for the TFTP server. ● <b>File Name</b> - Enter the firmware image or configuration file name on the TFTP server.


After finishing this web page configuration, please click **OK** to save the settings.

# VI-2 Access Management

## VI-2-1 LAN Access

The switch needs an IP address for it to be managed over the network. The factory default IP address is 192.168.1.224. The subnet mask specifies the network number portion of an IP address. The factory default subnet mask is 255.255.255.0.

Use the IP Address (IPv4/IPv6) screen to configure the switch IP address and the default gateway device. The gateway field specifies the IP address of the gateway (next hop) for outgoing traffic. In addition, this page allows the network administrator to change the VLAN ID of management access. Management access protocols such as http, https, SNMP and etc., are only accessible from the VLAN specified as management VLAN.

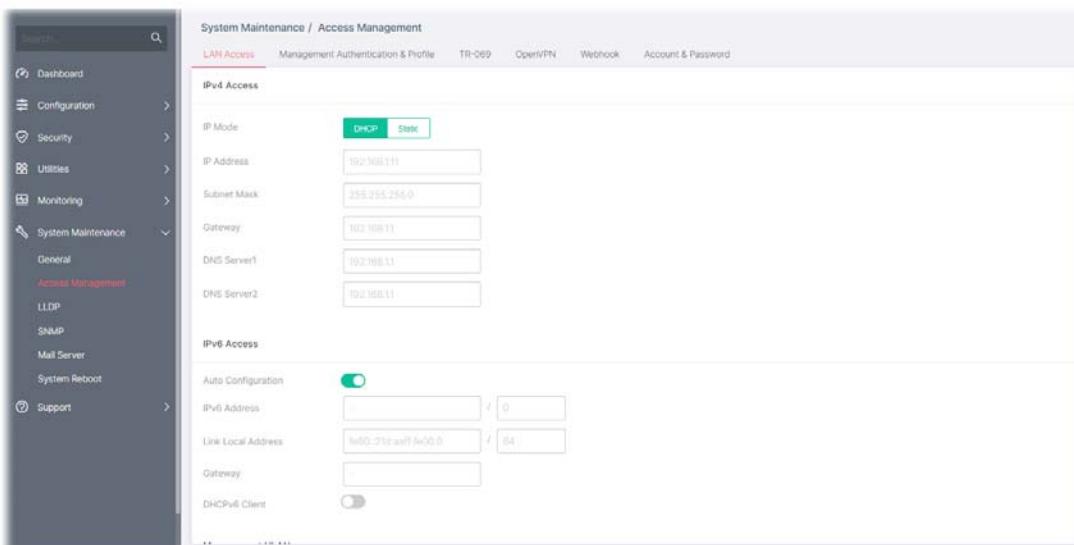

Available settings are explained as follows:

Item	Description
<b>IPv4 Access</b>	
<b>IP Mode</b>	Select the mode of network connection. <b>DHCP</b> - Use static IPv4 address. <b>Static</b> - Use DHCP provisioned IP address and Gateway if feasible. <ul style="list-style-type: none"><li>● <b>IP Address</b> - Enter the IP address of your switch in dotted decimal notation for example 192.168.1.224. If static mode is enabled, enter IP address in this field.</li><li>● <b>Subnet Mask</b> - Enter the IP subnet mask of your switch in dotted decimal notation for example 255.255.255.0. If static mode is enabled, enter subnet mask in this field.</li><li>● <b>Gateway</b> - Enter the IP address of the gateway in dotted decimal notation. If static mode is enabled, enter gateway address in this field.</li><li>● <b>DNS Server1/2</b> - Enter primary/ secondary DNS server address in this field.</li></ul>

---


## IPv6 Access

<b>Auto Configuration</b>	<p><b>Enabled</b> - Let the switch automatically configure IPv6 address. Click the toggle to enable / disable this function.</p> <p> - means "Enable".</p> <p> - means "Disable".</p> <ul style="list-style-type: none"><li>● <b>DCHPv6 Client</b> - Enable this feature if there is a DCHPv6 server on your network for assigning IPv6 Address, instead of using Router Advertisement.</li></ul> <p><b>Disabled</b> -</p> <ul style="list-style-type: none"><li>● <b>IPv6 Address</b> - Enter the IPv6 address of your switch. If auto configuration mode is disabled, enter IPv6 address in this field.</li><li>● <b>Gateway</b> - Enter the IPv6 address of the router as your default IPv6 gateway to access IPv6 Internet or other IPv6 network.</li><li>● <b>DNS Server1/2</b> - Enter primary/ secondary DNS server address in this field.</li></ul>
<b>Management VLAN</b>	
<b>Management VLAN</b>	Select the VLAN ID as management VLAN.
<b>Protocol Access</b>	
<b>HTTP Server, HTTPS Server, Telnet Server, SSH Server, Enforce HTTPS Server</b>	Select the protocol(s) for remote access.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-2-2 Management Authentication & Profile

The system administrator can log in VigorSwitch from profiles defined on this page. All profiles will apply the configuration of management server(s) and authentication method(s) settings.

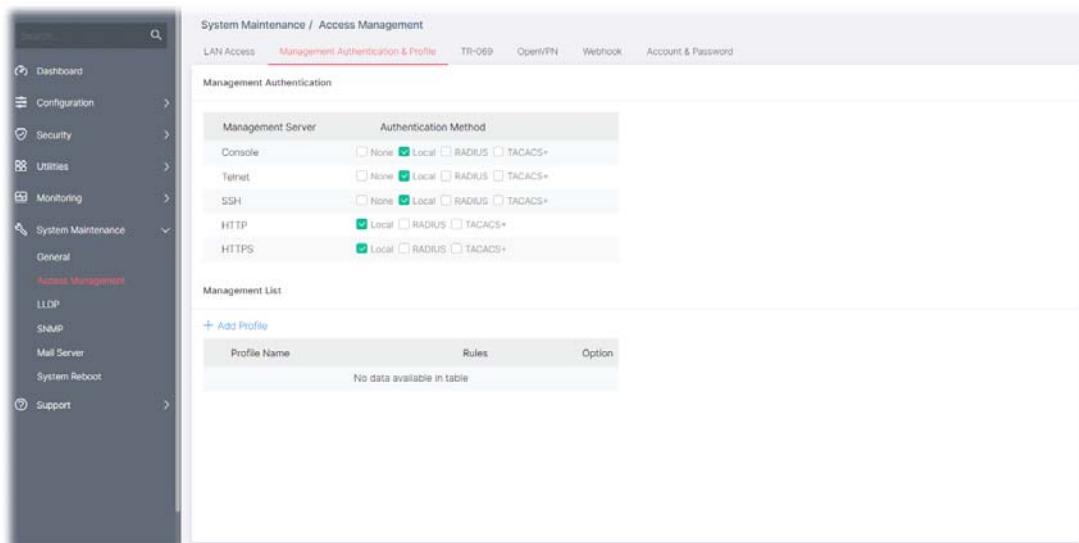

Available settings are explained as follows:

Item	Description
<b>Management Authentication</b>	
<b>Management Server</b>	Displays available servers set as management server.
<b>Authentication Method</b>	Displays available protocols for different management servers. Select one or more protocols for each server.
<b>Management List</b>	Displays a list of profiles that will apply the settings of server and authentication defined above. <b>+ Add Profile</b> - Click to create a new management profile.

To add a remote server, click the "**+Add Profile**" to open the edit page.

System Maintenance / Access Management

LAN Access    Management Authentication & Profile    TR-069    OpenVPN    Webhook    Account & Password

### Management Authentication

Management Server	Authentication Method
Console	<input type="checkbox"/> None <input checked="" type="checkbox"/> Local <input type="checkbox"/> RADIUS <input type="checkbox"/> TACACS+
Telnet	<input type="checkbox"/> None <input checked="" type="checkbox"/> Local <input type="checkbox"/> RADIUS <input type="checkbox"/> TACACS+
SSH	<input type="checkbox"/> None <input checked="" type="checkbox"/> Local <input type="checkbox"/> RADIUS <input type="checkbox"/> TACACS+
HTTP	<input checked="" type="checkbox"/> Local <input type="checkbox"/> RADIUS <input type="checkbox"/> TACACS+
HTTPS	<input checked="" type="checkbox"/> Local <input type="checkbox"/> RADIUS <input type="checkbox"/> TACACS+

### Management List

+ Add Profile	Profile Name	Rules	Option
	No data available in table		

### Add Profile

Profile Name

Profile Enabled

Rules

+ Add Rule

IP	Action	Port	Management	Priority	Option
No data available in table					

Cancel    OK

Available settings are explained as follows:


Item	Description										
<b>MANAGEMENT ACCESS PROFILE</b>											
<b>Profile Name</b>	Enter a name for an authentication profile.										
<b>Profile Enable</b>	Click the toggle to enable / disable this profile.  - means "Enable".  - means "Disable".										
<b>+Add Rule</b>	Click to create a rule.										
	<div style="border: 1px solid #ccc; padding: 10px; width: fit-content; margin: auto;"> <p>Add Rules</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;">IP Version</td> <td style="padding: 5px;"><input checked="" type="button"/> All <input type="button"/> IPv4 <input type="button"/> IPv6</td> </tr> <tr> <td style="padding: 5px;">Action</td> <td style="padding: 5px;"><input type="button"/> Deny <input checked="" type="button"/> Permit</td> </tr> <tr> <td style="padding: 5px;">Rule 1</td> <td style="padding: 5px;">Port <input type="button"/> 12 Selected <input type="button"/> X</td> </tr> <tr> <td style="padding: 5px;">Management</td> <td style="padding: 5px;"><input type="button"/> ALL <input type="button"/> ALL</td> </tr> <tr> <td style="padding: 5px;">Priority (1-65535)</td> <td style="padding: 5px;"><input type="button"/> HTTP <input type="button"/> Secure HTTP <input type="button"/> SNMP</td> </tr> </table> <p>+ Add Rule</p> </div>	IP Version	<input checked="" type="button"/> All <input type="button"/> IPv4 <input type="button"/> IPv6	Action	<input type="button"/> Deny <input checked="" type="button"/> Permit	Rule 1	Port <input type="button"/> 12 Selected <input type="button"/> X	Management	<input type="button"/> ALL <input type="button"/> ALL	Priority (1-65535)	<input type="button"/> HTTP <input type="button"/> Secure HTTP <input type="button"/> SNMP
IP Version	<input checked="" type="button"/> All <input type="button"/> IPv4 <input type="button"/> IPv6										
Action	<input type="button"/> Deny <input checked="" type="button"/> Permit										
Rule 1	Port <input type="button"/> 12 Selected <input type="button"/> X										
Management	<input type="button"/> ALL <input type="button"/> ALL										
Priority (1-65535)	<input type="button"/> HTTP <input type="button"/> Secure HTTP <input type="button"/> SNMP										
<b>IP Version</b> - Specify the IP address/subnet to which the ACL should be											

	<p>applied.</p> <ul style="list-style-type: none"> <li>● <b>All</b> – All the IP address should be applied.</li> <li>● <b>IPv4</b> – Specify the IPv4 address /subnet. Enter the IPv4 address/subnet to which the ACE rule should apply.</li> <li>● <b>IPv6</b> –Specify the IPv6 address /subnet. Enter the IPv6 address/subnet to which the ACE rule should apply.</li> </ul> <p><b>Action</b> - Select the action to be taken on the traffic of selected service type.</p> <ul style="list-style-type: none"> <li>● <b>Deny</b> – Incoming / outgoing data which meets ACE rules will be blocked.</li> <li>● <b>Permit</b> – Incoming / outgoing data which meets ACE rule is allowed to pass through.</li> </ul> <p><b>Port</b> - Select the ports to which the ACL profile should be applied.</p> <p><b>Management</b> - Specify a management server for this rule.</p> <p><b>Priority</b> - Specify a priority number (1 to 65535) for such rule. The lower the number, the higher the priority.</p>
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-2-3 TR-069

This page allows a user to configure TR-069 settings for connecting to VigorACS 3.

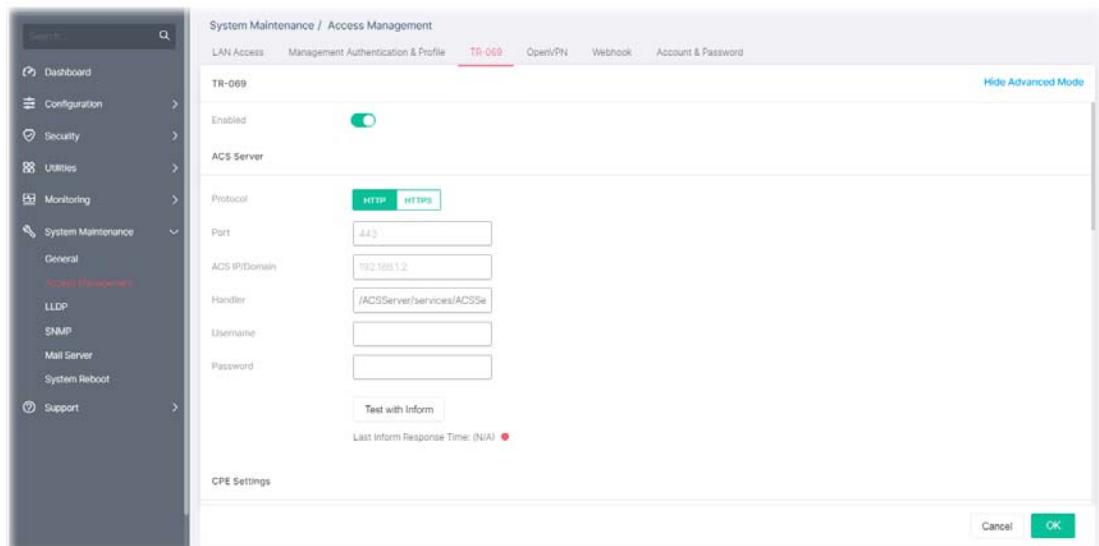

Available settings are explained as follows:


Item	Description
<b>Show/Hide Advanced Mode</b>	Click to display / hide the advanced mode settings.
<b>TR-069</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>Basic Mode - ACS Server</b>	
<b>ACS IP/Domain</b>	Enter the IP address or domain name of the server.
<b>Username</b>	Enter the username that you wan to link with the VigorACS (Auto Configuration Server).
<b>Password</b>	Enter the password that you wan to link with the VigorACS (Auto Configuration Server).
<b>Test with Inform</b>	Click to send a message to test if this CPE is able to communicate with VigorACS server.
<b>Advanced Mode - ACS Server</b>	
<b>Protocol</b>	Choose <b>HTTP</b> or <b>HTTPS</b> for connecting with VigorACS.
<b>Port</b>	Enter a value that VigorACS can use to access to this switch.
<b>ACS IP/Domain</b>	Enter the IP address or domain name of the server.
<b>Handler</b>	Enter the URL that you wan to link with the VigorACS (Auto Configuration Server).
<b>Username</b>	Enter the username that you wan to link with the VigorACS (Auto Configuration Server).

<b>Password</b>	Enter the password that you wan to link with the VigorACS (Auto Configuration Server).
<b>Test with Inform</b>	Click to send a message to test if this CPE is able to communicate with VigorACS server.
<b>CPE Settings</b>	
<b>CPE Client</b>	Choose <b>HTTP</b> or <b>HTTPS</b> for connecting with VigorACS.
<b>URL</b>	Display the URL of VigorSwitch
<b>Port</b>	Enter a value that VigorACS can use to access to this switch.
<b>Username</b>	Enter the username that VigorACS can use to access into this switch.
<b>Password</b>	Enter the password that VigorACS can use to access into this switch.
<b>TLS Version</b>	
<b>TLS Minimum Protocol Version</b>	Due to security consideration, the built-in HTTPS VPN server of the router had upgraded to TLS1.x protocol (TLS1.2/TLS1.3). Select one of the versions.
<b>Periodic Inform</b>	
<b>Enable</b>	Click the toggle to enable/disable the function.
<b>Interval Time</b>	Set the interval time for the switch to send notification to CPE.
<b>STUN Settings</b>	
<b>Enable</b>	Click the toggle to enable / disable this function.
<b>Server Address</b>	Enter the IP address of the STUN server.
<b>Server port</b>	Enter the port number of the STUN server.
<b>Minimum Keep Alive Period</b>	If the STUN server is enabled, the switch must send binding request to the server for the purpose of maintaining the binding in the Gateway. Please type a number as the minimum period. The default setting is "60 seconds".
<b>Maximum Keep Alive Period</b>	If the STUN server is enabled, the switch must send binding request to the server for the purpose of maintaining the binding in the Gateway. Please type a number as the maximum period. A value of "-1" indicates that no maximum period is specified.
<b>Notification</b>	
<b>Port Link Up/Down</b>	Vigor system will check the health status of LAN ports including link up /down, or speed change. Select LAN port(s) to do the health check of port link.
<b>Link Speed Change</b>	Select LAN port(s) to do the health check of speed change.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-2-4 OpenVPN

Devices connecting to VigorSwitch can transmit data to remote end via OpenVPN to ensure the information security.

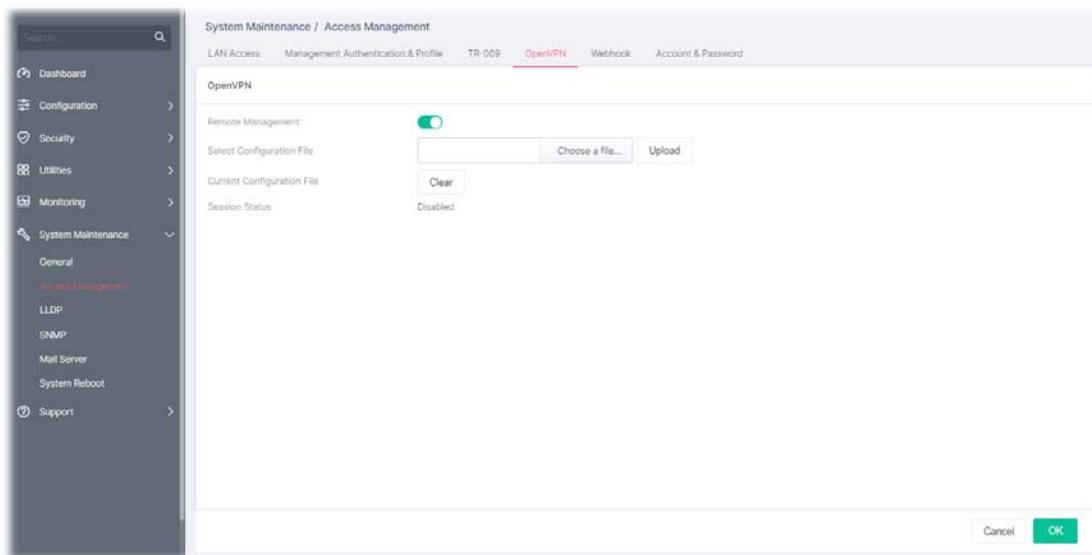


Available settings are explained as follows:

Item	Description
<b>Remote Management</b>	Click the toggle to enable / disable OpenVPN tunnel between VigorSwitch with the remote end. - means "Enable". - means "Disable".
<b>Select Configuration File</b>	It is available when remote management is enabled. As a VPN client, please import the OpenVPN config file coming from OpenVPN server.
<b>Current Configuration File</b>	Click to remove current configuration file.
<b>Session Status</b>	Display current OpenVPN status (Disabled, Connecting or Success).

After finishing this web page configuration, please click **OK** to save the settings.

## VI-2-5 Webhook

Without getting any request, VigorSwitch will send the data (if available) that a user concerned to the specified URL (provided by remote client) automatically.

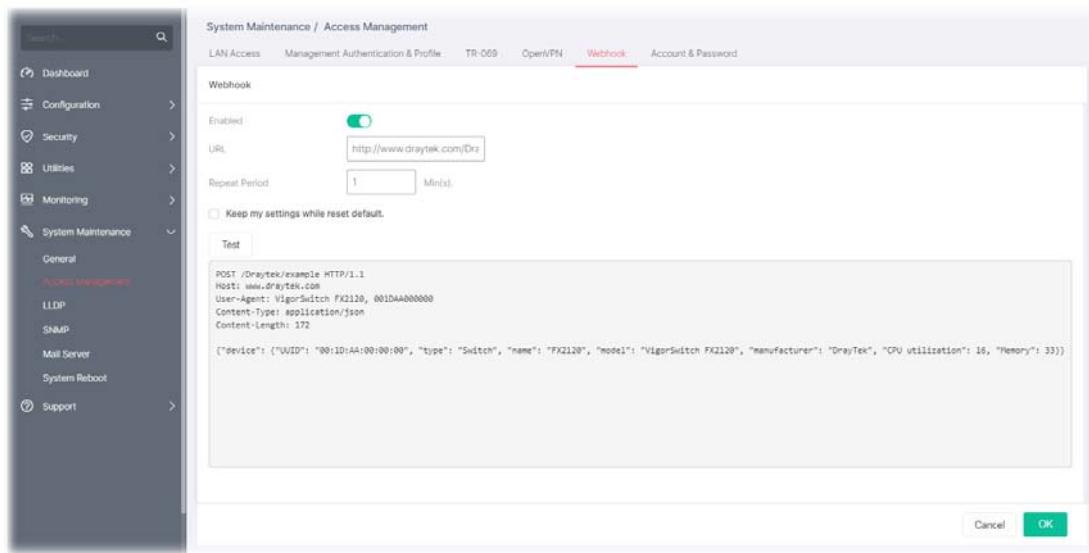


Available settings are explained as follows:

Item	Description
<b>Enable</b>	Click the toggle to enable / disable the webhook service. The data will be transmitted to the specified URL.  - means "Enable". - means "Disable".
<b>URL</b>	Specify the destination to receive the real-time data by entering the URL.  Please get the URL from the client who wants to obtain the newest and available data automatically from the Vigor switch.
<b>Repeat Period</b>	Set the transmission interval (unit is minute).
<b>Keep my settings while reset default</b>	Check the box to keep the webhook configuration when resetting VigorSwitch with default settings.
<b>Test</b>	Vigor system will send a test report to the remote address.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-2-6 Account & Password

This page allows a user to add or delete local user on switch database for authentication.

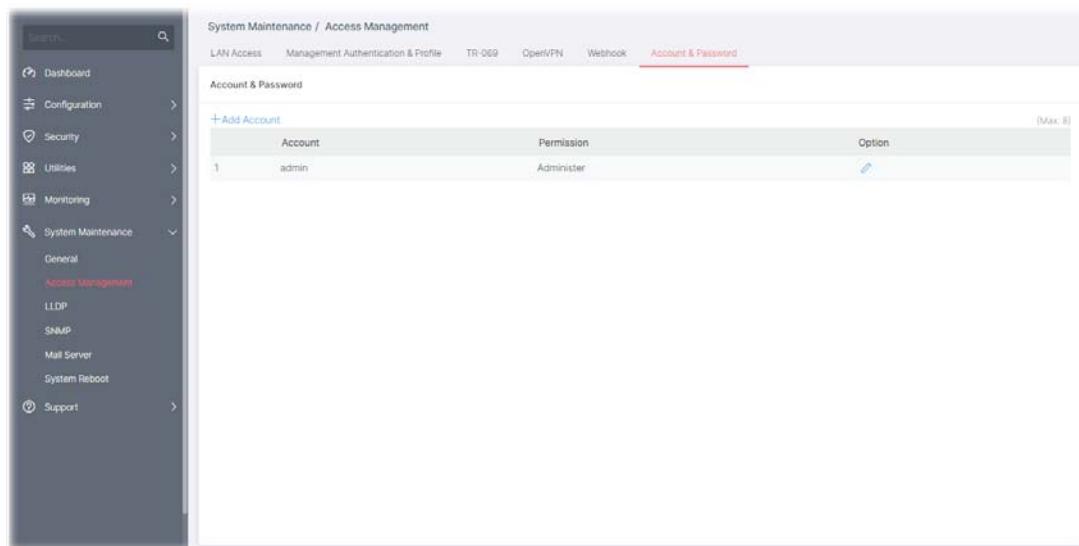


The screenshot shows the 'Account & Password' section of the system maintenance interface. On the left is a navigation sidebar with various options like Dashboard, Configuration, Security, Utilities, Monitoring, System Maintenance (General, Access Management, LLDP, SNMP, Mail Server, System Reboot), and Support. The main area has tabs for LAN Access, Management Authentication & Profile, TR-069, OpenVPN, Webhook, and Account & Password (which is selected). Below the tabs is a table titled '+ Add Account' with columns for Account, Permission, and Option. It contains one row with 'admin' in the Account column and 'Administer' in the Permission column. A blue edit icon is located in the Option column for the 'admin' row.

Available settings are explained as follows:

Item	Description
<b>+Add Account</b>	Click to create a new account (up to eight accounts).
<b>Account</b>	Displays the name of the account.
<b>Permission</b>	Displays the privilege level (Admin or View Only) of the account.
<b>Option</b>	 - Click to modify the account settings.

To modify an existing schedule profile, click the link of  of the one to be changed.

To add a schedule profile, click the "+ Add Account" to open the edit page.

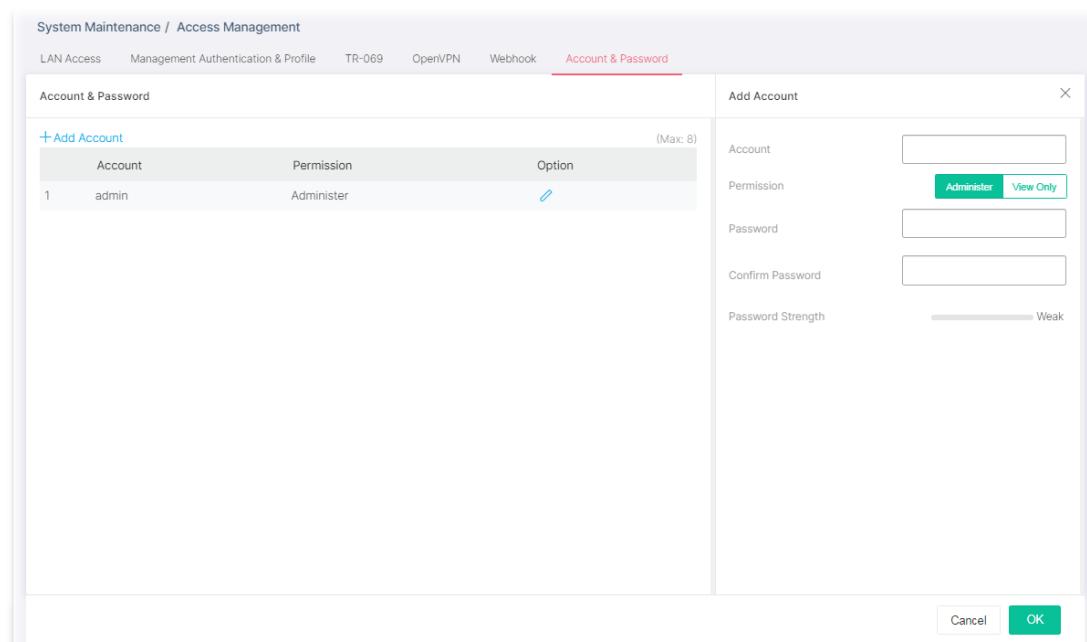

The screenshot shows the 'Add Account' dialog box. At the top right is a close button 'X'. The main area has fields for Account (containing 'admin'), Permission (set to 'Administer'), and Password (empty). There are also fields for Confirm Password and Password Strength (set to Weak). At the bottom are 'Cancel' and 'OK' buttons.

Available settings are explained as follows:

Item	Description
<b>Add Account</b>	
<b>Account</b>	Enter a username for new account. If you want to modify an existed user account, simply enter the same string in this field. Then, modify the password and choose privilege level. After clicking <b>Apply</b> , the existed user name will be modified with different values.
<b>Permission</b>	<b>Administer</b> - Allow to change switch settings. <b>View Only</b> - See switch settings only. Not allow to change it.
<b>Password</b>	Enter a password for new account.
<b>Confirm Password</b>	Enter the password again for confirmation.
<b>Password Strength</b>	Displays the strength of the password, indicated by the words "weak", "medium" or "strong".

After finishing this web page configuration, please click **OK** to save the settings.

## VI-3 LLDP

LLDP is a one-way protocol; there are no request/response sequences. Information is advertised by stations implementing the transmit function, and is received and processed by stations implementing the receive function. The LLDP category contains LLDP and LLDP-MED pages.

### VI-3-1 LLDP Port Setting

This page allows a user to select specified port or all ports to configure LLDP state.

Port	Status	Optional TLVs	VLAN	Option
10GE1	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE2	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE3	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE4	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE5	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE6	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE7	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE8	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE9	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE10	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE11	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE12	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the index number of GE ports (10GE1 to 10GE12).
<b>Status</b>	Displays the transmission of LLDP PDUs.
<b>Optional TLVs</b>	Displays the data communication protocols and optional information.
<b>VLAN</b>	Displays the VLAN ID number.
<b>Option</b>	- Click to modify the LLDP port settings of the selected port. - Clear current settings and return to factory default settings.

To modify the port settings for the selected port, click the link of of the one to be changed.

System Maintenance / LLDP

LLDP Port Setting    LLDP-MED Setting    LLDP Statistics

LLDP Port Setting				
Port	State	Optional TLVs	VLAN	Option
10GE1	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE2	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE3	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE4	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE5	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE6	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE7	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE8	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE9	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE10	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE11	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	
10GE12	Tx & Rx	System Name,Port Description,802.3 MAC-PHY	-	

Showing 1 to 12 of 12 entries

LLDP Port Setting

Port: 10GE1

LLDP Enabled:

Optional TLVs:

VLAN:

Cancel    OK

Available settings are explained as follows:

Item	Description
<b>Port</b>	Displays the index number of 10GE port.
<b>LLDP Enable</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable". <b>TX&amp;RX</b> – Transmit and receive LLDP PDUs both. <b>TX Only</b> – Transmit LLDP PDUs only. <b>RX Only</b> - Receive LLDP PDUs only.
<b>Optional TLVs</b>	Within data communication protocols, optional information may be encoded as a type-length-value or TLV element inside a protocol. TLV is also known as tag-length value. The type and length are fixed in size (typically 1-4 bytes), and the value field is of variable size. Select the LLDP optional TLVs to be carried (multiple selection is allowed). Available items include System Name, Port Description, System Description, System Capability, 802.3 MAC-PHY, 802.3 Link Aggregation, 802.3 Maximum Frame Size, Management Address and 802.1 PVID.
<b>VLAN</b>	Select the VLAN ID number to be performed (multiple selections are allowed).

After finishing this web page configuration, please click **OK** to save the settings.

## VI-3-2 LLDP-MED Setting

This page allows the network administrator to set MED (Media Endpoint Discovery) network policy and configure TLV (Type / Length / Value) settings for each port.

Policy ID	Policy Enabled	Application	VLAN ID	Tagged/Untagged	Priority	DSCP	Option
1	Disabled	Unknown	0	Untagged	0	0	
2	Disabled	Unknown	0	Untagged	0	0	
3	Disabled	Unknown	0	Untagged	0	0	
4	Disabled	Unknown	0	Untagged	0	0	
5	Disabled	Unknown	0	Untagged	0	0	
6	Disabled	Unknown	0	Untagged	0	0	
7	Disabled	Unknown	0	Untagged	0	0	
8	Disabled	Unknown	0	Untagged	0	0	
9	Disabled	Unknown	0	Untagged	0	0	
10	Disabled	Unknown	0	Untagged	0	0	

Port	Status	TLVs Selected	Network Policy	Location TLV Coordinate	Location TLV Civic	Location TLV ECS ELIN	Option
10GE1	Enabled	Network Policy					
10GE2	Enabled	Network Policy					

Available settings are explained as follows:

Item	Description
<b>Option</b>	- Click to modify the LLDP port settings of the selected policy. - Clear current settings and return to factory default settings.

### VI-3-2-1 MED Network Policy

To modify the port settings for the selected MED network policy, click the link of of the one to be changed.

Policy ID	Policy Enabled	Application	VLAN ID	Tagged/Untagged	Priority	DSCP
1	Disabled	Unknown	0	Untagged	0	0
2	Disabled	Unknown	0	Untagged	0	0
3	Disabled	Unknown	0	Untagged	0	0
4	Disabled	Unknown	0	Untagged	0	0
5	Disabled	Unknown	0	Untagged	0	0
6	Disabled	Unknown	0	Untagged	0	0
7	Disabled	Unknown	0	Untagged	0	0
8	Disabled	Unknown	0	Untagged	0	0
9	Disabled	Unknown	0	Untagged	0	0
10	Disabled	Unknown	0	Untagged	0	0

MED Network Policy  
 Policy ID: 2  
 Policy Enable:   
 Application: Unknown  
 VLAN (1-4094): 0  
 VLAN Tag: Untag  
 Priority (0-7): 0  
 DSCP (0-63): 0

Edit | Reset

Cancel OK


Available settings are explained as follows:

Item	Description
<b>Policy ID</b>	Choose a number for configuring the policy profile. Available selections include 1 to 32.
<b>Policy Enable</b>	Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>Application</b>	There are several applications which can be used for MED network. Selections include Voice, Voice Signaling, Guest Voice, Guest Voice Signaling, Softphone Voice, Video Conferencing, Stream Video and Video Signaling.
<b>VLAN</b>	Set a VLAN ID (ranging from 1 to 4094) for this profile.
<b>VLAN Tag</b>	Specify if the outgoing packets will be tagged or not. <b>Untag</b> - Packets will be sent out without any tag. <b>Tag</b> - Packets will be sent out with a number tagged.
<b>Priority</b>	Set Layer2 priority (range from 0 to 7).
<b>DSCP</b>	Set DSCP value (range from 0 to 63).
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

### VI-3-2-2 LLDP-MED Port Setting

To modify the port settings for the selected MED port setting, click the link of  of the one to be changed.

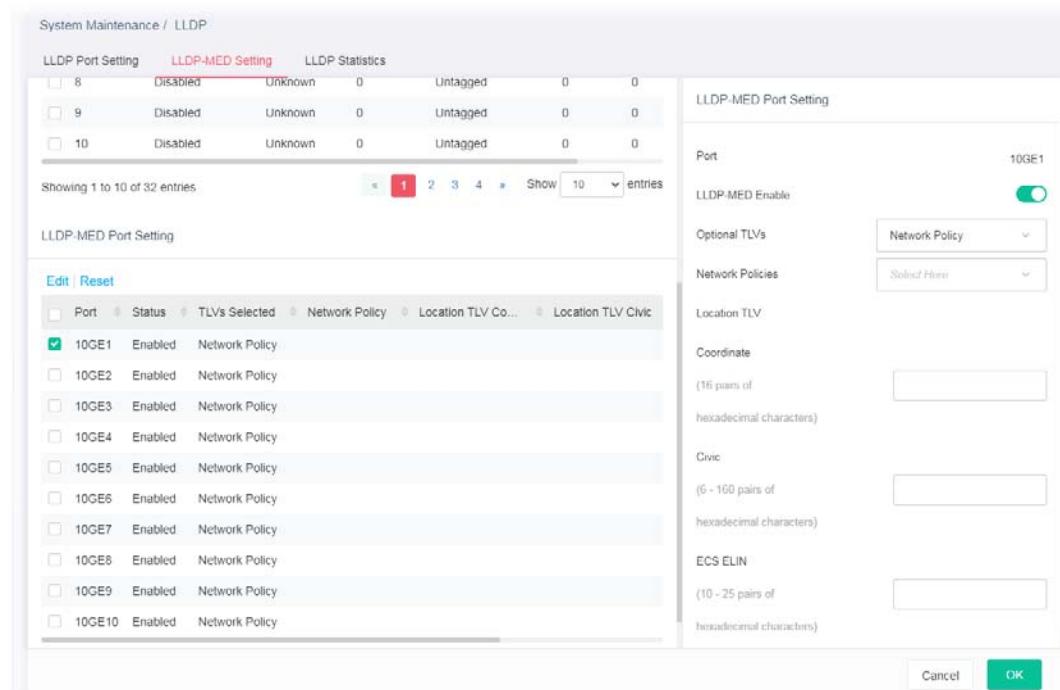

System Maintenance / LLDP					
LLDP Port Setting		LLDP-MED Setting		LLDP Statistics	
<input type="checkbox"/>	8	Disabled	Unknown	0	Untagged
<input type="checkbox"/>	9	Disabled	Unknown	0	Untagged
<input type="checkbox"/>	10	Disabled	Unknown	0	Untagged

Showing 1 to 10 of 32 entries

**LLDP-MED Port Setting**

**Edit | Reset**

Port	Status	TLVs Selected	Network Policy	Location TLV Co...	Location TLV Civic
<input checked="" type="checkbox"/> 10GE1	Enabled	Network Policy			
<input type="checkbox"/> 10GE2	Enabled	Network Policy			
<input type="checkbox"/> 10GE3	Enabled	Network Policy			
<input type="checkbox"/> 10GE4	Enabled	Network Policy			
<input type="checkbox"/> 10GE5	Enabled	Network Policy			
<input type="checkbox"/> 10GE6	Enabled	Network Policy			
<input type="checkbox"/> 10GE7	Enabled	Network Policy			
<input type="checkbox"/> 10GE8	Enabled	Network Policy			
<input type="checkbox"/> 10GE9	Enabled	Network Policy			
<input type="checkbox"/> 10GE10	Enabled	Network Policy			

**LLDP-MED Port Setting**

Port: 10GE1  
LLDP-MED Enable:

Optional TLVs: Network Policy  
Network Policies: Selected Home

Location TLV:  
Coordinate: (16 pairs of hexadecimal characters)  
Civic: (6 - 160 pairs of hexadecimal characters)  
ECS ELIN: (10 - 25 pairs of hexadecimal characters)

Buttons: Cancel, OK

Available settings are explained as follows:

Item	Description
<b>LLDP-MED Port Setting</b>	
<b>Port</b>	Displays the index number of 10GE port.
<b>LLDP-MED Enable</b>	Click the toggle to enable / disable the LLDP MED on the selected port.   - means "Enable".  - means "Disable".
<b>Optional TLVs</b>	There are three TLVs (Type / Length / Value) for choosing: <b>Location</b> , <b>Inventory</b> , <b>Network Policy</b> and <b>Select All</b> . Select the one(s) for this profile.
<b>Network Policies</b>	Select network policy profiles for applying onto the selected port.
<b>Location TLV Coordinate</b>	Enter the coordinate location in 16 pairs of hexadecimal characters.
<b>Civic</b>	Enter the civic address in 6 ~ 160 pairs of hexadecimal characters.
<b>ECS ELIN</b>	Enter the ECS (Emergency Call Service) ELIN (Emergency Location Identification Number) in 10 ~ 25 pairs of hexadecimal characters.
<b>OK</b>	Save the settings.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-3-3 LLDP Statistics

This page offers the statistics of LLDP packets (in, out and error) of each port (10GE1 to 10GE).

The screenshot shows the 'System Maintenance / LLDP' interface. The 'LLDP Statistics' tab is selected. Below it, there are three tabs: 'General Statistics', 'LLDP Device', and 'LLDP Overloading'. Under 'General Statistics', there are four counters: Insertions (1), Deletions (0), Drops (0), and Age Outs (0). Below these are two buttons: 'Clear All' and 'Refresh'. The main area displays a table for each port from 10GE1 to 10GE11. The columns are: Port, Total Tx Frames, Total Rx Frames, Discarded Rx Frames, Error Rx Frames, Discarded Rx TLVs, Unrecognized Rx TLVs, and Total Rx Age. All values for ports 10GE1 through 10GE10 are 0, while for 10GE11, Total Tx Frames is 28220, Total Rx Frames is 28118, and Total Rx Age is 0.

Port	Total Tx Frames	Total Rx Frames	Discarded Rx Frames	Error Rx Frames	Discarded Rx TLVs	Unrecognized Rx TLVs	Total Rx Age
10GE1	0	0	0	0	0	0	0
10GE2	0	0	0	0	0	0	0
10GE3	0	0	0	0	0	0	0
10GE4	0	0	0	0	0	0	0
10GE5	0	0	0	0	0	0	0
10GE6	0	0	0	0	0	0	0
10GE7	0	0	0	0	0	0	0
10GE8	0	0	0	0	0	0	0
10GE9	0	0	0	0	0	0	0
10GE10	0	0	0	0	0	0	0
10GE11	28220	28118	0	0	0	0	0

Available settings are explained as follows:

Item	Description
<b>Clear All</b>	Clear it to remove all logs displayed in this page.
<b>Refresh</b>	Click it to refresh the log.
<b>Port</b>	Displays the port number.

# VI-4 SNMP

Simple Network Management Protocol (SNMP) is an "Internet-standard protocol for managing devices on IP networks". Devices that typically support SNMP include routers, switches, servers, workstations, printers, modem racks and more.

SNMP is used mostly in network management systems to monitor network-attached devices for conditions that warrant administrative attention.

SNMP is a component of the Internet Protocol Suite as defined by the Internet Engineering Task Force (IETF). It consists of a set of standards for network management, including an application layer protocol, a database schema, and a set of data objects.

An SNMP-managed network consists of three key components:

- Managed device
- Agent - software which runs on managed devices
- Network management station (NMS) - software which runs on the manager

A managed device is a network node that implements an SNMP interface that allows unidirectional (read-only) or bidirectional (read and write) access to node-specific information. Managed devices exchange node-specific information with the NMSs. Sometimes called network elements, the managed devices can be any type of device, including, but not limited to, routers, access servers, switches, bridges, hubs, IP telephones, IP video cameras, computer hosts, and printers.

An agent is a network-management software module that resides on a managed device. An agent has local knowledge of management information and translates that information to or from an SNMP-specific form.

A network management station (NMS) executes applications that monitor and control managed devices. NMSs provide the bulk of the processing and memory resources required for network management. One or more NMSs may exist on any managed network.

## VI-4-1 View


This page allows the network administrator to create MIB views (Management information base) and then include or exclude OID (Object Identifier) in a view.

The screenshot shows a web-based network management interface. On the left is a sidebar with various navigation options: Dashboard, Configuration, Security, Utilities, Monitoring, System Maintenance (with sub-options General, Access Management, LLDP, and SNMP), Mail Server, System Reboot, and Support. The main content area is titled 'System Maintenance / SNMP'. At the top of this area, there are tabs: View (which is highlighted in red), Group, Community, User, Engine ID, and Trap Notification. Below the tabs, the word 'View' is displayed. Underneath is a table with a single row. The table has columns for 'View Name' and 'Option'. The 'View Name' column contains the value 'all'. There is also a checkbox in the first column of the table. At the bottom right of the table, there is a small 'Option' button.

Available settings are explained as follows:

Item	Description
<b>+Add View</b>	Click it to add a new MIB view profile.
<b>View Name</b>	Displays the name of the MIB view.

To add a schedule profile, click the "**+ Add View**" to open the edit page.

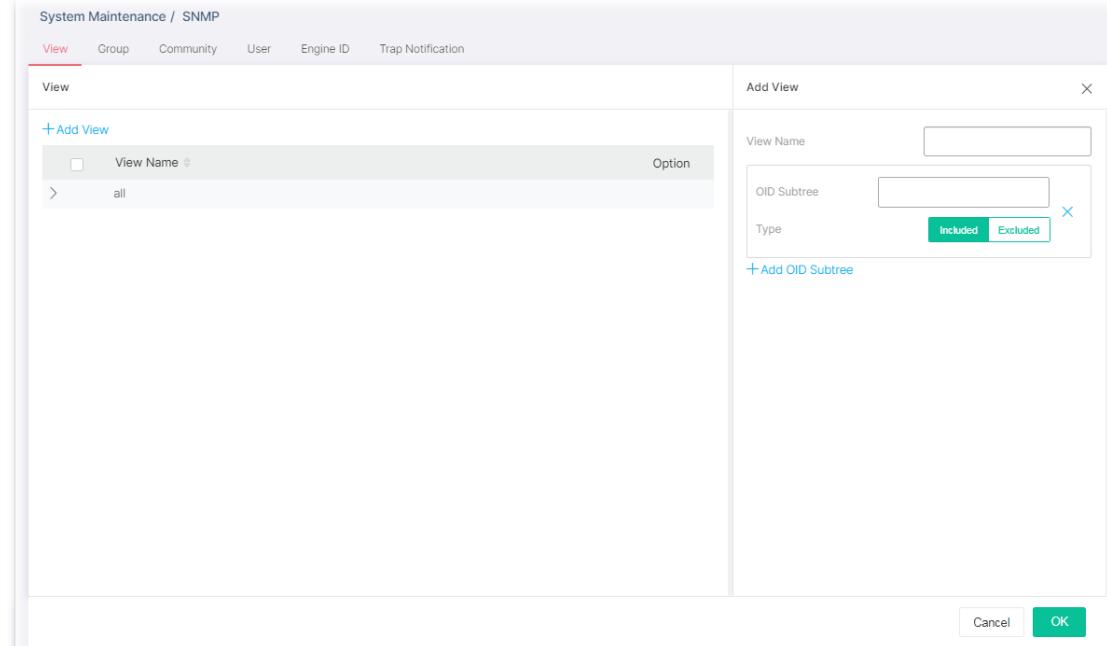

Available settings are explained as follows:

Item	Description
<b>View Name</b>	Enter a name of the MIB view.
<b>OID Subtree</b>	Enter an OID string to be included or excluded (based on the view type setting) from the MIB view.
<b>Type</b>	Determine to include or exclude the selected MIBs. <input checked="" type="radio"/> <b>Include</b> <input type="radio"/> <b>Exclude</b>
<b>+Add OID Subtree</b>	Click it to add a new MIB view profile.

After finishing this web page configuration, please click **OK** to save the settings.


## VI-4-2 Group

This page allows the network administrator to group SNMP users and assign different authorization and access privileges.

Available settings are explained as follows:

Item	Description
<b>+Add Group</b>	Click it to create a new group profile.
<b>Group Name</b>	Displays the name for the group.
<b>Version</b>	Displays the SNMP version adopted by the group.
<b>Security Level</b>	Displays the SNMP security level for the group.
<b>Read View</b>	Displays the read view profile.
<b>Write View</b>	Displays the write view profile.
<b>Notify View</b>	Displays the notify view profile.

To add a schedule profile, click the "+ Add Group" to open the edit page.

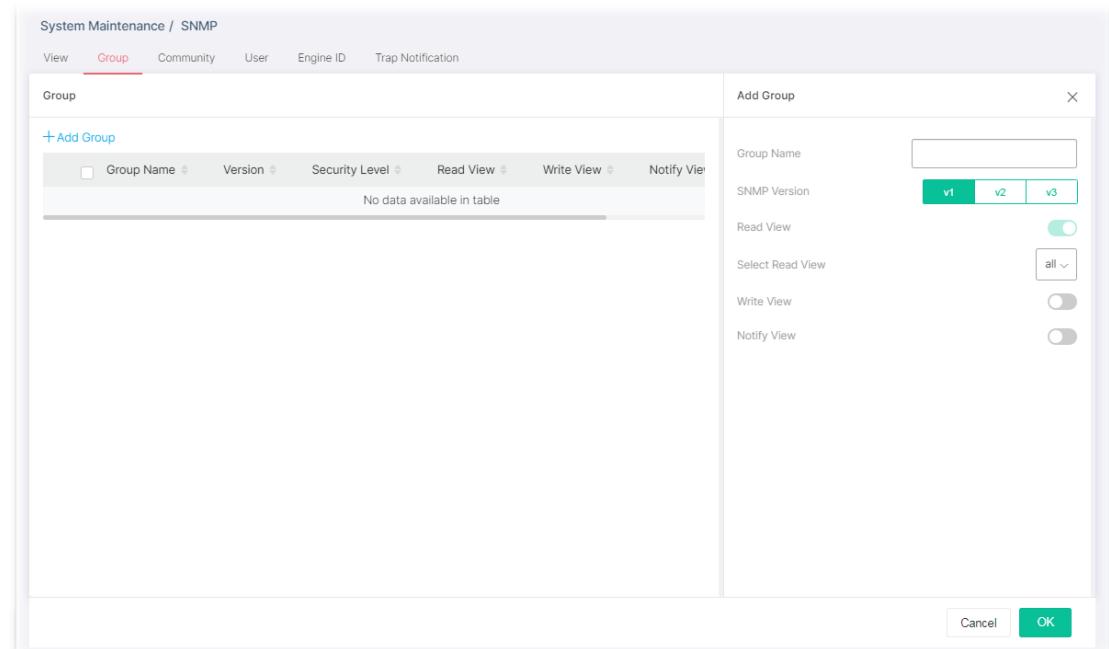

Available settings are explained as follows:

Item	Description
<b>Add Group</b>	
<b>Group Name</b>	Enter a name for the group.
<b>SNMP Version</b>	Specify SNMP version (v1, v2 or v3).
<b>Security Level</b>	<p>Specify SNMP security level for the group. It is available when <b>SNMPv3</b> is selected.</p> <ul style="list-style-type: none"> <li>● <b>No Security</b> – No authentication.</li> <li>● <b>Authentication</b> – Authentication without encryption will be performed for packets.</li> <li>● <b>Authentication and Privacy</b> – Authentication with encryption will be performed for packets.</li> </ul>
<b>Read View</b>	<p>Click the toggle to enable / disable this function. If it is enabled, users of this group have the right to read the selected MIB view.</p>  - means "Enable".  - means "Disable".
<b>Select Read View</b>	Use the drop down list to select one of the views. The default is "all", which means the group user can read all MIB views.
<b>Write View</b>	<p>Click the toggle to enable / disable this function. If it is enabled, users of this group have the right to write the selected MIB view.</p> <p><b>Select Write View</b> - Use the drop down list to select one of the views. The default is "all", which means the group user can write all MIB views.</p>
<b>Notify View</b>	Click the toggle to enable / disable this function. If it is enabled, users of this group have the right to send notifications for the selected MIB view.

**Select Notify View** - Use the drop down list to select one of the views. The default is "all", which means the group user have the right to send notification for all MIB views.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-4-3 Community

This page allows a user to add/remove multiple communities of SNMP.


	Community Name	Type	View	Group	Access Right	Option
1	public	Basic	all	-	Read & Write	

Available settings are explained as follows:

Item	Description
<b>+Add Community</b>	Click it to add a new community.
<b>Community Name</b>	Displays the community name.
<b>View</b>	Displays the view profile.
<b>Group</b>	Displays the name of the group.
<b>Access Right</b>	Displays the accessing right (read, read and write) that this community has.
<b>Option</b>	- Click to modify the settings of the community. - Remove the selected entry.

To modify an existing community profile, click the link of of the one to be changed.

To add a schedule profile, click the "**+ Add Community**" to open the edit page.

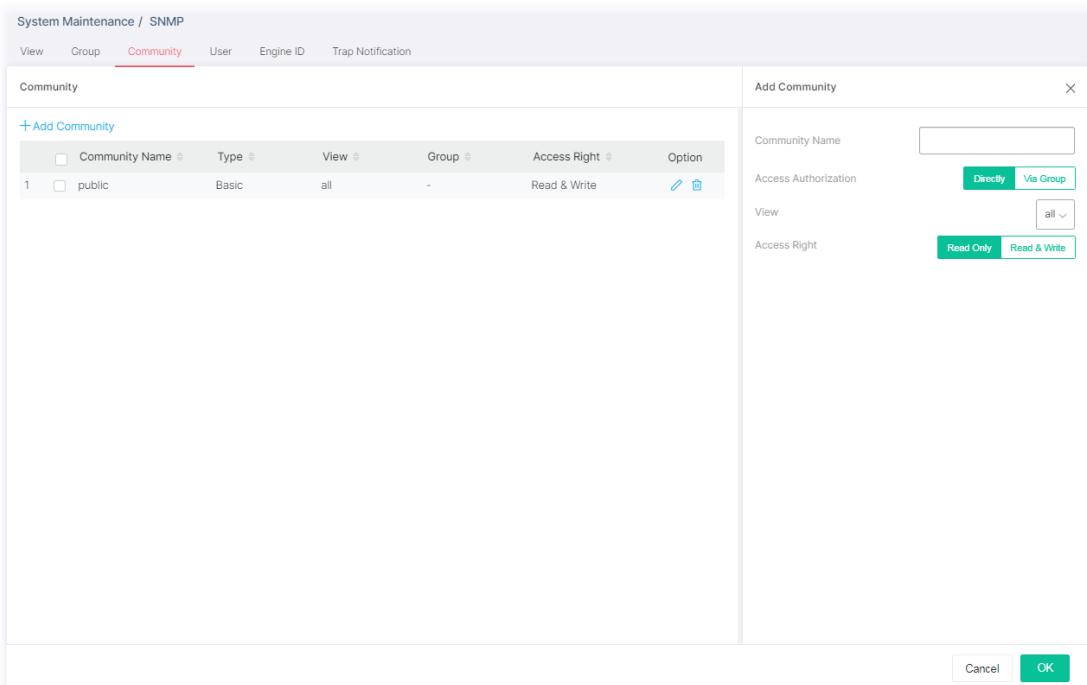


Available settings are explained as follows:

Item	Description
<b>Add Community</b>	
<b>Community Name</b>	Enter a name as community name. The maximum length of the text is limited to 23 characters.
<b>Access Authorization</b>	<b>Directly</b> - View and access right can be specified for this SNMP community profile. <b>Via Group</b> - Specify one of the SNMP groups for this SNMP community profile.
<b>View</b>	Simply specify one of the view profiles from the drop down list.
<b>Group</b>	It is available when <b>Via Group</b> is selected as access authorization. Specify a SNMP group to define the object available to the community.
<b>Access Right</b>	Define the access right of the community group. <b>Read Only</b> - It allows unidirectional access to node-specific information. <b>Read &amp; Write</b> - It allows bidirectional access to node-specific information.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-4-4 User

This page allows a user to configure SNMP user profile(s).

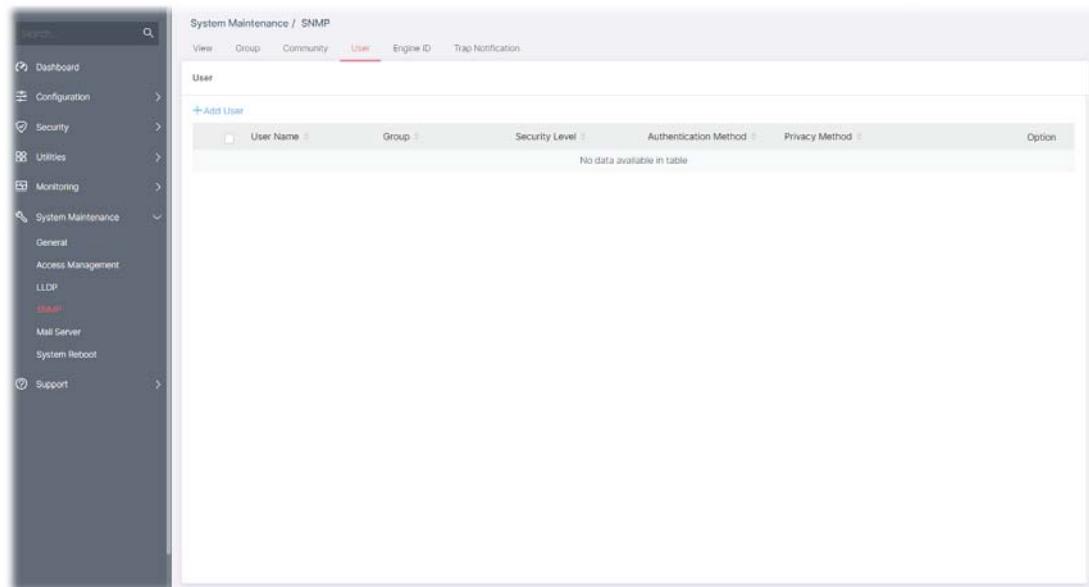


Available settings are explained as follows:

Item	Description
<b>+Add User</b>	Click it to add a new user profile.
<b>User Name</b>	Displays the name of this user profile.
<b>Group</b>	Displays the group name to which this user profile belongs.
<b>Security Level</b>	Displays the security method used by this user profile.
<b>Authentication Method</b>	Displays the authentication method used by this user profile.
<b>Privacy Method</b>	Displays the privacy method used by this user profile.
<b>Option</b>	 - Click to modify the settings of the community.  - Remove the selected entry.

To modify an existing user profile, click the link of  of the one to be changed.

To add a user profile, click the "+ Add User" to open the edit page.

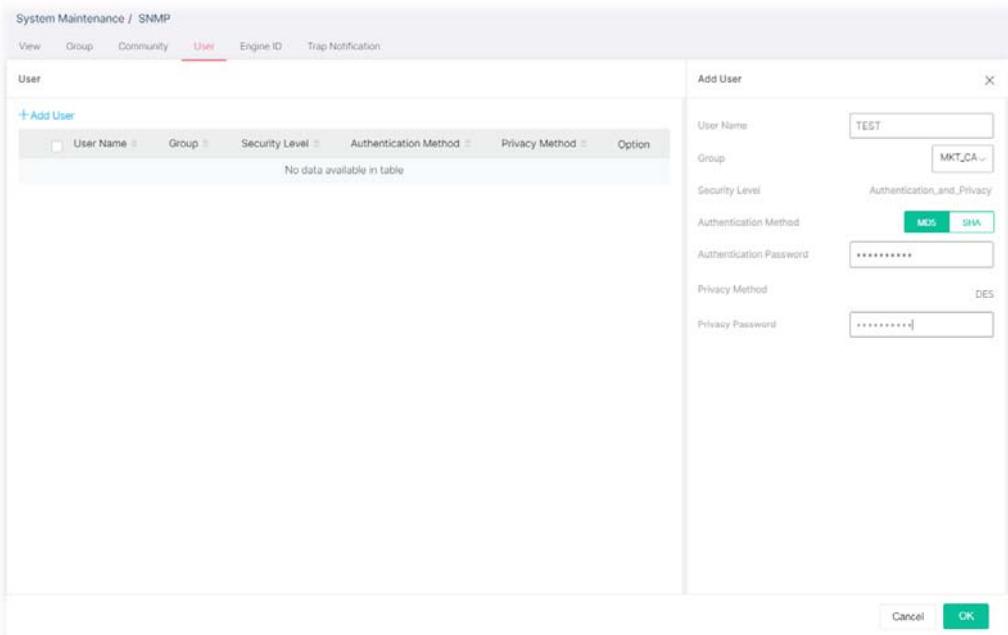

Available settings are explained as follows:

Item	Description
<b>Add User</b>	
<b>User Name</b>	Enter a name for creating new SNMP user.
<b>Group</b>	Select one of the <b>SNMPv3</b> groups from the drop down list. Then, this user profile will be grouped under the selected SNMP group. If there is no group profile here, please open <b>SNMP&gt;&gt;Group</b> page to set profiles (at least one) first.
<b>Security Level</b>	Displays the security level configured for the selected SNMP group. If the selected group is not a <b>SNMPv3</b> group, nothing will be displayed in this field.
<b>For SNMPv3 group only</b>	
<b>Authentication Method</b>	It is available only when the Security Level is set with "Authentication", or "Authentication_and_Privacy". You can change the methods (None, MD5, SHA) for the selected SNMPv3 group. If no method is available for you to select, that means the selected SNMPv3 group is set with No Security.
<b>Authentication Password</b>	It is available only when the Security Level is set with "Authentication", or "Authentication_and_Privacy". Enter a string as the password for authentication.
<b>Privacy Method</b>	It is available only when the Security Level is set with "Authentication_and_Privacy". You can change the methods (None, DES) for the selected SNMPv3 group. If no method is available for you to select, that means the selected SNMPv3 group is set with No privacy.
<b>Privacy Password</b>	It is available only when the Security Level is set with "Authentication_and_Privacy". Enter a string as the password for authentication.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-4-5 Engine ID

This page allows a user to configure and display SNMP local and remote engine ID.


The screenshot shows the 'System Maintenance / SNMP' interface. The left sidebar includes options like Dashboard, Configuration, Security, Utilities, Monitoring, System Maintenance (General, Access Management, LLDP, SNMP, Mail Server, System Reboot), and Support. The main tab 'Engine ID' is selected. The 'Local' section has a 'User Defined' toggle switch (which is off) and an 'Engine ID' input field containing '8000fa52030010ea000000'. The 'Remote' section shows a table with one entry: '1' (checkbox checked), '192.168.1.50' (Server), and '8000fa52030010ea000000' (Engine ID). There is an 'Option' column with edit and delete icons.

Available settings are explained as follows:

Item	Description
<b>Local</b>	
<b>User Defined</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>Engine ID</b>	Displays the engine ID of the local server. The default Engine ID which is made up of MAC and Enterprise ID will be used instead.
<b>Remote</b>	
<b>+Add Server</b>	Click it to create a new remote server profile.
<b>Server</b>	Displays the hostname/IP address of the server.
<b>Engine ID</b>	Displays the engine ID of the remote server.
<b>Option</b>	- Click to modify the server setting. - Clear the selected entry.

To modify an existing server profile, click the link of of the one to be changed.

To add a remote server profile, click the "**+ Add Server**" to open the page.

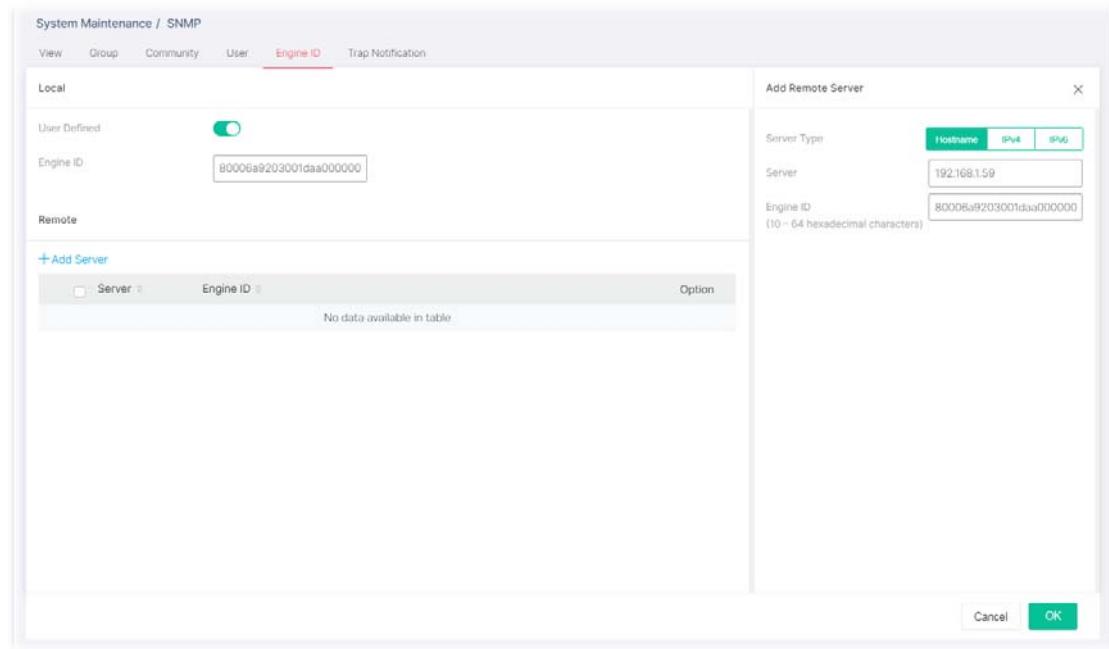

Available settings are explained as follows:

Item	Description
<b>Add Remote Server</b>	
<b>Server Type</b>	Specify the address type for entering hostname or IPv4/IPv6 address. <ul style="list-style-type: none"> <li><input checked="" type="radio"/> <b>Hostname</b></li> <li><input type="radio"/> <b>IPv4</b></li> <li><input type="radio"/> <b>IPv6</b></li> </ul>
<b>Server</b>	Enter the IP address or the hostname of the remote SNMP server.
<b>Engine ID</b>	Specify the engine ID for remote SNMP server. The engine ID ranges from 10 to 64 hexadecimal characters, and the hexadecimal number must be divided by "2".

After finishing this web page configuration, please click **OK** to save the settings.

## VI-4-6 Trap Notification

This page allows a user to add or delete the SNMP trap receiver IP address and community name. In addition, it allows a user to configure a host to receive SNMPv1/v2/ve notification.

Available settings are explained as follows:

Item	Description
<b>Trap Event</b>	
<b>Authentication Failure, Link Up/Down, Cold Start, Warm Start</b>	<p>Check the box to enable the function.</p> <p><b>Authentication Failure</b> - VigorSwitch will reboot when encountering authentication failure (including community not match or user password not match).</p> <p><b>Link Up/Down</b> - VigorSwitch will reboot while encountering port link up or down trap.</p> <p><b>Cold Start</b> - VigorSwitch will reboot while encountering user trap.</p> <p><b>Warm Start</b> - VigorSwitch will reboot while encountering power down trap.</p>
<b>Notification</b>	
<b>+Add Server</b>	Click it to create a new notification server profile.
<b>Server</b>	Displays IPv4/IPv6/Hostname of the SNMP trap recipients.
<b>Server Port</b>	Displays the UDP port number for the recipient's server.
<b>Version</b>	Displays the notification SNMP version.
<b>Notification Type</b>	Displays the notification type (Trap or Inform).
<b>Timeout</b>	Displays the number of SNMP informs timeout.
<b>Retry</b>	Displays the number of SNMP informs retry count.
<b>Community/User</b>	Displays the community profile.
<b>Security Level</b>	Displays the security level for SNMP notification packet.
<b>Option</b>	- Click to modify the setting page of the server profile. - Remove the selected entry.

To modify an existing server profile, click the link of of the one to be changed.

To add a user profile, click the "+ Add Server" to open the edit page.

The screenshot shows the 'Trap Event' configuration on the left, where several event types are selected for notification. On the right, a modal dialog titled 'Add Notification Server' is open, containing fields for Server Type (Hostname), Server Address (172.16.3.89), Server Port (162), SNMP Version (v3), User (CA), Security Level (Authentication & Privacy), and Notification Type (Trap). The 'OK' button at the bottom right of the dialog is highlighted.

Available settings are explained as follows:

Item	Description
<b>Add Notification Server</b>	
<b>Server Type</b>	Choose IPv4/IPv6/Hostname to specify IP address or the hostname of the SNMP trap recipients. <input type="radio"/> <b>Hostname</b> <input type="radio"/> <b>IPv4</b> <input type="radio"/> <b>IPv6</b>
<b>Server Address</b>	Specify SNMP notification version (SNMPv1/v2/v3).
<b>Server Port</b>	Specify a port number for the server.
<b>SNMP Version</b>	Specify SNMP notification version (SNMPv1/v2/v3).
<b>Community</b>	Use the drop down list to choose one of the community profiles.
<b>Notification Type</b>	Displays the notification type. To specify Notification Type, select v2 or v3 as SNMP Version. <input type="radio"/> <b>Trap</b> -Send SNMP traps to the host. <input type="radio"/> <b>Inform</b> - Send SNMP informs to the host. If it is used, Timeout and Retry also shall be defined.
<b>Timeout</b>	Specify the SNMP informs timeout. It is available when <b>Inform</b> is selected as <b>Type</b> .
<b>Retry</b>	Specify the SNMP informs retry count. It is available when <b>Inform</b> is selected as <b>Type</b> .
<b>User</b>	It is available when v3 is selected as SNMP Version.
<b>Security Level</b>	It is available when v3 is selected as SNMP Version. Specify SNMP security level for SNMP notification packet. It is available

---


when SNMPv3 is selected.

- **No Security** – No authentication.
  - **Authentication** – Authentication without encryption will be performed for packets.
  - **Authentication and Privacy** – Authentication with encryption will be performed for packets.
- 

After finishing this web page configuration, please click **OK** to save the settings.

## VI-5 Mail Server

This page allows a user to configure settings for VigorSwitch to send alert mail or Syslog mail when encountering certain situation.

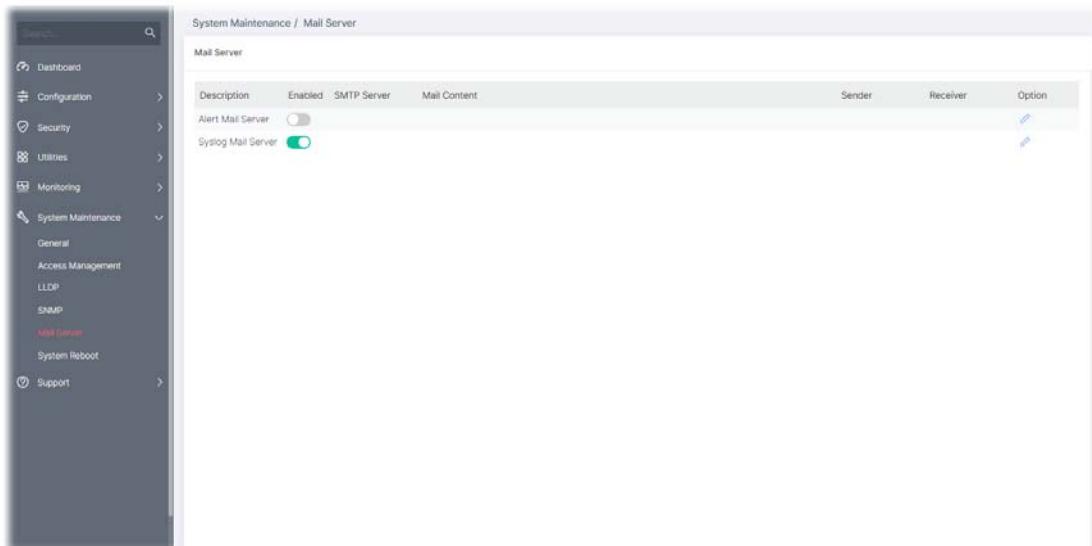


Available settings are explained as follows:

Item	Description
<b>Mail Server</b>	
<b>Description</b>	Displays the name of the mail server.
<b>Status</b>	Click the toggle to enable / disable this function. - means "Enable". - means "Disable".
<b>SMTP Server</b>	Displays the IP address / host of the SMTP server.
<b>Mail Content</b>	Displays the condition(s) for VigorSwitch system to send a mail out.
<b>Sender</b>	Displays the email address sending the alert/syslog mail.
<b>Receiver</b>	Displays the email address receiving the alert/syslog mail.
<b>Option</b>	- Click to modify the setting page of the server profile.

## Alert Mail Server

To modify the alert mail server profile, click the link of  of Alert Mail Server to be changed.

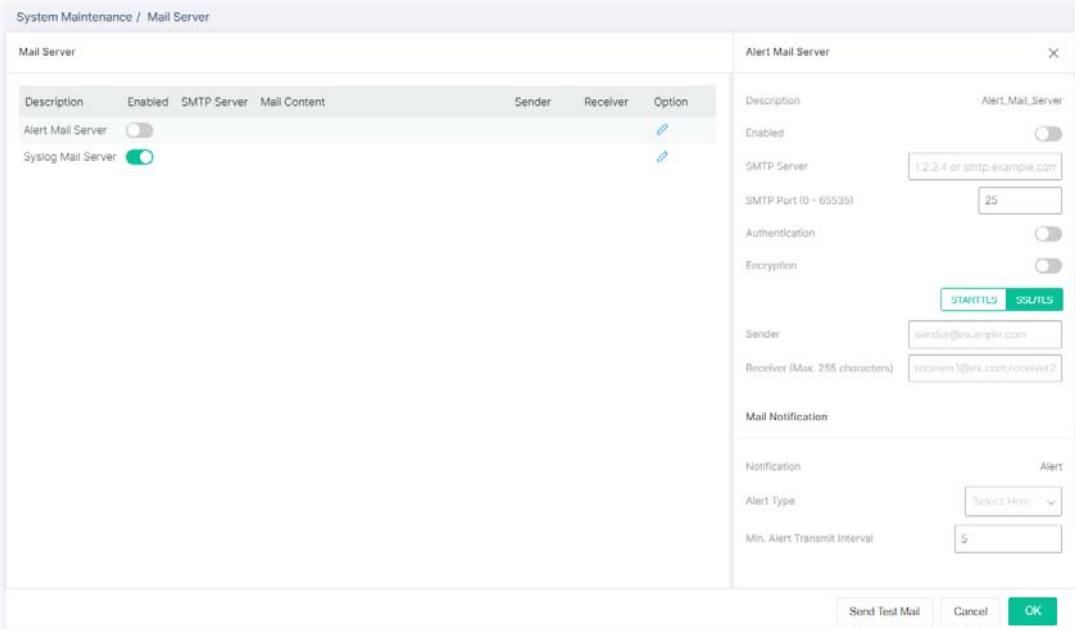

The screenshot shows a comparison between two mail server profiles: 'Mail Server' and 'Alert Mail Server'. The 'Mail Server' section lists 'Description', 'Enabled', 'SMTP Server', and 'Mail Content' with entries for 'Alert Mail Server' (Enabled) and 'Syslog Mail Server' (Enabled). The 'Alert Mail Server' section contains detailed configuration options:

- Description:** Alert\_Mail\_Server
- Enabled:** Enabled (checkbox)
- SMTP Server:** 1.2.3.4 or smtp.example.com
- SMTP Port (0 - 65535):** 25
- Authentication:** Enabled (checkbox)
- Encryption:** Enabled (checkbox)
  - STARTTLS:** Selected
  - SSL/TLS:** Unselected
- Sender:** sender@example.com
- Receiver (Max. 255 characters):** receiver1@ex.com, receiver2
- Mail Notification:**
- Notification:** Alert
- Alert Type:** Select from dropdown (e.g., Select Here)
- Min. Alert Transmit Interval:** 5

At the bottom are buttons for 'Send Test Mail', 'Cancel', and 'OK'.

Available settings are explained as follows:


Item	Description
<b>Alert Mail Server</b>	
<b>Description</b>	Displays the name (Alert or Syslog) of the mail server.
<b>Enabled</b>	Click the toggle to enable / disable the mail server.  - means "Enable".  - means "Disable".
<b>SMTP Server</b>	Enter IP address or URL of the SMTP server.
<b>SMTP Port</b>	Enter the port number for the SMTP server.
<b>Authentication</b>	Click the toggle to enable / disable this function. <ul style="list-style-type: none"> <li><b>User Name</b> - Enter a user name for authentication.</li> <li><b>Password</b> - Enter a password for authentication.</li> </ul>
<b>Encryption</b>	Click the toggle to enable / disable this function. After enabling Authentication, choose one of the encryption servers for data encryption. <ul style="list-style-type: none"> <li><b>STARTTLS</b> - The mail will be encrypted with StartTLS.</li> <li><b>SSL/TLS</b> - The mail will be encrypted with SSL/TLS.</li> </ul>
<b>Sender</b>	Enter the email address which will send the alert mail out.
<b>Receiver</b>	Enter the email address which will receive the alert mail.
<b>Mail Notification</b>	
<b>Alert Type</b>	Specify the condition(s) for VigorSwitch system to send an alert out. <ul style="list-style-type: none"> <li>Port Link Status</li> </ul>

	<ul style="list-style-type: none"> <li>● Port Link Speed</li> <li>● System Restarted</li> <li>● PoE Warning Status</li> </ul> <p>IP Conflict</p>
<b>Min. Alert Transmit Interval</b>	Set a time interval for VigorSwitch system to send an alert out from the specified sender.
<b>Send Test Mail</b>	After clicking this button, VigorSwitch system will send a test mail to the recipient.

After finishing this web page configuration, please click **OK** to save the settings.

### Syslog Mail Server

To modify the Syslog mail server profile, click the link of  of **Syslog Mail Server** to be changed.

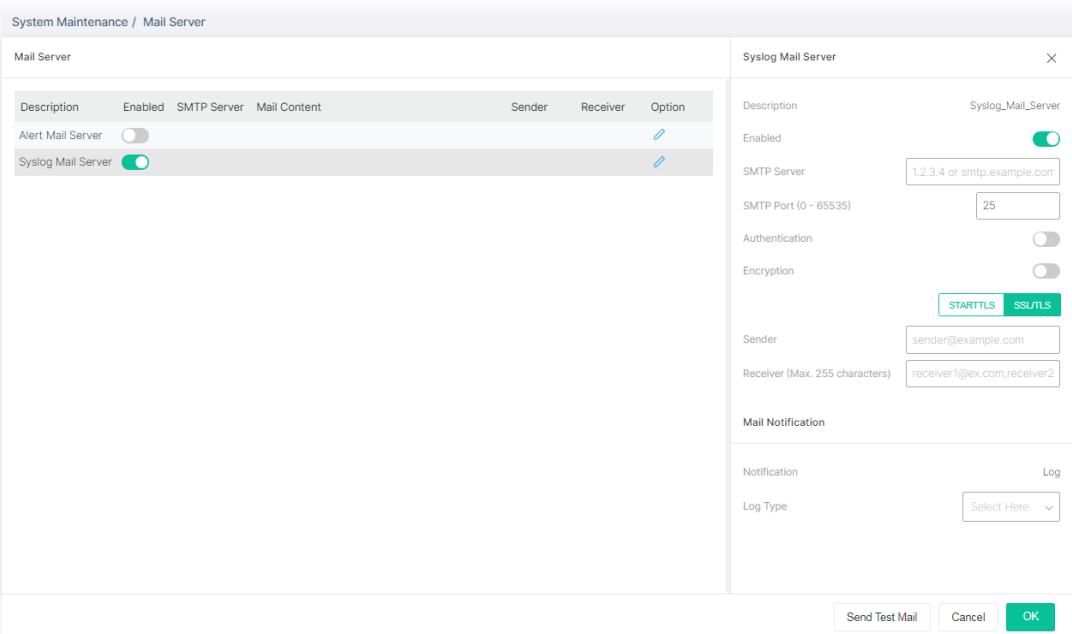

Available settings are explained as follows:


Item	Description
<b>Syslog Mail Server</b>	
<b>Description</b>	Displays the name (Alert or Syslog) of the mail server.
<b>Enabled</b>	Click the toggle to enable / disable this function.  - means "Enable".  - means "Disable".
<b>SMTP Server</b>	Enter IP address or URL of the SMTP server.
<b>SMTP Port</b>	Enter the port number for the SMTP server.
<b>Authentication</b>	Click the toggle to enable / disable this function. <ul style="list-style-type: none"> <li>● <b>User Name</b> - Enter a user name for authentication.</li> <li>● <b>Password</b> - Enter a password for authentication.</li> </ul>
<b>Encryption</b>	Click the toggle to enable / disable this function. After enabling Authentication, choose one of the encryption servers

	<p>for data encryption.</p> <ul style="list-style-type: none"> <li>● <b>STARTTLS</b> - The mail will be encrypted with StartTLS.</li> <li>● <b>SSL/TLS</b> - The mail will be encrypted with SSL/TLS.</li> </ul>
<b>Sender</b>	Enter the email address which will send the syslog mail out.
<b>Receiver</b>	Enter the email address which will receive the syslog mail.
<b>Mail Notification</b>	
<b>Log Type</b>	Vigor system will send the e-mail related to the selected feature(e.g., AAA, ACL) to the recipient.
<b>Send Test Mail</b>	After clicking this button, VigorSwitch system will send a test mail to the recipient.

After finishing this web page configuration, please click **OK** to save the settings.

## VI-6 System Reboot

This page allows you to reboot VigorSwitch with current settings or return to factory default settings for VigorSwitch.

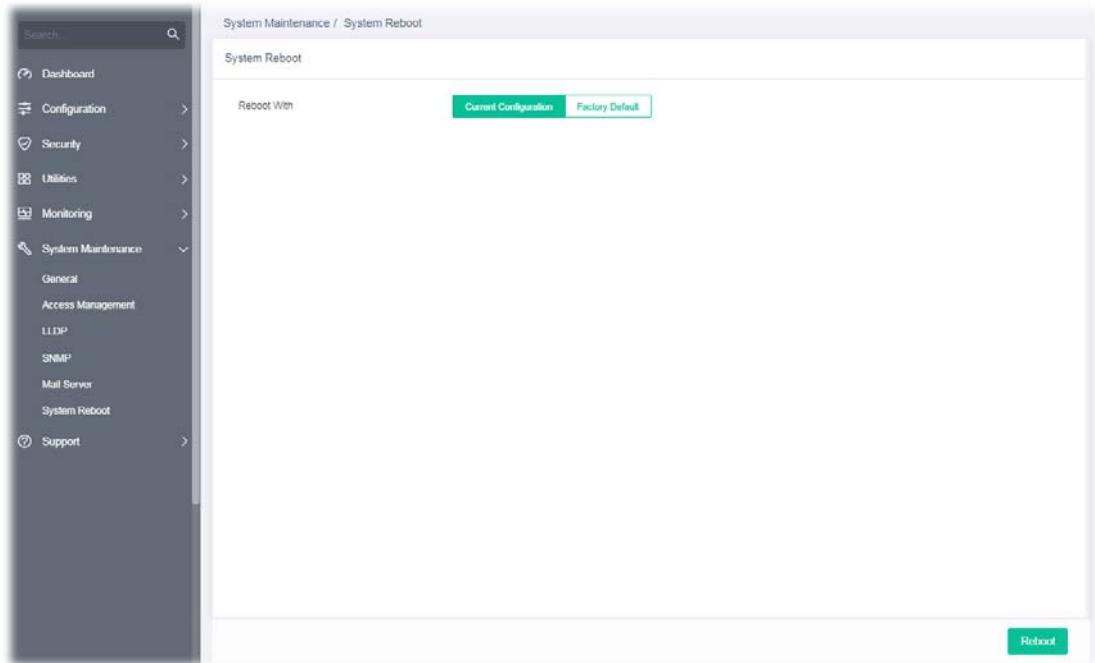


Available settings are explained as follows:

Item	Description
<b>System Reboot</b>	
<b>Reboot With</b>	<b>Current Configuration</b> - Use current configuration settings. <b>Factory Default</b> - Use the default configuration settings.
<b>Reboot</b>	Click to reboot the device immediately.

This page is left blank.

# Chapter VII Troubleshooting

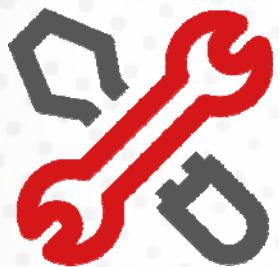

## VII-1 Backing to Factory Default Setting

---

Sometimes, a wrong connection can be improved by returning to the default settings. Try to reset the modem by software or hardware.

---

### **Warning:**


After pressing **factory default setting**, you will lose all settings you did before. Make sure you have recorded all useful settings before you pressing. The password of factory default is null.

---

### VII-1-1 Software Reset

You can reset the modem to factory default via Web page.

Go to **System Maintenance** and choose **System Reboot** on the web page. The following screen will appear. Choose **Factory Default** and click **OK**. After few seconds, the modem will return all the settings to the factory settings.

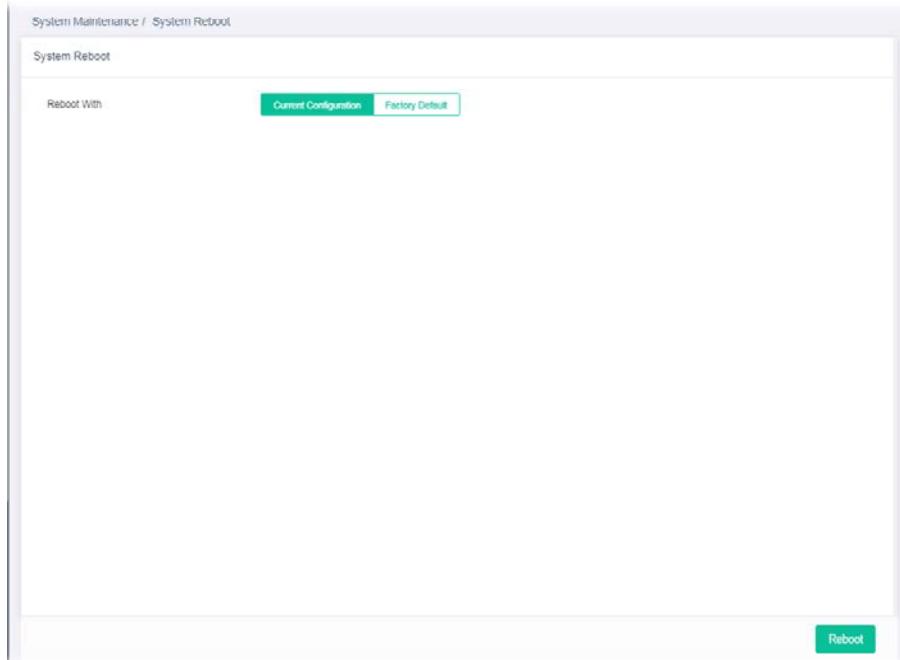

## VII-1-2 Hardware Reset

While the modem is running, press the **RST** button and hold for more than 5 seconds. When you see the **ACT** LED blinks rapidly, please release the button. Then, the modem will restart with the default configuration.



After restore the factory default setting, you can configure the settings for the modem again to fit your personal request.

## VII-2 Contacting DrayTek

---

If the modem still cannot work correctly after trying many efforts, please contact your dealer for further help right away. For any questions, please feel free to send e-mail to [support@draytek.com](mailto:support@draytek.com).

# Appendix Telnet Commands



## A-1 Accessing Telnet of Vigor Switch

---

This chapter also gives you a general description for accessing telnet and describes the firmware versions for the routers explained in this manual.


---

**(i) Note:**


For Windows 7 user, please make sure the Windows Features of Telnet Client has been turned on under Control Panel>>Programs.

---

Enter **cmd** and press Enter. The Telnet terminal will be open later.

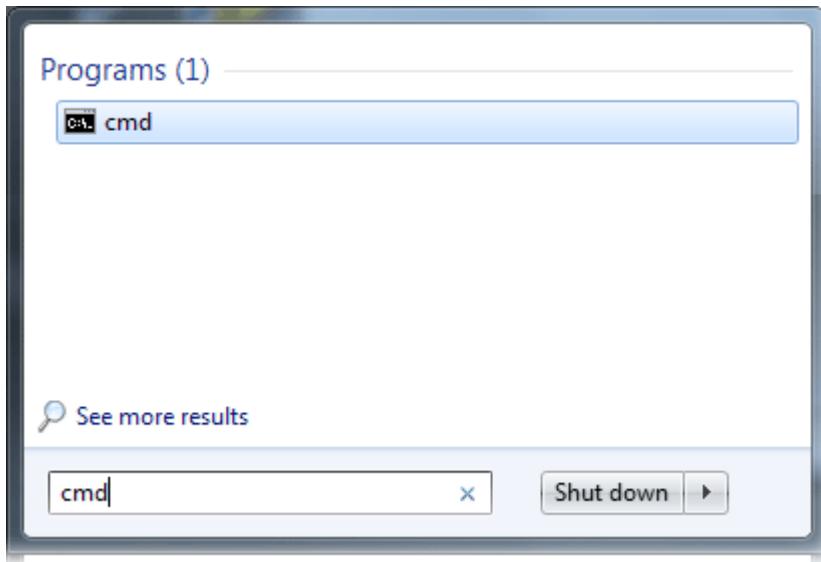

In the following window, type Telnet 192.168.1.224 as below and press Enter. Note that the IP address in the example is the default address of the router. If you have changed the default, enter the current IP address of the router and press Enter.

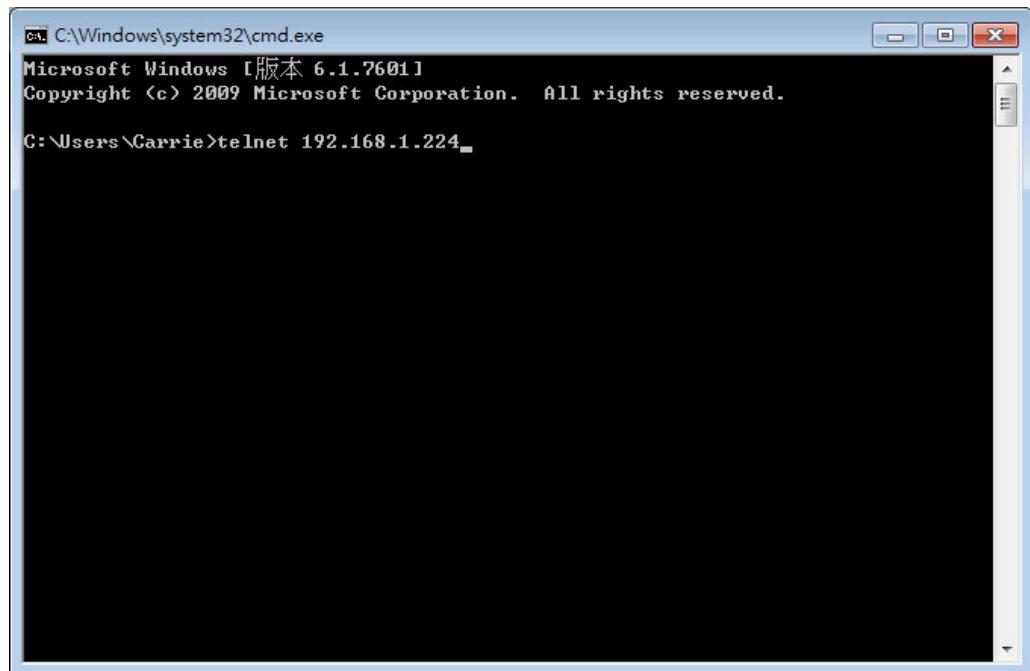

For users using previous Windows system (e.g., XP), simply click Start >> Run and type Telnet 192.168.1.224 in the Open box.


Next, enter admin/admin for Account/Password.



## A-2 Available Commands

---

Enter ? to get a list of available commands.

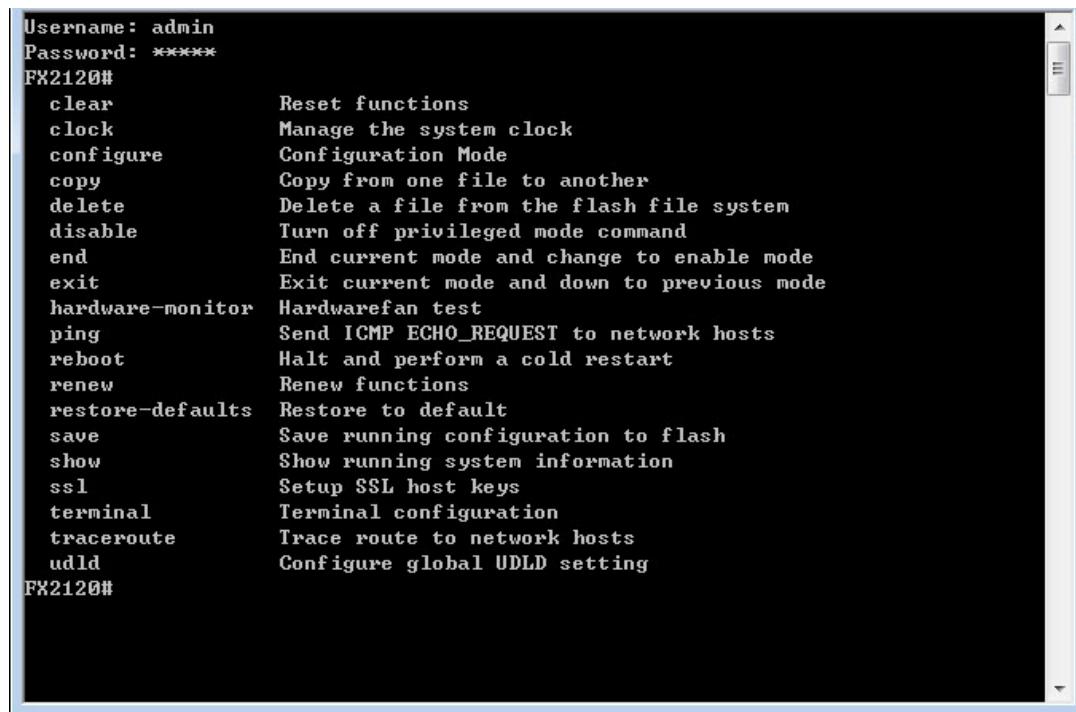

```
Username: admin
Password: *****
FX2120#
  clear          Reset functions
  clock          Manage the system clock
  configure      Configuration Mode
  copy           Copy from one file to another
  delete         Delete a file from the flash file system
  disable        Turn off privileged mode command
  end            End current mode and change to enable mode
  exit           Exit current mode and down to previous mode
  hardware-monitor Hardwarefan test
  ping           Send ICMP ECHO_REQUEST to network hosts
  reboot         Halt and perform a cold restart
  renew          Renew functions
  restore-defaults Restore to default
  save           Save running configuration to flash
  show            Show running system information
  ssl             Setup SSL host keys
  terminal       Terminal configuration
  traceroute     Trace route to network hosts
  udld           Configure global UDLD setting
FX2120#
```

The available commands contain – clear, clock, configure, copy, delete, disable, end, exit, hardware-monitor, ping, reboot, renew, restore-defaults, save, show, ssl, terminal, traceroute and udld. Each command will be explained as follows.

**Note:** You can also enter ? to check if there are subcommands under current command.

### A-2-1 Clear Configuration

This command allows resetting the functions of ARP, authentication, gvrp, interface, IP, IPv6, LACP, Line, LLDP, Logging, MAC, mvr, and Spanning Tree.

#### Telnet Command: **clear arp**

Use this command to clear entries in the ARP cache.

##### Syntax Items

clear arp

##### Description

Syntax Items	Description
clear arp	<A.B.C.D> - Enter the IP address of the device (e.g., 192.168.1.224). Related Syntax: ● # clear arp

---

---

	● # clear arp <A.B.C.D>
--	-------------------------

---

### Example

FX2120# clear arp 192.168.1.224 FX2120#
--

## Telnet Command: clear authentication

Use this command to clear authentication sessions based on LAN port, MAC address, or authentication type for 802.1x/MAC authentication.

### Syntax Items

clear authentication sessions  
clear authentication sessions interfaces 10GigabitEthernet  
clear authentication sessions mac  
clear authentication sessions session-id  
clear authentication sessions type

### Description

Syntax Items	Description
clear authentication sessions	Clear all of the sessions related to authentication. Related Syntax: ● # clear authentication sessions
clear authentication sessions interfaces 10GigabitEthernet	Clear the sessions of a specific interface. <1-12> - Enter the number of LAN port. Related Syntax: ● # clear authentication sessions interfaces 10GigabitEthernet <1-12>
clear authentication sessions mac	Clear the sessions with the MAC address set here. <A:B:C:D:E:F> - Enter the MAC address of the device that you want to clear the authentication information. Related Syntax: ● # clear authentication sessions mac <A:B:C:D:E:F>
clear authentication sessions session-id	Clear the sessions with the string set here. <WORD> - Enter a string of a session that you want to clear. Related Syntax: ● # clear authentication sessions session-id <WORD>
clear authentication sessions type	Clear the sessions with authentication type selected here. <dot1x> - Use 802.1x authentication. <mac> - Use mac-based authentication. <web> - Use web-based authentication. Related Syntax:

---

- # clear authentication sessions type <dot1x><mac><web>

---

### Example

```
FX2120# clear authentication sessions
No Auth Manager sessions currently exist
FX2120# clear authentication sessions mac 48:5B:39:2F:A8:66
FX2120# clear authentication sessions interfaces 10GigabitEthernet 2
FX2120# clear authentication sessions session-id 0000000B002AFBE8
FX2120#
```

## Telnet Command: **clear gvrp**

Use this command to clear statistics or port error statistics for all interfaces or a specific interface (LAN or LAG).

### Syntax Items

```
clear gvrp error-statistics
clear gvrp statistics
```

### Description

Syntax Items	Description
clear gvrp error-statistics	<p>Specify a LAN/LAG interface for clearing error statistics for GVRP.</p> <p>&lt;1-12&gt; - Enter the number (1 to 12) of LAN port.</p> <p>&lt;1-8&gt; - Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface) that you want to clear the GVRP setting.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● # clear gvrp error-statistics interfaces 10GigabitEthernet &lt;1-12&gt;</li><li>● # clear gvrp error-statistics interfaces LAG &lt;1-8&gt;</li></ul>
clear gvrp statistics	<p>Specify a LAN/LAG interface for clearing statistics for GVRP.</p> <p>&lt;1-12&gt; - Specify an interface for clearing statistics for GVRP.</p> <p>&lt;1-8&gt; - Specify LAG interface for clearing statistics for GVRP.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● # clear gvrp statistics interfaces 10GigabitEthernet &lt;1-12&gt;</li><li>● # clear gvrp statistics interfaces LAG &lt;1- 8&gt;</li></ul>

### Example

```
FX2120# clear gvrp error-statistics interfaces 10GigabitEthernet 2
FX2120#
FX2120# clear gvrp error-statistics interfaces LAG 2
FX2120#
```

## Telnet Command: clear interfaces

Use this command to clear statistics counters for all interfaces or a specific interface (10GB LAN, LAN or LAG).

### Syntax Items

clear interfaces 10GigabitEthernet

clear interfaces LAG

### Description

Syntax Items	Description
clear interfaces 10GigabitEthernet	Specify a LAN interface for clearing statistics counters on that port.  <1-12> - Enter the number (1 to 12) of LAN port.  Related Syntax: <ul style="list-style-type: none"><li>● # clear interfaces gigabitEthernet &lt;1-12&gt; counters</li></ul>
clear interfaces LAG	Specify a LAG interface for clearing statistics counters on that port.  <1-8> - Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface).  Related Syntax: <ul style="list-style-type: none"><li>● # clear interfaces LAG &lt;1-8&gt; counters</li></ul>

### Example

```
FX2120# clear interfaces 10gigabitethernet 3 counters
FX2120# clear interfaces
FX2120# clear interfaces LAG 2 counters
FX2120#
```

## Telnet Command: clear ip

Use this command to clear IGMP snooping groups (dynamic or static) information for all interfaces or a specific interface (LAN or LAG) with IP address.

### Syntax Items

clear ip arp

clear ip dhcp

clear ip igmp

### Description

Syntax Items	Description
clear ip arp	<1-12> - Enter the number (1 to 12) of LAN port.  <1-8> - Specify a LAG interface for clearing ARP inspection information.  statistics - Clear the statistics for ARP inspection.  Related Syntax:

	<ul style="list-style-type: none"> <li>● # clear ip arp inspection interfaces 10GigabitEthernet &lt;1-12&gt;</li> <li>● # clear ip arp inspection interfaces LAG &lt;1-8&gt; statistics</li> </ul>
clear ip dhcp	<p>snooping database statistics - Clear snooping database statistics for DHCP server.</p> <p>snooping interfaces 10GigabitEthernet / LAG- Specify a LAN / LAG interface for clearing DHCP snooping information.</p> <p>&lt;1-12&gt; - Enter the number (1 to 12) of LAN port.</p> <p>&lt;1-8&gt; - Specify a LAG interface for clearing DHCP snooping information.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear ip dhcp snooping database statistics</li> <li>● # clear ip dhcp snooping interfaces 10GigabitEthernet &lt;1-12&gt; statistics</li> </ul> <p># clear ip dhcp snooping interfaces LAG &lt;1-8&gt; statistics</p>
clear ip igmp	<p>snooping groups dynamic - Clear dynamic snooping groups of IGMP server.</p> <p>snooping groups static - Clear static snooping groups of IGMP server.</p> <p>snooping statistics - Clear snooping statistics for IGMP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear ip igmp snooping groups dynamic</li> <li>● # clear ip igmp snooping groups static</li> <li>● # clear ip igmp snooping statistics</li> </ul>

### Example

```
FX2120# clear ip igmp snooping groups dynamic
FX2120#
```

### Telnet Command: clear ipv6

Use this command to clear MLD snooping configuration for dynamic / static group(s) with IPv6 address.

#### Syntax Items

clear ipv6 mld

#### Description

Syntax Items	Description
clear ipv6 mld	<p>snooping groups dynamic - Clear dynamic snooping groups of MLD.</p> <p>snooping groups static - Clear static snooping groups of MLD.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear ipv6 mld snooping groups dynamic</li> <li>● # clear ipv6 mld snooping groups static</li> <li>● # clear ipv6 mld snooping statistics</li> </ul>

### Example

```

FX2120# clear ipv6
FX2120# clear ipv6 mld snooping groups dynamic
FX2120# clear ipv6 mld snooping groups dynamic?
<cr>
FX2120# clear ipv6 mld snooping groups static
FX2120#

```

## Telnet Command: clear lacp

Use this command to clear LACP configuration for specified LAG interface or all LAG interfaces.

### Syntax Items

clear lacp <1-8> counters  
clear lacp counters

### Description

Syntax Items	Description
clear lacp <1-8>	<1-8> - Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface). Related Syntax: ● # clear lacp <1-8> counters
clear lacp counters	Clear LACP configuration for all LAG interfaces. Related Syntax: ● # clear lacp counters

### Example

```

FX2120# clear lacp 1 counters
No interfaces configured in the channel group
FX2120#

```

## Telnet Command: clear line

Use this command to clear line settings including SSH (Secure Shell) configuration and telnet daemon configuration.

### Syntax Items

clear line ssh  
clear line telnet

### Description

Syntax Items	Description
clear line ssh	Clear SSH configuration for line connection. Related Syntax: ● # clear line ssh
clear line telnet	Clear SSH Telnet configuration for line connection. Related Syntax:

---

---

	● # clear line telnet
--	-----------------------

---

### Example

FX2120# clear line ssh
FX2120# clear line telnet

## Telnet Command: clear lldp

Use this command to clear LLDP statistics or reset LLDP information.

### Syntax Items

clear lldp global  
clear lldp interfaces

### Description

Syntax Items	Description
clear lldp global	Clear all of the statistics related to LLDP. Related Syntax: ● # clear lldp global statistics
clear lldp interfaces	Specify a LAN / LAG interface for clearing LLDP information. <1-12> - Enter the number (1 to 28) of LAN port. <1-8> - Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface). Related Syntax: ● # clear lldp interfaces 10GigabitEthernet <1-12> statistics ● # clear lldp interfaces LAG <1-8> statistics

### Example

FX2120# clear lldp global statistics
FX2120#
FX2120# clear lldp interfaces LAG 1 statistics
FX2120# clear lldp interfaces 10gigabitethernet 1 statistics
FX2120#

## Telnet Command: clear logging

Use this command to clear log messages from the internal logging buffer and flash.

### Syntax Items

clear logging buffered  
clear logging file

### Description

Syntax Items	Description
clear logging buffered	Clear the log stored in RAM.

	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear logging buffered</li> </ul>
clear logging file	<p>Clear the log stored in flash.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear logging file</li> </ul>

### Example

```
FX2120# clear logging buffered
FX2120# clear logging file
FX2120#
```

## Telnet Command: clear mac

Use this command to clear MAC configuration related to VLAN, LAG, and LAN port.

### Syntax Items

clear mac

### Description

Syntax Items	Description
clear mac address-table	<p>&lt;1-12&gt; - Enter the number (1 to 12) of LAN port.</p> <p>&lt;1-8&gt; - Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface).</p> <p>&lt;1-4094&gt; - Specify a VLAN ID by entering its number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear mac adderss-table dynamic interfaces 10GigabitEthernet &lt;1-12&gt;</li> <li>● # clear mac adderss-table dynamic interfaces LAG &lt;1-8&gt;</li> <li>● # clear mac adderss-table dynamic vlan &lt;1-4094&gt;</li> </ul>

### Example

```
FX2120# clear mac address-table dynamic vlan 2038
FX2120# clear mac address-table dynamic interfaces 10gigabitethernet 3
FX2120#
```

## Telnet Command: clear mvr

Use this command to clear information for all members (including dynamic, static) of MVR.

### Syntax Items

clear mvr members

### Description

Syntax Items	Description
clear mvr members	<p>Clear information for dynamic / static members.</p> <p>Related Syntax:</p>

- 
- |  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>● # clear mvr members dynamic</li> <li>● # clear mvr members static</li> </ul> |
|--|---|
- 

**Example**

<pre>FX2120# clear mvr members dynamic FX2120# clear mvr members static FX2120#</pre>
---

**Telnet Command: clear spanning-tree**

Use this command to clear running system information.

**Syntax Items**

clear spanning-tree

**Description**

Syntax Items	Description
clear spanning-tree interfaces	<p>Specify a LAN interface for clearing its running information.</p> <p>&lt;1-12&gt;- Enter the number (1 to 12) of LAN port.</p> <p>&lt;1-8&gt;- Enter the number (1 to 8) of LAG interface (IEEE 802.3 Link Aggregation Interface).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clear spanning-tree interfaces 10GigabitEthernet &lt;1-12&gt; statistics</li> <li>● # clear spanning-tree interfaces LAG &lt;1-8&gt; statistics</li> </ul>

---

**Example**

<pre>FX2120# clear spanning-tree interfaces 10GigabitEthernet &lt;1-12&gt; 10GigabitEthernet device number FX2120# clear spanning-tree interfaces 10gigabitethernet 3 statistics FX2120# clear spanning-tree interfaces LAG 1 statistics FX2120#</pre>
--

## A-2-2 Clock Configuration

This command allows managing the system clock.

**Telnet Command: clock set**

Use this command to configure the system clock manually.

**Syntax Items**

clock set

**Description**

Syntax Items	Description
--------------	-------------

---

---

clock set	<p>Set current by entering hours, minutes, seconds, month, date and year with the format listed below:</p> <p>&lt;HH:MM:SS&gt; - Hour, minute, second (e.g., 08:10:30).</p> <p>&lt;Jan&gt; - January.</p> <p>&lt;feb&gt; - February</p> <p>&lt;mar&gt; - March</p> <p>&lt;apr&gt; - April</p> <p>&lt;may&gt; - May</p> <p>&lt;jun&gt; - June</p> <p>&lt;jul&gt; - July</p> <p>&lt;aug&gt; - August</p> <p>&lt;sep&gt; - September</p> <p>&lt;oct&gt; - October</p> <p>&lt;nov&gt; - November</p> <p>&lt;dec&gt; - December</p> <p>&lt;1-31&gt; - Date 1 to 31.</p> <p>&lt;2000-2035&gt; - Year of 2000 to 2035.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● # clock set HH:MM:SS jan/feb/mar/apr/may/jun/jul/aug/sep/oct/nov/dec &lt;1-31&gt; &lt;2000-2035&gt;</li> </ul>
-----------	--

---

### Example

```
FX2120# clock set 12:10:30 jan 1 2019
2019-01-01 12:10:30 UTC+8
```

## A-2-3 Configure Configuration

This command allows configuring the settings related to VigorSwitch.

Available sub-commands under Configure include:

aaa, acct, authentication, boot, clock, custom, dhcp-server, dos, dot1x, do, dray\_surveillance, enable, end, errdisable, exit, gvrp, hostname, http, interface, ip, ipv6, jumbo-frame, lacp, lag, line, lldp, logging, logmail, loop-protection, mac, mailalert, management, management-vlan, mirror, mvr, no, openvpn, poe, qos, radius, schedule, sflow, snmp, sntp, spanning-tree, start-up, storm-control, surveillance-vlan, system, tacacs, tr069, udld, username, vlan, voice-vlan and webhook

Before configuration, you have to enter "configure" to access into next phase.

To return to previous phase, enter "exit"

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# exit
FX2120#
```

### Telnet Command: aaa

Use this command to add a login authentication list to authenticate with local, tacacs+, radius, and none service.

### Syntax Items

aaa authentication enable  
aaa authentication login

### Description

Syntax Items	Description
aaa authentication enable	<p>Enable authentication is used only on CLI for a user trying to switch from User EXEC (&gt;) mode to Privileged EXEC (#) mode.</p> <p>enable – Enable the authentication list.</p> <p>&lt;LISTNAME&gt; – Enter a string as the list name for authentication type. Default value is “default”.</p> <p>&lt;none, enable, tacacs+, radius&gt; – Specify the authentication method by entering none, enable, tacacs+ or radius.</p> <ul style="list-style-type: none"> <li>● None: Do nothing and just make user be authenticated.</li> <li>● Enable: Use local password to authenticate.</li> <li>● Tacacs+: Use remote Tacacs+ server to authenticate.</li> <li>● Radius: Use remote Radius server to authenticate.</li> </ul> <p>default - It is used to configure default enable authentication.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#aaa authentication enable &lt;LISTNAME&gt; &lt;none, enable, tacacs+, radius&gt;</li> <li>● &lt;config&gt;#aaa authentication enable default &lt;none, enable, tacacs+, radius&gt;</li> </ul>
aaa authentication login	<p>Login authentication is used when a user tries to login into the switch.</p> <p>&lt;none, enable, tacacs+, radius&gt; –Specify the authentication method by entering none, enable, tacacs+ or radius.</p> <p>default - It is used to configure default login authentication.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#aaa authentication login &lt;none, enable, tacacs+, radius&gt;</li> <li>● &lt;config&gt;#aaa authentication login default &lt;none, enable, tacacs+, radius&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# aaa authentication enable LISTNAME enable
FX2120(config)#
FX2120(config)# exit
FX2120# show aaa authentication enable lists
  Enable List Name      Authentication Method List
-----
          default        enable
```

LISTNAME	enable
FX2120#	

### Telnet Command: acct

Use this command to set RADIUS / TACACS server.

#### Syntax Items

acct server radius

acct server tacacs

#### Description

Syntax Items	Description
server radius	<p>&lt;1-65535&gt; - Set a value to wait for a packet retransmission to the authentication server.</p> <p>&lt;1-60&gt; - Set the transmission interval (unit is second).</p> <ul style="list-style-type: none"> <li>● # acct server radius disconnect message port &lt;1-65535&gt; interval &lt;1-60&gt;</li> </ul>
server tacacs	<p>&lt;1-65535&gt; - Set a value to wait for a packet retransmission to the authentication server.</p> <p>&lt;1-60&gt; - Set the transmission interval (unit is second).</p> <ul style="list-style-type: none"> <li>● # acct server tacacs disconnect message port &lt;1-65535&gt; interval &lt;1-60&gt;</li> </ul>

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# acct server radius disconnect message port 3030 interval 30
FX2120(config)#

```

### Telnet Command: authentication

Use this command to enable the global setting of 802.1x/MAC/WEB authentication network access control (default is disabled for all).

#### Syntax Items

authentication dot1x

authentication guest-vlan

authentication mac

authentication web

#### Description

Syntax Items	Description
authentication dot1x	<p>Enable 802.1x authentication by entering the word, dot1x after authentication.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# authentication dot1x</li> </ul>

<p><b>authentication guest-vlan</b></p>	<p>Configure the guest VLAN.  <b>&lt;1-4094&gt;</b> - Specify a guest VLAN ID by entering its number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# authentication guest-vlan &lt;1-4094&gt;</li> </ul>
<p><b>authentication mac</b></p>	<p>Enable MAC authentication by entering the word, mac after authentication.</p> <p>mac local - Local database for MAC-Based authentication. It can add local MAC authentication hosts in database.</p> <p>&lt;A:B:C:D:E:F&gt; - Enter the MAC address to be added for authentication.</p> <p>control auth - Set a local entry control mode, auth (the host will be set to authorized) or unauth (the host will be set to unauthorized).</p> <p>vlan &lt;1~4094&gt; - Specify a VLAN ID by entering its number</p> <p>reauth-period &lt;300~4294967294&gt; - Set a time to initiate automatic re-authentication.</p> <p>inactive-timeout &lt;60~65535&gt;- Set the inactive timeout for MAC authentication host. After the time interval, if there is no activity from the client, then it will be unauthorized by Vigor system.</p> <p>control unauth - Set a local entry control mode as "unauth" to let the host set as unauthorized.</p> <p>radius mac-case &lt;lower / upper&gt; - Set RADIUS user ID with lower case or upper case.</p> <p>radius mac-delimiter &lt;colon/dot/hyphen/none&gt; - Select RADIUS user ID delimiter. In which,</p> <ul style="list-style-type: none"> <li>colon: XX:XX:XX:XX:XX:XX</li> <li>dot: XX.XX.XX.XX.XX.XX</li> <li>hyphen: XX-XX-XX-XX-XX-XX</li> <li>none: XXXXXXXXXXXX</li> </ul> <p>gap &lt;2/4/6&gt; - Select delimiter gap.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#authentication mac</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control auth inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control auth reauth-period &lt;300~4294967294&gt;</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control auth vlan &lt;1~4094&gt;</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control auth vlan&lt;1~4094&gt; reauth-period &lt;300~4294967294&gt;</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control auth vlan&lt;1~4094&gt; reauth-period &lt;300~4294967294&gt; inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication mac local &lt;A:B:C:D:E:F&gt; control unauth</li> <li>● &lt;config&gt;#authentication mac radius mac-case &lt;lower / upper&gt;</li> <li>● &lt;config&gt;#authentication mac radius mac-delimiter</li> </ul>

	<ul style="list-style-type: none"> <li>● &lt;colon/dot/hyphen/none&gt;</li> <li>● &lt;config&gt;#authentication mac radius mac-delimiter</li> <li>● &lt;colon/dot/hyphen/none&gt; gap &lt;2/4/6&gt;</li> </ul>
authentication web	<p>Web - Enable web authentication by entering the word "web" after "authentication".</p> <p>username &lt;WORD&gt; - Specify a username.</p> <p>password &lt;string&gt; - Set a password.</p> <p>vlan &lt;1~4094&gt; - Specify a VLAN ID by entering its number.</p> <p>reauth-period &lt;30~4294967294&gt; - Set a time to initiate automatic re-authentication.</p> <p>inactive-timeout &lt;60~65535&gt; - Set the inactive timeout for MAC authentication host. After the time interval, if there is no activity from the client, then it will be unauthorized by Vigor system.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#authentication web</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; reauth-period &lt;300~4294967294&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; reauth-period &lt;300~4294967294&gt; inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; vlan&lt;1~4094&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; reauth-period &lt;30~4294967294&gt; inactive-timeout &lt;60~65535&gt;</li> <li>● &lt;config&gt;#authentication web local username &lt;WORD&gt; password &lt;string&gt; vlan&lt;1~4094&gt; reauth-period &lt;30~4294967294&gt; inactive-timeout &lt;60~65535&gt;</li> </ul>

### Example

```

FX2120# P2280x# configure
FX2120 (config)# authentication dot1x
FX2120 (config)# vlan 3
FX2120 (config-vlan)# exit
FX2120 (config)# authentication guest-vlan 3
FX2120 (config)#
FX2120 (config)# exit
FX2120# show authentication
Autentication dot1x state      : enabled
Autentication mac state       : disabled
Autentication web state       : disabled
Guest VLAN                    : enabled (3)
Mac-auth Radius User ID Format : XXXXXXXXXXXXXXXX

```

```

Mac-auth Local Entry      :
Web-auth Local Entry     :
Interface Configurations
Interface GigabitEthernet1
    Admin Control       : disable
    Host Mode           : multi-auth
    Type dot1x State   : disabled
    Type mac State     : disabled
    Type web State     : disabled
    Type Order          : dot1x
    MAC/WEB Method Order: radius
    Guest VLAN          : disabled
    Reauthentication    : disabled
    Max Hosts           : 256
    VLAN Assign Mode   : static
--More--
.....
FX2120# configure
FX2120 (config)# authentication mac local 00:11:22:33:00:01 control auth vlan 3 reauth-period
500 inactive-timeout 300
FX2120 (config)#
FX2120 (config)# authentication mac local 00:11:22:33:00:01 control unauth
FX2120 (config)#
FX2120 (config)# authentication web local username user_1 password 1234tw vlan 3
reauth-period 600 inactive-timeout 700
FX2120 (config)#

```

## Telnet Command: boot

Use this command to have a backup image in the flash partition. Select the active firmware image, and another firmware image will become a backup one.

### Syntax Items

boot system

### Description

Syntax Items	Description
boot system	<p>Boot the system from flash image partition 0 / 1.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# boot system image0</li> <li>● &lt;config&gt;# boot system image1</li> </ul>

### Example

```

FX2120# configure
FX2120(config)#
FX2120# configure

```

```

FX2120(config)#
FX2120(config)# boot system image0
Select "image0" Success
FX2120 (config)# exit
FX2120#
FX2120# show boot
Image Version          Date                Status      File Name
----  -----          -----                -----      -----
0     1.0.2           2017-08-29 09:44:57    Not active* 2120_r442_220RC1.all
1     2.3.2           2018-05-16 09:14:31    Active       p2280_r734_230RC4.all

"*" designates that the image was selected for the next boot

FX2120#

```

## Telnet Command: clock

Use this command to configure time zone, summer-time and external time source for the system clock.

### Syntax Items

- clock auto timezone
- clock source local
- clock source sntp
- clock summer-time
- clock timezone

### Description

Syntax Items	Description
clock auto timezone	VigorSwitch sets the time zone automatically.
clock source local	Configure an external time source for the system clock. “local” means to use static time. It is the default setting. Related Syntax: ● <config># clock source local
clock source sntp	Configure an external time source for the system clock. “sntp” means to use SNTP time. Related Syntax: ● <config># clock source sntp
clock summer-time	Configure the system to automatically switch to summer time (daylight saving time). ACRONYM – Specify the acronym name of time zone. The acronym of the time zone will be displayed when summer time is in effect. If unspecified, the time zone acronym will be used in default. (1-4 chars) <jan/feb/mar/apr/may/jun/jul/aug/sep/oct/nov/dec> - Indicate January, February, March, April, May, June, July, August, September, October, November, December.

---

	<p>&lt;1-31&gt; means date 1 to 31.</p> <p>&lt;2000-2037&gt; - means year of 2000 to 2035.</p> <p>&lt;HH:MM&gt; - means hours and minutes.</p> <p>recurring - Summer time should start and end on the corresponding specified days every year.</p> <p>&lt;1-1440&gt;- Set the number of minutes to add during the summer time. The default number is 60.</p> <p>eu - The summer time is based on the European Union rules. (Start point – last Sunday in March, End point – last Sunday in October)</p> <p>usa - The summer time is based on the United States rules. (Start point – second Sunday in March, End point – first Sunday in November)</p> <p>first - The first week of the month.</p> <p>last - The last week of the month.</p> <p>&lt;sun/mon/tue/wed/thu/fri/sat&gt; - Indicate Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday.</p> <p>&lt;jan/feb/mar/apr/may/jun/jul/aug/sep/oct/nov/dec&gt; - Indicate January, February, March, April, May, June, July, August, September, October, November, December.</p> <p>&lt;first/last&gt;- Specify the first week or the last week of the month.</p> <p>&lt;1-5&gt; - Specify the number of the week in the month.</p> <p>Note that the first group of month, date, hour and minute is used for configuring starting time, and the second group is used for configuring ending time.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# clock summer-time ACRONYM date &lt;jan/feb/mar/apr/may/jun/jul/aug/sep/oct/nov/dec&gt; &lt;1-31&gt; &lt;2000-2037&gt; &lt;HH:MM&gt; &lt;jan/feb/mar/apr/may/jun/jul/aug/sep/oct/nov/dec&gt;&lt;1-31&gt;&lt;2000-2037&gt; &lt;HH:MM&gt;</li> <li>● &lt;config&gt;# clock summer-time ACRONYM recurring eu &lt;1-1440&gt;</li> <li>● &lt;config&gt;# clock summer-time ACRONYM recurring usa &lt;1-1440&gt;</li> <li>● &lt;config&gt;# clock summer-time ACRONYM recurring first &lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;first/last&gt; &lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;1-14400&gt;</li> <li>● &lt;config&gt;# clock summer-time ACRONYM recurring last &lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;first/last&gt;&lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;1-14400&gt;</li> <li>● &lt;config&gt;# clock summer-time ACRONYM recurring &lt;1-5&gt; &lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;1-5&gt; &lt;sun/mon/tue/wed/thu/fri/sat&gt;&lt; jan / feb / mar / apr / may / jun/jul/aug/sep/oct/nov/dec&gt; &lt;HH:MM&gt; &lt;1-14400&gt;</li> </ul>
clock timezone ACRONYM	Set the time zone for display purposes.

<p>&lt;-12-13&gt; minutes &lt;0-59&gt;</p>	<p>ACRONYM – Specify the acronym name of time zone. The acronym of the time zone will be displayed when summer time is in effect. If unspecified, the time zone acronym will be used in default. (1-4 chars)</p> <p>&lt;-12-13&gt; – Specify the hour offset (from -12 to +13) of time zone.</p> <p>minutes &lt;0-59&gt; – Specify the minute difference from UTC.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# clock timezone ACRONYM &lt;-12-13&gt; minutes &lt;0-59&gt;</li> </ul>
--	--

### Example

```

FX2120# configure
FX2120(config)# clock source sntp
FX2120(config)# exit
FX2120# show clock detail
2019-01-05 06:51:23 UTC+8
Time source is sntp
Time zone:
Acronym is
Offset is UTC+8
FX2120# configure
FX2120(config)# clock summer-time tw date jan 30 2019 23:30 feb 1 2019 20:50
FX2120(config)# exit
FX2120# show clock detail
2019-01-05 07:13:49 UTC+8
Time source is sntp
Time zone:
Acronym is ACRONYM
Offset is UTC-10:08
Summertime:
Acronym is tw
Starting and ending on a specific date.
Begins at 1 30 19 23:30
Ends at 2 1 19 20:50
Offset is 60 minutes.
FX2120# configure
FX2120(config)# clock summer-time ACRONYM recurring eu 1200
FX2120(config)# clock summer-time ACRONYM recurring first mon jan 10:10 first sun feb 10:10
1000
FX2120(config)# exit
FX2120# show clock detail
2019-01-05 11:37:18 UTC+8
Time source is sntp
Time zone:
Acronym is
Offset is UTC+8

```

Summertime:  
 Acronym is ACRONYM  
 Recurring every year.  
 Begins at 1 1 1 10:10  
 Ends at 1 0 2 10:10  
 Offset is 1000 minutes.

## Telnet Command: custom

Use this command to enable the module settings.

### Syntax Items

custom enable

### Description

Syntax Items	Description
custom enable	Enable the module settings. Related Syntax: <ul style="list-style-type: none"> <li>● &lt;config&gt;# custom enable</li> </ul>

### Example

```

FX2120# configure
FX2120(config)# custom enable
FX2120(config)#

```

## Telnet Command: dos

Use this command to enable specific Denial of Service (DoS) protection.

### Syntax Items

dos daeqsa-deny  
 dos icmp-frag-pkts-deny  
 dos icmp-ping-max-length  
 dos icmpv4-ping-max-check  
 dos icmpv6-ping-max-check  
 dos ipv6-min-frag-size-check  
 dos ipv6-min-frag-size-length  
 dos land-deny  
 dos nullscan-deny  
 dos pod-deny  
 dos smurf-deny  
 dos smurf-netmask  
 dos syn-sport1024-deny  
 dos synfin-deny  
 dos synrst-deny  
 dos tcp-frag-off-min-check  
 dos tcpblat-deny

dos tcphdr-min-check  
 dos tcphdr-min-length  
 dos udpblat-deny  
 dos xma-deny

#### Description

Syntax Items	Description
dos daeqsa-deny	<p>Drop the packets if the destination MAC address equals to the source MAC address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos daeqsa-deny</li> </ul>
dos icmp-frag-pkts-deny	<p>Drop the fragmented ICMP packets.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos icmp-frag-pkts-deny</li> </ul>
dos icmp-ping-max-length	<p>Set the maximum packet size for ICMPv4/ICMPv6 ping operation.</p> <p>&lt;0-65535&gt; - Specify a packet number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos icmp-ping-max-length &lt;0-65535&gt;</li> </ul>
dos icmpv4-ping-max-check	<p>Check ICMPv4 ping maximum packets size and drop the packets larger than the maximum packet size defined by the command, dos icmp-ping-max-length.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos icmpv4-ping-max-check</li> </ul>
dos icmpv6-ping-max-check	<p>Check ICMPv6 ping maximum packets size and drop the packets larger than the maximum packet size defined by the command, icmp-ping-max-length.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos icmpv6-ping-max-check</li> </ul>
dos ipv6-min-frag-size-check	<p>Check minimum size of IPv6 fragments.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos ipv6-min-frag-size-check</li> </ul>
dos ipv6-min-frag-size-length <0-65535>	<p>Set the minimum packet size of IPv6 fragmented packets.</p> <p>&lt;0-65535&gt; - Specify a packet number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos ipv6-min-frag-size-length &lt;0-65535&gt;</li> </ul>
dos land-deny	<p>Drop the packets if the source IP address equals to destination IP address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos land-deny</li> </ul>
dos nullscan-deny	<p>Drop the packets if attacked by NULL Scan.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos nullscan-deny</li> </ul>
dos pod-denY	Drop the packets if attacked by Ping of Death.

	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos pod-deny</li> </ul>
dos smurf-deny	<p>Drop the packets if encountered Smurf attack.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos smurf-deny</li> </ul>
dos smurf-netmask	<p>Set the smurf attack size.</p> <p>&lt;0-32&gt; - Enter a number as smurf attacks size.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos smurf-netmask &lt;0-32&gt;</li> </ul>
dos syn-sportl1024-deny	<p>Drop SYN packets with sport less than 1024.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos syn-sportl1024-deny</li> </ul>
dos synfin-deny	<p>Drop the packets with SYN and FIN bits set.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos synfin-deny</li> </ul>
dos synrst-deny	<p>Drop the packets with SYNC and RST bits set.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos synrst-deny</li> </ul>
dos tcp-frag-off-min-check	<p>Drop the TCP fragmented packet with offset equals to the minimum packet size.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos tcp-frag-off-min-check</li> </ul>
dos tcpblat-deny	<p>Drop the packets if the source TCP port equals to destination TCP port.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos tcpblat-deny</li> </ul>
dos tcphdr-min-check	<p>Check the minimum TCP header and drop the TCP packets with the header smaller than the minimum size defined.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos tcphdr-min-check</li> </ul>
dos tcphdr-min-length	<p>Set the minimum size of TCP header.</p> <p>&lt;0-65535&gt; - Specify a packet number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos tcphdr-min-length &lt;0-65535&gt;</li> </ul>
dos udpblat-deny	<p>Drop the packets if the source UDP port equals to destination UDP port.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos udpblat-deny</li> </ul>
dos xma-deny	<p>Drop the packets if the sequence number is zero and the FIN, URG and PSH bits are set already.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dos xma-deny</li> </ul>

## Example

```

FX2120# configure
FX2120(config)#
FX2120(config)# dos icmp-ping-max-length 25252
FX2120(config)# dos icmpv4-ping-max-check
FX2120(config)#

```

## Telnet Command: dot1x

Use this command to set 802.1x configuration.

### Syntax Items

dot1x

### Description

Syntax Items	Description
dot1x guest-vlan	<p>&lt;0-4094&gt; - Enter a number as guest VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dot1x guest-vlan &lt;0-4094&gt;</li> </ul>

### Example

```

FX2120# configure
FX2120(config)#
FX2120(config)# dot1x guest-vlan 33
VLAN does not exist
FX2120(config)#

```

## Telnet Command: do

Use this command to execute a command immediately.

### Syntax Items

do SEQUENCE

### Description

Syntax Items	Description
SEQUENCE	<p>Enter the command that you want to execute immediately.</p> <p>Related Syntax: (for example)</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# do show info</li> </ul>

### Example

```

FX2120(config)# do show info
System Name      : FX2120
System Location   : Default
System Contact    : Default
MAC Address       : 14:49:BC:41:3F:E3
IP Address        : 192.168.1.13
Subnet Mask       : 255.255.255.0
Loader Version     : 2.2.0
Loader Date        : Sep 29 2021 - 16:21:09
Firmware Version   : 3.7.0
Firmware Date      : Sep 29 2021 - 18:30:42
Firmware Revision   : 485b507
System Object ID    : 1.3.6.1.4.1.7367
System Up Time      : 0 days, 22 hours, 2 mins, 26 secs
FX2120(config)#

```

## **Telnet Command: dray\_surveillance**

Use this command to enable / disable the ONVIF.

### **Syntax Items**

dray\_surveillance add  
dray\_surveillance direct-add  
dray\_surveillance set

### **Description**

<b>Syntax Items</b>	<b>Description</b>
dray_surveillance add	Add an IP device for surveillance.  WORD <36-36> - Enter the UUID string of the IP camera or IP-based device.  Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# dray_surveillance add device uuid WORD &lt;36-36&gt;</li><li>● &lt;config&gt;# dray_surveillance add group uuid WORD &lt;36-36&gt;</li></ul>
dray_surveillance direct-add	WORD <36-36> - Enter the UUID string of the IP camera or IP-based device.  Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# dray_surveillance direct-add device uuid WORD &lt;36-36&gt;</li></ul>
dray_surveillance set	username WORD<1-32> - Enter a string as the default user name.  password WORD<1-32>> - Enter a string as the default password.  encptpwd WORD <1-128> - Enter a string as the encrypted key. WORD <36-36> - Enter the UUID string of the IP camera or the IP-based device.

---

	<p>ip &lt;A.B.C.D&gt; - Enter the IP address of the IP camera or the IP-based device.</p> <p>Mask &lt;A.B.C.D&gt; - Enter the subnet mask of the IP camera or the IP-based device.</p> <p>vlan &lt;1-4094&gt; - Enter a value representing the VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# dray_surveillance set default username WORD&lt;1-32&gt; password WORD&lt;1-32&gt;</li> <li>● &lt;config&gt;# dray_surveillance set default username WORD&lt;1-32&gt;encptpwd WORD &lt;1-128&gt;</li> <li>● &lt;config&gt;# dray_surveillance set device uuid WORD &lt;36-36&gt;</li> <li>● &lt;config&gt;# dray_surveillance set group uuid WORD &lt;36-36&gt;</li> <li>● &lt;config&gt;# dray_surveillance set interface ip &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;# dray_surveillance set interface mask &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;# dray_surveillance set vlan &lt;1-4094&gt;</li> </ul>
--	--

---

### **Example**

```
FX2120# configure
FX2120(config)#
FX2120(config)# dray_surveillance
FX2120(config)#
FX2120(config)# dray_surveillance add device uuid 53d7762a-c52b-4bb9-8000-305501e0f35f
FX2120(config)#+
```

### **Telnet Command: enable**

Use this command to configure local password with encrypted string or not.

#### **Syntax Items**

enable password  
enable privilege  
enable secret

#### **Description**

---

<b>Syntax Items</b>	<b>Description</b>
enable password	<p>Edit the password for each privilege level for activating authentication.</p> <p>&lt;1-15&gt; - Enter a number for specifying a privilege level. Default value is 15.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# enable password &lt;1-15&gt;</li> </ul>
enable privilege	<p>Edit the privilege level of the password for local user.</p> <p>&lt;1-15&gt; - Enter a number for specifying a privilege level. Default value is 15.</p> <p>&lt;string&gt; - Enter a new string as the password.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# enable privilege &lt;1-15&gt; password &lt;string&gt;</li> </ul>

---

	<p>(This password will NOT be encrypted.)</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# enable privilege &lt;1-15&gt; secret &lt;string&gt; (This password will BE encrypted.)</li> <li>● &lt;config&gt;# enable privilege &lt;1-15&gt; secret encrypted &lt;string&gt; (This password is copied from another configuration file. So, enter an existed and encrypted password.)</li> </ul>
enable secret	<p>&lt;PASSWORD&gt; - Enter a new string as the encrypted password.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# enable secret PASSWORD</li> <li>● &lt;config&gt;# enable secret encrypted PASSWORD</li> </ul>

### Example

```
FX2120# configure
FX2120(config)# enable secret encrypted testtest
FX2120(config)# exit
FX2120# show running-config
FX2120# ...
enable privilege 2 secret "OTE5ZTY4MmNhYzgyNWQ0MzBhNTgwZTg0MmZmMGJiYzQ="
enable secret "testtest"
vlan 2
  name "test0002"
vlan 3
  name "test0003"
vlan 5
  name "test_carrie"
voice-vlan oui-table 00:E0:BB "3COM"
voice-vlan oui-table 00:03:6B "Cisco"
voice-vlan oui-table 00:E0:75 "Veritel"
.....
```

### Telnet Command: end

Use this command to end current mode.

#### Syntax Items

end

### Example

```
FX2120# configure
FX2120(config)#end
FX2120#
```

### Telnet Command: errdisable

Use this command to enable the auto recovery timer for port error.

#### Syntax Items

errdisable recovery cause  
errdisable recovery interval

#### Description

Syntax Items	Description
errdisable recovery cause	Enable the auto recovery timer for port error disabled from ACL, all, ARP rate limit, STP BPDU guard, broadcast flooding, DHCP rate limit, port security, STP self-loop, unicast flooding, or unknown multicast flooding causes.  Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# errdisable recovery cause &lt; acl /all /arp-inspection /bpdu-guard /broadcast-flood /dhcp-rate-limit /psecure-violation /selfloop /unicast-flood /unknown-multicast-flood &gt;</li></ul>
errdisable recovery interval	Set the recovery time of the error disabled port. <30-86400> - The default value is 300 seconds.  Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# errdisable recovery interval &lt;30-86400&gt;</li></ul>

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# errdisable recovery interval 600
FX2120(config)#+
```

#### Telnet Command: exit

Use this command to exit current mode and return to previous mode/phase.

#### Syntax Items

exit

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# exit
FX2120#
```

#### Telnet Command: gvrp

Use this command to enable the GVRP configuration. In default, the GVRP is disabled.

#### Syntax Items

gvrp

#### Example

```

FX2120# configure
FX2120(config)# gvrp
FX2120(config)#
FX2120(config)# exit
FX2120# show gvrp
      GVRP      Status
-----
GVRP          : Enabled
Join time     : 200 ms
Leave time    : 600 ms
LeaveAll time : 10000 ms
FX2120#

```

## Telnet Command: hostname

Use this command to modify the network name of VigorSwitch.

### Syntax Items

hostname WORD

### Description

Syntax Items	Description
Hostname WORD	<WORD> - Enter a string as the network name for VigorSwitch. Related Syntax: <config># hostname WORD

### Example

```

FX2120# configure
FX2120(config)# hostname Switch_3F
Switch_3F(config)#

```

## Telnet Command: interface

Use this command to configure interface settings.

Before configuring, you have to access into next phase. See the following example:

```

FX2120# configure
FX2120(config)#
FX2120(config)# interface 10GigabitEthernet 3
FX2120(config-if)#

```

Or

```

FX2120# configure
FX2120(config)#
FX2120(config)# interface range LAG 3
FX2120 (config-if-range)#

```

### Syntax Items

interface 10GigabitEthernet  
interface VLAN  
interface LAG  
interface range

### Description

Syntax Items	Description
interface 10GigabitEthernet	<1-12> - Specify the number of Ethernet LAN port. Related Syntax: ● <config># interface 10GigabitEthernet <1-12>
Interface vlan	<1-4094> - Specify the number of VLAN ID. Related Syntax: ● <config># interface vlan <1-4094>
interface LAG	<1-8> - Specify the number of LAG interface. Related Syntax: ● <config># interface LAG <1-8>
Interface range	Specify an interface ranges for configuring detailed settings. Related Syntax: ● <config># interface range 10GigabitEthernet <1-12> ● <config># interface range LAG <1-8>

### Example

```
FX2120# configure
FX2120(config)# interface LAG 1
FX2120(config-if)#[/pre]
```

Under (config-if)#[/pre], available sub-commands for LAN, VLAN or LAG will be different. Below shows the items under Ethernet LAN:

```
<config-if>#10g-media
<config-if># authentication
<config-if># back-pressure
<config-if># custom
<config-if># description
<config-if># device-check
<config-if># dos
<config-if># dot1x
<config-if># do
<config-if># dray_surveillance
<config-if># duplex
<config-if># eee
<config-if># end
<config-if># exit
<config-if># flowcontrol
```

```

<config-if># gvrp
<config-if># ip
<config-if># ipv6
<config-if># lacp
<config-if># lag
<config-if># lldp
<config-if># loop-protection
<config-if># mac
<config-if># mvr
<config-if># no
<config-if># poe
<config-if># port-security
<config-if># power
<config-if># protected
<config-if># qos
<config-if># rate-limit
<config-if># shutdown
<config-if># spanning-tree
<config-if># speed
<config-if># storm-control
<config-if># surveillance-vlan
<config-if># switchport
<config-if># udld
<config-if># vlan
<config-if># voice-vlan

```

#### Description

Syntax Items	Description
10g-media	<p>It is used for configuring 10G media type.</p> <p>dac100cm - Set the media type as 100cm DAC.</p> <p>dac300cm - Set the media type as 300cm DAC.</p> <p>dac500cm - Set the media type as 500cm DAC.</p> <p>dac50cm - Set the media type as 50cm DAC.</p> <p>fiber10g - Set the media type as 10G Fiber.</p> <p>fiber1g - Set the media type as 1G Fiber.</p> <p>none - Set the media type to NONE media.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# 10g-media dac100cm</li> <li>● &lt;config-if&gt;# 10g-media dac300cm</li> <li>● &lt;config-if&gt;# 10g-media dac500cm</li> <li>● &lt;config-if&gt;# 10g-media dac50cm</li> <li>● &lt;config-if&gt;# 10g-media fiber10g</li> <li>● &lt;config-if&gt;# 10g-media fiber1g</li> <li>● &lt;config-if&gt;# 10g-media none</li> </ul>
authentication	Apply Auth Manager Port Configuration Commands to the

---

specified interface (Ethernet port/LAG port).

dot1x – Execute the 802.1x authentication.

guest-vlan – Authenticate the guest VLAN configuration.

host-mode <multi-auth / multi-host / single-host> - Set the host mode for authentication on this port.

max-hosts <1-256> - Set the maximum number of authenticated hosts allowed on this port.

method <local/radius> - Set authentication method by using local or RADIUS server.

order <dot1x / mac /web> - Add an authentication type to the order list.

port-control <auto / force-auth / force-unauth> - Set the port state of this port as AUTO, Authorized or Unauthorized.

radius-attributes vlan reject – If the Radius server authorizes the supplicant, but does not provide a supplicant VLAN, the supplicant will be rejected. If the parameter is omitted, the option is applied by default.

radius-attributes vlan static - If the Radius server authorizes the supplicant but does not provide a supplicant VLAN, the supplicant will be accepted.

reauth – Enable/Disable Reauthentication for this port

timer <inactive> <60-65535> – Set the time value for authentication. After the time interval, if there is no activity from the client, it will be unauthorized.

timer quiet <0-65535> - Set the time value to wait failed authentication exchange.

timer reauth <300-4294967294> - Set the time value. After the time interval, an automatic re-authentication should be initiated.

web – Execute the web-based authentication.

web max-login-attempts <3-10> – Set a maximum number of login attempts on the port.

web max-login-attempts infinite – No limit for login attempts.

Related Syntax:

- <config-if># authentication dot1x
- <config-if># authentication guest-vlan
- <config-if># authentication host-mode <multi-auth / multi-host / single-host>
- <config-if># authentication mac
- <config-if># authentication max-hosts <1-256>
- <config-if># authentication method <local/radius>
- <config-if># authentication order <dot1x / mac /web>
- <config-if># authentication port-control <auto / force-auth / force-unauth>
- <config-if># authentication radius-attributes vlan reject
- <config-if># authentication radius-attributes vlan static
- <config-if># authentication reauth
- <config-if># authentication timer inactive <60-65535>
- <config-if># authentication timer quiet <0-65535>

---

	<ul style="list-style-type: none"> <li>● &lt;config-if&gt;# authentication timer reauth &lt;300-4294967294&gt;</li> <li>● &lt;config-if&gt;# authentication web</li> <li>● &lt;config-if&gt;# authentication web max-login-attempts &lt;3-10&gt;</li> <li>● &lt;config-if&gt;# authentication web max-login-attempts infinite</li> </ul>
back-pressure	<p>Enable back-pressure for the specified interface (Ethernet port/LAG port).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# back-pressure</li> </ul>
custom	<p>&lt;enable&gt; - Enable the custom module configuration for the specified interface (Ethernet port/LAG port).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# custom enable</li> </ul>
description	<p>Write a description for the specified interface (Ethernet port/LAG port).</p> <p>&lt;WORD&gt; - Enter a description (up to 32 characters).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# description &lt;WORD&gt;</li> </ul>
device-check	<p>Perform a device check the specified interface (Ethernet port/LAG port).</p> <p>ip-address&lt;A.B.C.D&gt; - Enter the IP address of the device.</p> <p>interval &lt;120/15/30/60&gt;- Check the device interval by entering the time value. Unit is second.</p> <p>retry &lt;1/3/5&gt; - Enter the retry time during a checking period.</p> <p>failure-action &lt;nothing/powercycle/poweroff&gt; – Set the power cycle.</p> <p>alert &lt;disable/enable&gt; - Enable or disable the alert function.</p> <p>&lt;STRING&gt; - Enter multiple IP addresses separated by ",".</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# device-check ip-address &lt;A.D.C.D&gt; interval &lt;120/15/30/60&gt; retry &lt;1/3/5&gt; failure-action &lt;nothing/powercycle/poweroff&gt;</li> <li>● &lt;config-if&gt;# device-check ip-address &lt;A.D.C.D&gt; interval &lt;120/15/30/60&gt; retry &lt;1/3/5&gt; failure-action &lt;nothing/powercycle/poweroff&gt; alert &lt;disable/enable&gt;</li> <li>● &lt;config-if&gt;# device-check multi ip-address &lt;STRING&gt; interval &lt;120/15/30/60&gt; retry &lt;1/3/5&gt; failure-action &lt;nothing/powercycle/poweroff&gt; alert &lt;disable/enable&gt;</li> </ul>
dos	Apply DoS to the specified interface (Ethernet port/LAG port).
dot1x	<p>It is available for GigabitEthernet port only.</p> <p>guest-vlan – Set guest VLAN configuration.</p> <p>max-req &lt;1-10&gt;- Set the maximum request retries. Default is 2.</p> <p>Port-control &lt;auto/force-auth/force-unauth&gt;- Set the port control value (auto, authorized or unauthorized)</p> <p>reauth – Enable/disable the reauthentication for this port.</p> <p>timeout &lt;quiet-period / reauth-period / server-timeout</p>

	<p>/supp-timeout /tx-period&gt; - Set timeout value for this port.          &lt;0-65535&gt; - Set a value as quiet period (default is 60-second).          &lt;300-4294967294&gt; - Set a value as re-authentication period. (default is 3600-second).          &lt;1-65535&gt; - Set a value to wait for a packet retransmission to the authentication server.  <b>supp-timeout &lt;1-65535&gt;</b> – Set a value as supplicant timeout period.  <b>tx-period &lt;1-65535&gt;</b> - Set a value to wait for a response to an EAP-request / identity before resending the request.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# dot1x guest-vlan</li> <li>● &lt;config-if&gt;# dot1x max-req &lt;1-10&gt;</li> <li>● &lt;config-if&gt;# dot1x port-control &lt;auto /force-auth /force-unauth &gt;</li> <li>● &lt;config-if&gt;# dot1x reauth</li> <li>● &lt;config-if&gt;# dot1x timeout quiet-period &lt;0-65535&gt;</li> <li>● &lt;config-if&gt;# dot1x timeout reauth-period &lt;300-4294967294&gt;</li> <li>● &lt;config-if&gt;# dot1x timeout server-timeout &lt;1-65535&gt;</li> <li>● &lt;config-if&gt;# dot1x timeout supp-timeout &lt;1-65535&gt;</li> <li>● &lt;config-if&gt;# dot1x timeout tx-period &lt;1-65535&gt;</li> </ul>
do	Run execution commands in current mode.
dray_surveillance	<p>Use this command to set the ONVIF throughput alert threshold.</p> <p>&lt;16-1000000&gt; - Specify a number as the alert threshold for egress /ingress throughput.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;#dray_surveillance set threshold alert egress &lt;16-1000000&gt;</li> <li>● &lt;config-if&gt;#dray_surveillance set threshold alert ingress &lt;16-1000000&gt;</li> </ul>
duplex	<p>Apply the duplex configuration to the specified interface (Ethernet port/LAG port).</p> <p>&lt;Auto&gt; – Auto duplex configuration.</p> <p>&lt;Full&gt;– Force full duplex operation.</p> <p>&lt;Half&gt; – Force half-duplex operation.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# duplex &lt;auto/full/half&gt;</li> </ul>
eee	Apply the EEE configuration to the specified interface (Ethernet port).
end	End current mode, change to enable mode and return to previous phase.
exit	Exit from current mode.
flowcontrol	Configure flow-control mode to the specified interface (Ethernet port/LAG port).

	<p>&lt;Auto&gt; – Enable AUTO flow-control configuration.      &lt;Off&gt; – Disable the force flow-control.      &lt;On&gt; – Enable the force flow-control.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# flowcontrol &lt;auto/off/on&gt;</li> </ul>
gvrp	<p>Apply the GVRP configuration to the specified interface (Ethernet port/LAG port).</p> <p>registration-mode &lt;fixed / forbidden / normal&gt;- Set registration mode for GVRP. When registration-mode is fixed or forbidden, it will remove the dynamic port from VLAN.</p> <p>vlan-creation-forbid – Do not remove dynamic port from VLAN.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# gvrp registration-mode &lt;fixed / forbidden / normal&gt;</li> <li>● &lt;config-if&gt;# gvrp vlan-creation-forbid</li> </ul>
ip	<p>Apply IP configuration to the specified interface (Ethernet port/LAG port).</p> <p>acl &lt;NAME&gt; - Specify an ACL for packets. Enter the name of the ACL.</p> <p>bind-ip &lt;A.B.C.D&gt; - Enter an IP address for binding with the port type.</p> <p>conflict prevention bind-ip &lt;A.B.C.D&gt; - Enter the IP address for the binding.</p> <p>conflict prevention port-type DHCP-Client – Set DHCP Client as the port type.</p> <p>conflict prevention port-type DHCP-Server – Set DHCP Server as the port type.</p> <p>conflict prevention port-type Multiple-Hosts – Set Multiple-Hosts as the port type.</p> <p>conflict prevention port-type Multiple-Hosts has-server – Use this string if there is a DHCP server in this port.</p> <p>conflict prevention port-type Static-Binding – Set Static-Binding as the port type.</p> <p>igmp filter &lt;1-128&gt; - Use it to bind a profile for a port. Specify a profile ID.</p> <p>igmp max-groups &lt;0-256&gt; - Use it to limit port learning max group number (0-256).</p> <p>igmp max-groups action &lt;deny/replace&gt; - Use it to set the action (deny or replace) when the number of groups reach the limitation.</p> <p>source binding max-entry &lt;1-50&gt; - Set the maximum dynamic binding entry number.</p> <p>source binding max-entry no-limit - No limit to binding entry.</p> <p>source verify mac-and-ip – Use it to enable IP source guard function.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# ip acl &lt;NAME&gt;</li> <li>● &lt;config-if&gt;# ip conflict prevention bind-ip &lt;A.B.C.D&gt;</li> </ul>

	<ul style="list-style-type: none"> <li>● &lt;config-if&gt;# ip conflict prevention port-type DHCP-Client</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type DHCP-Client has-server</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type DHCP-Server</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type DHCP-Server has-server</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type Multiple-Hosts</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type Multiple-Hosts has-server</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type Static-Binding</li> <li>● &lt;config-if&gt;# ip conflict prevention port-type Static-Binding has-server</li> <li>● &lt;config-if&gt;# ip igmp filter &lt;1-128&gt;</li> <li>● &lt;config-if&gt;# ip igmp max-groups &lt;0-256&gt;</li> <li>● &lt;config-if&gt;# ip igmp max-groups action &lt;deny/replace&gt;</li> <li>● &lt;config-if&gt;# ip source binding max-entry &lt;1-50&gt;</li> <li>● &lt;config-if&gt;# ip source binding max-entry no-limit</li> <li>● &lt;config-if&gt;# ip source verify mac-and-ip</li> </ul>
ipv6	<p>Apply IPv6 configuration to the specified interface (Ethernet port/LAG port).</p> <p>acl &lt;NAME&gt; - Specify the ACL name for packets</p> <p>mld &lt;filter&gt; – Set IPv6 filter for MLD configuration.</p> <p>mld max-groups – Specify the number for maximum group. &lt;0-256&gt; - MLD snooping group number.</p> <p>action &lt;deny /replace&gt; – Define the action to be performed when excessing the maximum group.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# ipv6 acl &lt;NAME&gt;</li> <li>● &lt;config-if&gt;# ipv6 mld filter</li> <li>● &lt;config-if&gt;# ipv6 mld max-groups &lt;0-256&gt;</li> <li>● &lt;config-if&gt;# ipv6 mld max-groups action &lt;deny / replace&gt;</li> </ul>
lacp	<p>Apply LACP Configuration to the specified interface (Ethernet port/LAG port).</p> <p>&lt;1-65535&gt; - Set a number for IEEE 802.3 link aggregation port priority.</p> <p>&lt;long/short&gt; – Set long or short timeout value.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# lacp port-priority &lt;1-65535&gt;</li> <li>● &lt;config-if&gt;# lacp timeout &lt;long/short&gt;</li> </ul>
lag	<p>Apply Link Aggregation Group Configuration the specified interface (Ethernet port/LAG port).</p> <p>&lt;1-8&gt; - Specify LAG number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# lag &lt;1-8&gt;</li> </ul>
lldp	med location - Configure the LLDP MED location data. The "coordinate", "civic-address", "ecs-elin" locations are

	<p>independent, so at most three location TLVs could be sent if their data are not empty.</p> <p>med network-policy add / remove - Configure the LLDP MED network policy table. Add /remove a network policy entry that can be bind to ports.</p> <p>med tlv-select - Configure LLDP MED TLVs selection. Available optional TLVs are network-policy, location, inventory and poe-pse.</p> <p>tlv-select - Select LLDP TLVs to send.</p> <p>&lt;civic-address&gt; - The location is specified as civic address.</p> <p>&lt;ADDR&gt; - Range from 6 to 160 hexadecimal bytes.</p> <p>&lt;Coordinate&gt; - The location is specified as coordinates.</p> <p>&lt;ADDR&gt; - 16 hexadecimal bytes exactly.</p> <p>&lt;ecs-elin&gt; - The location is specified as ECS ELIN.</p> <p>&lt;ADDR&gt; - 10 to 25 hexadecimal bytes.</p> <p>&lt;IDX_LIST&gt; - Range from 1 to 32.</p> <p>&lt;TLV&gt; - LLDP optional TLV, pick from: port-desc, sys-name, sys-desc, sys-cap, mac-phy, lag, max-frame-size, management-addr.</p> <p>pvid &lt;disable/enable&gt; - Enable or disable the TX optional-TLV 802.1 PVID.</p> <p>vlan-name &lt;add/remove&gt; &lt;2-4094&gt; - Add/remove a selected VLAN. Enter the VLAN ID number.</p> <p>&lt;rx&gt; - Enable LLDP reception on interface.</p> <p>&lt;tx&gt; - Enable LLDP transmission on interface.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# lldp med location &lt;civic-address/coordinate/ecs-elin&gt; &lt;ADDR&gt;</li> <li>● &lt;config-if&gt;# lldp med network-policy add &lt;IDX_LIST&gt;</li> <li>● &lt;config-if&gt;# lldp med network-policy remove &lt;IDX_LIST&gt;</li> <li>● &lt;config-if&gt;# lldp med tlv-select &lt;network-policy/location/inventory/poe-pse&gt; &lt;network-policy/location/inventory/poe-pse&gt; &lt;network-policy/location/inventory/poe-pse&gt;</li> <li>● &lt;config-if&gt;# lldp tlv-select &lt;TLV/pvid/vlan-name&gt;</li> <li>● &lt;config-if&gt;# lldp tlv-select pvid &lt;disable/enable&gt;</li> <li>● &lt;config-if&gt;# lldp tlv-select vlan-name &lt;add/remove&gt; &lt;2-4094&gt;</li> <li>● &lt;config-if&gt;# lldp &lt;rx/tx&gt;</li> </ul>
loop-protection	<p>Record the log, shutdown the port or follow the global loop-protection settings for each port.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# loop-protection action all</li> <li>● &lt;config-if&gt;# loop-protection action global</li> <li>● &lt;config-if&gt;# loop-protection action log</li> <li>● &lt;config-if&gt;# loop-protection action shutdown</li> </ul>
mac	<p>Specify an access control list for packets.</p> <p>Before configuring, you have to create an ACL based on MAC</p>

	<p>address. For example,</p> <pre>&lt;config&gt;# mac acl CA_ACL &lt;config-mac-acl&gt;# &lt;NAME&gt; - Enter a name for ACL.</pre> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# mac acl &lt;NAME&gt;</li> </ul>
mvr	<p>Make MVR configuration.</p> <p>immediate - Enable MVR function.</p> <p>type &lt;receiver/source&gt; - Specify MVR port type as receiver or source.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# mvr immediate</li> <li>● &lt;config-if&gt;# mvr type &lt;receiver/source&gt;</li> </ul>
no	<p>Negate command. Such command can disable current setting of command executed and return to the factory setting of that command.</p> <p>Example:</p> <pre>&lt;config-if&gt; # no mvr The operation will make mvr setting is default. Continue? [yes/no]:yes &lt;config-if&gt; #</pre> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# no &lt;command&gt;</li> </ul>
poe	Enable or disable the PoE port.
port-security	<p>port-security - Enable the port security functionality. Default is disabled.</p> <p>address-limit &lt;1-256&gt;- Enter the number as limitation for MAC address.</p> <p>action &lt;discard / forward / shutdown&gt; - Speicfy an action to be performed.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# port-security</li> <li>● &lt;config-if&gt;# port-security adderss-limit &lt;1-256&gt; action &lt;discard / forward / shutdown&gt;</li> </ul>
power	<p>Configure the inline power for the PoE device.</p> <p>inline auto - Turn on the PoE device discovery protocol and apply the power to the device.</p> <p>inline never - Turn off the PoE device power.</p> <p>power-limit &lt;15.4w/30w/MW&gt; - Set the power limit for the PoE device.</p> <p>priority &lt;1-3/critical/high/low&gt; - Set the priority of power application for the PoE device.</p> <p>schedule-index - Specify the index number (1 to 15) of the schedule profile.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# power inline auto</li> </ul>

	<ul style="list-style-type: none"> <li>● &lt;config-if&gt;# power inline never</li> <li>● &lt;config-if&gt;# power power-limit &lt;15.4w/30w/MW&gt;</li> <li>● &lt;config-if&gt;# power priority &lt;1-3/critical/high/low&gt;</li> <li>● &lt;config-if&gt;# power schedule-index &lt;1-15&gt;</li> </ul>
protected	<p>Configure an interface to be a protected port.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;#protected</li> </ul>
qos	<p>cos - Configure the default CoS value for an Ethernet port.  &lt;0-7&gt; - Specify a CoS value for the selected interface. Default value is 0.</p> <p>remark - Configure remarking state of each port.</p> <p>trust - Configure each port to trust state while the system is in "basic" mode. There are four trust types for a device to judge the appropriate queue of the packets.</p> <p>&lt;cos&gt; - Enable cos remarking.</p> <p>&lt;dscp&gt; - Enable DSCP remarking.</p> <p>&lt;cos-dscp&gt; - Enable cos and DSCP remarking.</p> <p>&lt;precedence&gt; - Enable IP precedence remarking.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;#qos cos &lt;0-7&gt;</li> <li>● &lt;config-if&gt;#qos remark &lt;cos/dscp/precedence&gt;</li> <li>● &lt;config-if&gt;#qos trust &lt;cos/cos-dscp/ dscp/precedence&gt;</li> </ul>
rate-limit	<p>It is effective for Ethernet port only.</p> <p>egress - Configure the egress port shaper.</p> <p>ingress - Configure the ingress port shaper.</p> <p>egress queue - Configure queue for egress port shaper.</p> <p>&lt;0-1000000&gt; - Enter a number as the average traffic rate in Kbps. It must be a multiple of 16.</p> <p>&lt;16-1000000&gt; - Enter a number as the average traffic rate in Kbps. It must be a multiple of 16.</p> <p>&lt;1-8&gt; - Specify a number as queue ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# rate-limit egress &lt;0-1000000&gt;</li> <li>● &lt;config-if&gt;# rate-limit egress queue &lt;1-8&gt; &lt;16-1000000&gt;</li> <li>● &lt;config-if&gt;# rate-limit ingress &lt;16-1000000&gt;</li> </ul>
shutdown	<p>Disable the selected interface.</p> <p>Example:</p> <pre>(config)# interface 10gigabitethernet 3 (config-if)# shutdown (config-if)# exit (config)# exit # show interface 10GigabitEthernet 3 10GigabitEthernet3 is down</pre> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# shutdown</li> </ul>

spanning-tree	<p>Configure spanning-tree settings.</p> <p>bpdu-filter - Set the BPDU-Filter for specified port.</p> <p>bpdu-guard - Set the BPDU-Guard for specified port.</p> <p>edge - Set the edge-port for specified port.</p> <p>cost - Change an interface's spanning tree path cost.</p> <p>link-type - Specify a link type for spanning tree protocol use.</p> <p>mcheck - Set the mcheck for specified port to migrate.</p> <p>mst - Set spanning-tree parameters of instance.</p> <p>port-priority- Set the priority for specified instance.</p> <p>&lt;0-200000000&gt; - Specify a value of internal path cost (0 means Auto).</p> <p>&lt;point-to-point&gt; - The selected port will be treated as point-to-point.</p> <p>&lt;shared&gt; - The selected port will be treated as shared.</p> <p>&lt;0-15&gt; - Specify an instance ID.</p> <p>&lt;0-240&gt; - Specify a priority number for the selected port.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# spanning-tree &lt;bpdu-filter /bpdu-guard/ edge&gt;</li> <li>● &lt;config-if&gt;# spanning-tree cost &lt;0-200000000&gt;</li> <li>● &lt;config-if&gt;# spanning-tree link-type &lt;point-to-point/shared&gt;</li> <li>● &lt;config-if&gt;#spanning-tree mcheck</li> <li>● &lt;config-if&gt;#spanning-tree mst &lt;0-15&gt; cost &lt;0-200000000&gt;</li> <li>● &lt;config-if&gt;# spanning-tree port-priority &lt;0-240&gt;</li> </ul>
speed	<p>Configure speed operation.</p> <p>&lt;10/100/1000&gt; - Force 10/100/1000 Mbps operation.</p> <p>&lt;auto&gt; - Enable Auto speed configuration.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# speed&lt;10/100/1000&gt;</li> <li>● &lt;config-if&gt;# speed auto</li> </ul>
storm-control	<p>action - Select an action for storm control after exceeding the threshold.</p> <p>broadcast level - Enable the storm control type of broadcast for the selected port.</p> <p>unknown-multicast level - Enable the storm control type of unknown-multicast for the selected port.</p> <p>unknown-unicast level- Enable the storm control type of unknown-unicast for the selected port.</p> <p>&lt;drop&gt; - Drop packets after exceeding storm control threshold.</p> <p>&lt;shutdown&gt; - Disable the port after exceeding storm control threshold.</p> <p>&lt;1-1000000&gt; - Specify the rate value.</p> <p><b>Related Syntax:</b></p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# storm-control action &lt;drop/shutdown&gt;</li> <li>● &lt;config-if&gt;# storm-control broadcast level &lt;1-1000000&gt;</li> </ul>

	<ul style="list-style-type: none"> <li>● &lt;config-if&gt;# storm-control unknown-multicast level &lt;1-1000000&gt;</li> <li>● &lt;config-if&gt;# storm-control unknown-unicast level &lt;1-1000000&gt;</li> </ul>
surveillance-vlan	<p>cos - Set surveillance VLAN configuration.</p> <p>mode - Set surveillance member port join mode.</p> <p>&lt;all&gt; - QoS attributes are applied to all packets that are classified to the Surveillance VLAN.</p> <p>&lt;src&gt; - QoS attributes are applied only on packets from IP phones.</p> <p>&lt;auto&gt; - Make surveillance member port join voice VLAN automatically.</p> <p>&lt;manual&gt; - The administrator manually makes surveillance member port join voice VLAN.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# surveillance-vlan cos &lt;all/src&gt;</li> <li>● &lt;config-if&gt;# surveillance-vlan mode &lt;auto/manual&gt;</li> </ul>
switchport	<p>Set switching mode characteristics.</p> <p>access vlan - Use it to set a native VLAN on the interface.</p> <p>default-vlan tagged - Use it to make the selected port interface to become the default VLAN tagged member.</p> <p>forbidden default-vlan - Use it to forbid the defult-vlan on the interface.</p> <p>forbidden vlan - Use it to forbid a vlan on the interface.</p> <p>hybrid acceptable-frame-type - Use it to choose which type of frame will be accepted.</p> <p>hybrid allowed - Use it to allow a VALN set on the interface.</p> <p>hybrid ingress-filtering - Use it to enable VLAN ingress filter.</p> <p>hybrid pvid - Use it to set PVID of the interface.</p> <p>mode access - Use it to configure the selected port as the role of access. Only untagged frames will be accepted.</p> <p>mode hybrid - Use it to configure the selected port as the role of hybrid. Support all functions defined in IEEE 802.1Q specification.</p> <p>mode trunk uplink - Use it to configure the selected port as the role of trunk. It can recognize double tagging on the interface.</p> <p>trunk allowed - Use it to allow a VALN on the interface.</p> <p>trunk native - Use it to set a native VLAN on the interface.</p> <p>tunnel vlan - Use it to set a Dot1q tunnel VLAN on the interface.</p> <p>vlan tpid - Use it to set TPID on the interface.</p> <p>&lt;1-4094&gt; - Specify a VLAN ID.</p> <p>&lt;add/remove&gt; - Add or remove the allowed VLAN list.</p> <p>&lt;all/tagged-only/untagged-only&gt; - Specify an option for accepting all frames, only tagged frames or only untagged frames.</p> <p>&lt;1-4094/all&gt; - Specify a VLAN ID or all VLAN IDs.</p> <p>&lt;0x8100 / 0x88A8 / 0x9100 / 0x9200&gt; - Specify one</p>

---

	<p>tag-protocol-id.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# switchport access vlan &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport default-vlan tagged</li> <li>● &lt;config-if&gt;# switchport forbidden default-vlan</li> <li>● &lt;config-if&gt;# switchport forbidden vlan &lt;add/remove&gt; &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport hybrid acceptable-frame-type &lt;all/tagged-only/untagged-only&gt;</li> <li>● &lt;config-if&gt;# switchport hybrid allowed vlan add &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport hybrid allowed vlan add &lt;1-4094&gt; &lt;tagged/ untagged&gt;</li> <li>● &lt;config-if&gt;# switchport hybrid allowed vlan remove &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport hybrid ingress-filtering</li> <li>● &lt;config-if&gt;# switchport hybrid pvid &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport mode &lt;access/hybrid&gt;</li> <li>● &lt;config-if&gt;# switchport mode trunk uplink</li> <li>● &lt;config-if&gt;# switchport trunk allowed vlan &lt;add /remove&gt; &lt;1-4094/all&gt;</li> <li>● &lt;config-if&gt;# switchport trunk native &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport tunnel vlan &lt;1-4094&gt;</li> <li>● &lt;config-if&gt;# switchport vlan tpid &lt; 0x8100/0x88A8 / 0x9100 / 0x9200&gt;</li> </ul>
udld	<p>Configure UDLD enabled or disabled and ignore global UDLD setting.</p> <p>aggressive - Enable UDLD protocol on such interface.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# udld</li> <li>● &lt;config-if&gt;# udld aggressive</li> </ul>
vlan	<p>mac-vlan group - Set a MAC-based VLAN configuration.</p> <p>&lt;1-2147483647&gt; - Specify a group ID to map.</p> <p>&lt;1-4094&gt; - Specify a VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# vlan mac-vlan group &lt;1-2147483647&gt; vlan &lt;1-4094&gt;</li> </ul>
voice-vlan	<p>cos - Set voice VLAN configuration as COS mode.</p> <p>mode - Set voice member port join mode.</p> <p>&lt;all&gt; - QoS attributes are applied on all packets that are classified to the Voice VLAN.</p> <p>&lt;src&gt; - QoS attributes are applied only on packets from IP phones.</p> <p>&lt;auto&gt; - Make voice member port join voice VLAN automatically.</p> <p>&lt;manual&gt; - The administrator manually makes voice member port join voice VLAN.</p> <p>Related Syntax:</p>

---

- 
- |  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>● &lt;config-if&gt;# voice-vlan cos &lt;all/src&gt;</li> <li>● &lt;config-if&gt;# voice-vlan mode &lt;auto/manual&gt;</li> </ul> |
|--|---|
- 

### **Example**

```
FX2120# configure
FX2120(config)# interface LAG 1
FX2120(config-if)# speed 100
FX2120(config-if)# backpressure
FX2120(config-if)# lldp med location ecs-elin 112233445566778899AA
FX2120(config-if)# vlan mac-vlan group 35 vlan 1000
FX2120(config-if)# device-check multi ip-address 192.168.1.58,192.168.1.68 interval 30 retry 3
failure-action nothing alert enable
killall: jobsd: no process killed
FX2120(config-if)#

```

## **Telnet Command: ip**

Use this command to create an IPv4 access list (ACL) which performs classification on layer 3 fields and enters ip-access configuration mode.

### **Syntax Items**

ip acl  
ip address  
ip arp  
ip conflict  
ip default-gateway  
ip dhcp  
ip dns  
ip forcedhttps  
ip http  
ip https  
ip igmp  
ip route  
ip source  
ip ssh  
ip telnet

### **Description**

---

<b>Syntax Items</b>	<b>Description</b>
ip acl	<p>acl &lt;NAME&gt; - Set the name of the access list (ACL) based on IPv4. To configure detailed settings, enter the name of ACL to access into next level. &lt;config&gt;#ip acl &lt;NAME&gt; Then, available sub-command includes: &lt;config-ip-acl&gt;#deny</p>

---

---

```
<config-ip-acl>#do  
<config-ip-acl>#end  
<config-ip-acl>#exit  
<config-ip-acl>#permit  
<config-ip-acl>#sequence  
<config-ip-acl>#show
```

---

Use the "deny" command to create deny rules for the IPv4 access list.

<0-255>/*egp/hmp/icmp/igp/ipinip/ipv6 /ipv6:frag /ipv6:icmp /ipv6:rout / ip / l2tp /ospf /pim / rdp / rsvp /tcp /udp >* - Specify the IP protocol number or enter the name of the protocol.

<A.B.C.D>/<A.B.C.D> <A.B.C.D>/<A.B.C.D> - Specify the source and destination IPv4 addresses and subnet masks.

dscp <0-63> - Set the DSCP filtering by specifying a value for DSCP.

precedence <0-7> - Set the cos value and the cos mask for a packet.

shutdown - Disable the Ethernet interface.

any - Any IP address (as source or destination).

Related Syntax:

- <config-ip-acl>#deny <0-255> <A.B.C.D>/<A.B.C.D>  
  <A.B.C.D>/<A.B.C.D> dscp <0-63>
  - <config-ip-acl>#deny <0-255> <A.B.C.D>/<A.B.C.D>  
  <A.B.C.D>/<A.B.C.D> dscp <0-63> shutdown
  - <config-ip-acl>#deny <0-255> <A.B.C.D>/<A.B.C.D>  
  <A.B.C.D>/<A.B.C.D> precedence <0-7>
  - <config-ip-acl>#deny <0-255> <A.B.C.D>/<A.B.C.D>  
  <A.B.C.D>/<A.B.C.D> precedence <0-7> shutdown
  - <config-ip-acl>#deny <0-255> any <A.B.C.D>/<A.B.C.D>  
  dscp <0-63>
  - <config-ip-acl>#deny <0-255> any <A.B.C.D>/<A.B.C.D>  
  dscp <0-63> shutdown
  - <config-ip-acl>#deny <0-255> any <A.B.C.D>/<A.B.C.D>  
  precedence <0-7>
  - <config-ip-acl>#deny <0-255> any <A.B.C.D>/<A.B.C.D>  
  precedence <0-7> shutdown
  - <config-ip-acl>#deny <0-255> any any dscp <0-7>
  - <config-ip-acl>#deny <0-255> any any dscp <0-7>  
  shutdown
  - <config-ip-acl>#deny <0-255> any any precedence <0-7>
  - <config-ip-acl>#deny <0-255> any any precedence <0-7>  
  shutdown
- 

Use the "do" command to run execution command in current mode.

<SEQUENCE> -

Related Syntax:

- <config-ip-acl>#do <SEQUENCE>
- 

Use the "end" command to finish current mode. Any changes

---

	<p>in current mode will be saved.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ip-acl&gt;#end</li> </ul>
	<p>Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ip-acl&gt;#exit</li> </ul>
	<p>Use the “no sequence” command to delete any entry in management ACL.</p> <p>&lt;1-2147483647&gt; - Specify an index number of the ACL.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ip-acl&gt;#no sequence &lt;1-2147483647&gt;</li> </ul>
	<p>Use the “sequence” command to deny or permit the ACL.</p> <p>&lt;1-2147483647&gt; - Enter the sequence of ACL entry. The sequence represents the priority of the ACE in the ACL.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ip-acl&gt;#sequence &lt;1-2147483647&gt; deny</li> <li>● &lt;config-ip-acl&gt;#sequence &lt;1-2147483647&gt; permit</li> </ul>
	<p>Use the “show acl” command to list current status of the selected ACL.</p>
ip address	<p>Use this command to modify the administration IPv4 address.</p> <p>address &lt;A.B.C.D&gt; - Specify the IPv4 addresses. This IP is required when the administrator wants to access into VigorSwitch through Telnet, SSH, HTTP, HTTPS, SNMP and so on.</p> <p>mask &lt;A.B.C.D&gt; - Specify the netmask of the IP address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip address &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;#ip address &lt;A.B.C.D&gt; mask &lt;A.B.C.D&gt;</li> </ul>
ip arp	<p>Use this command to enable the function of dynamic ARP inspection.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip arp inspection</li> <li>● &lt;config&gt;#ip arp inspection vlan &lt;1-4094&gt;</li> </ul>
ip conflict	<p>Use this command to do IP conflict prevention.</p> <p>lag - Enable/disable the function.</p> <p>&lt;A.B.C.D&gt; - Specify the IPv4 addresses.</p> <p>&lt;1-12&gt; - Specify a physical port.</p> <p>&lt;1-8&gt; - Specify a LAG port.</p> <p>&lt;1-4094&gt; - Specify a VLAN ID number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip conflict detection</li> <li>● &lt;config&gt;#ip conflict lag</li> <li>● &lt;config&gt;#ip conflict prevention</li> <li>● &lt;config&gt;#ip conflict prevention binding &lt;A:B:C:D:E:F&gt; vlan</li> </ul>

	<ul style="list-style-type: none"> <li>● &lt;1-4094&gt; &lt;A.B.C.D&gt; 10GigabitEthernet &lt;1-12&gt; server</li> <li>● &lt;config&gt;#ip conflict prevention binding &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; 10GigabitEthernet &lt;1-12&gt; static</li> <li>● &lt;config&gt;#ip conflict prevention binding &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; LAG &lt;1-8&gt; server</li> <li>● &lt;config&gt;#ip conflict prevention binding &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; LAG &lt;1-8&gt; static</li> <li>● &lt;config&gt;#ip conflict prevention binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface 10GigabitEthernet &lt;1-12&gt; server</li> <li>● &lt;config&gt;#ip conflict prevention binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface 10GigabitEthernet &lt;1-12&gt; static</li> <li>● &lt;config&gt;#ip conflict prevention binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface LAG&lt;1-8&gt; server</li> <li>● &lt;config&gt;#ip conflict prevention binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface LAG&lt;1-8&gt; static</li> <li>● &lt;config&gt;#ip conflict prevention clear</li> <li>● &lt;config&gt;#ip conflict prevention server-ip &lt;A.B.C.D&gt; interface 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;#ip conflict prevention server-ip &lt;A.B.C.D&gt; interface LAG &lt;1-8&gt;</li> </ul>
ip default-gateway	<p>Use this command to modify default gateway address.</p> <p>address &lt;A.B.C.D&gt; - Specify the IPv4 addresses.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip default-gateway &lt;A.B.C.D&gt;</li> </ul>
ip dhcp	<p>Use this command to enable DHCP client to get IP address from remote DHCP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip dhcp</li> </ul>
ip dns	<p>Use this command to modify DNS server configuration.</p> <p>&lt;A.B.C.D&gt; - Specify the IP address as primary DNS server.</p> <p>&lt;A.B.C.D&gt; &lt;A.B.C.D&gt; - Sepcify two IP addresses as primary and secondary DNS server.</p> <p>&lt;X:X:XX:X:X&gt; - Specify the MAC address as primary DNS server.</p> <p>&lt;X:X:XX:X:X&gt;&lt;X:X:XX:X:X&gt; - Specify two MAC addresses as primary and secondary DNS server.</p> <p>lookup – Enable the IP domain naming system lookup.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip dns &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;#ip dns &lt;A.B.C.D&gt; &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;#ip dns &lt;X:X:XX:X:X&gt;</li> <li>● &lt;config&gt;#ip dns &lt;X:X:XX:X:X&gt;&lt;X:X:XX:X:X&gt;</li> <li>● &lt;config&gt;#ip dns lookup</li> </ul>
ip forcedhttps	<p>Use this command to enable the function of forced HTTPS configuration.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config&gt;#ip forcedhttps</li> </ul>
ip http	<p>Use this command to enable the function of HTTP configuration.</p> <p>Session-timeout – Set the session timeout.</p> <p>&lt;0-86400&gt; - Set the timeout value. 0 means no timeout.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip http session-timeout &lt;0-86400&gt;</li> </ul>
ip https	<p>Use this command to enable the function of HTTPS configuration.</p> <p>session-timeout – Set the session timeout.</p> <p>&lt;0-86400&gt; - Set the timeout value. 0 means no timeout.</p> <p>tls version &lt;tls1.2/tls1.3&gt; - Set the TLS version.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip https session-timeout &lt;0-86400&gt;</li> <li>● &lt;config&gt;#ip https tls version &lt;tls1.2/tls1.3&gt;</li> </ul>
ip igmp	<p>Use this command to set IGMP profile and enable IGMP snooping function.</p> <p>Profile – Set IGMP profile.</p> <p>&lt;1-128&gt; - Enter the index number of IGMP profile to access into next phase for configuring detailed settings.</p> <p>&lt;A.B.C.D&gt;&lt;A.B.C.D&gt; - Specify the source and destination IPv4 addresses</p> <p>action &lt;deny/permit&gt; - Specify the rule (deny/permit) for the IGMP profile.</p> <p>snooping forward-method &lt;dip/mac&gt; - Set the forward method.</p> <p>snooping report-suppression - Set the IGMP v1 or v2 report suppression.</p> <p>snooping unknown-multicast action drop /flood/router-port- Set unknown multicast. The packets will be dropped, flood, or forwarded to the router ports.</p> <p>snooping version &lt;2/3&gt; - Set the IGMP snooping operation version.</p> <p>snooping vlan &lt;VLAN-LIST&gt;- Set a VLAN ID (1 to 4094) for the IGMP VLAN configuration.</p> <p>forbidden-port 10GigabitEthernt &lt;1 to 12&gt; / LAG &lt;1 to 8&gt; - Specify an interface for the IPv4 forbidden port configuration.</p> <p>immediate-leave - Enable the IGMP snooping immediate-leave function.</p> <p>last-member-query-count &lt;1-7&gt;- Set a value as the Last Member Query Count.</p> <p>last-member-query-interval &lt;1-25&gt; - Set the time interval.</p> <p>querier - Enable the querier for the IGMP VLAN configuration.</p> <p>querier &lt;2/3&gt; - Set the querier version (Version 2 or Version 3).</p> <p>query-interval &lt;30-18000&gt; - Set the time interval for the query.</p> <p>response-time &lt;5-20&gt; - Set the response time.</p> <p>robustness-variable &lt;1-7&gt; - Set the robustness variable.</p> <p>router learn pim-dvmrp - Enable the IGMP snooping router</p>

---

port learn by PIM, DVMRP and IGMP messages.  
 static-group <A.B.C.D> - Specify the IPv4 multicast address.  
 interfaces 10GigabitEthernt <1 to 12>/LAG <1 to 8> - Specify an interface.  
 static-port 10GigabitEthernt <1 to 12>/LAG <1 to 8> - Set the static port for an interface.  
 static-router-port 10GigabitEthernt <1 to 12>/LAG <1 to 8> - Set the static router port for an interface.

Related Syntax:

- <config>#ip igmp profile <1-128>
  - <config-igmp-profile># do
  - <config-igmp-profile># end
  - <config-igmp-profile># exit
  - <config-igmp-profile># profile range ip <A.B.C.D><A.B.C.D>
  - <config-igmp-profile># profile range ip <A.B.C.D><A.B.C.D> action <deny/permit>
  - <config-igmp-profile># profile range ip <A.B.C.D> action <deny/permit>
  - <config-igmp-profile># show
- <config>#ip igmp snooping
- <config>#ip igmp snooping forward-method <dip/mac>
- <config>#ip igmp snooping report-suppression
- <config>#ip igmp snooping unknown-multicast action <drop / flood / router-port>
- <config>#ip igmp snooping version <2/3>
- <config>#ip igmp snooping vlan <VLAN-LIST> forbidden-port 10GigabitEthernt <1 to 12>
- <config>#ip igmp snooping vlan <VLAN-LIST> forbidden-port LAG <1 to 8>
- <config>#ip igmp snooping vlan <VLAN-LIST> forbidden-router-port 10GigabitEthernt <1 to 12>
- <config>#ip igmp snooping vlan <VLAN-LIST> forbidden-router-port LAG <1 to 8>
- <config>#ip igmp snooping vlan <VLAN-LIST> immediate-leave
- <config>#ip igmp snooping vlan <VLAN-LIST> last-member-query-count <1-7>
- <config>#ip igmp snooping vlan <VLAN-LIST> last-member-query-interval <1-25>
- <config>#ip igmp snooping vlan <VLAN-LIST> querier
- <config>#ip igmp snooping vlan <VLAN-LIST> querier <2/3>
- <config>#ip igmp snooping vlan <VLAN-LIST> query-interval <30-18000>
- <config>#ip igmp snooping vlan <VLAN-LIST> response-time <5-20>
- <config>#ip igmp snooping vlan <VLAN-LIST> robustness-variable <1-7>
- <config>#ip igmp snooping vlan <VLAN-LIST> router learn

---

	<p>pim-dvmrp</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-group &lt;A.B.C.D&gt; interfaces 10GigabitEthernt &lt;1 to 12&gt;</li> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-group &lt;A.B.C.D&gt; interfaces LAG &lt;1 to 8&gt;</li> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-port 10GigabitEthernt &lt;1 to 12&gt;</li> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-port LAG &lt;1 to 8&gt;</li> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-router-port 10GigabitEthernt &lt;1 to 12&gt;</li> <li>● &lt;config&gt;#ip igmp snooping vlan &lt;VLAN-LIST&gt; static-router-port LAG &lt;1 to 8&gt;</li> </ul>
ip route	<p>Use this command to create a static route.</p> <p>&lt;A.B.C.D&gt; - Specify the source IPv4 address.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID number.</p> <p>mask &lt;A.B.C.D&gt; - Specify the subnet mask.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip route</li> <li>● &lt;config&gt;#ip route &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;#ip route &lt;A.B.C.D&gt; gateway &lt;A.B.C.D&gt;</li> <li>● &lt;config&gt;#ip route &lt;A.B.C.D&gt; mask &lt;A.B.C.D&gt; gateway &lt;A.B.C.D&gt;</li> </ul>
ip source	<p>Use this command to create a static IP source binding entry.</p> <p>&lt;A:B:C:D:E:F&gt; - Enter the MAC address for the binding entry.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID number.</p> <p>&lt;A.B.C.D&gt;&lt;A.B.C.D&gt; - Specify the IPv4 address and netmask.</p> <p>&lt;1-12&gt; - Specify a physical port.</p> <p>&lt;1-8&gt; - Specify a LAG port.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip source binding &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;#ip source binding &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface LAG &lt;1-8&gt;</li> <li>● &lt;config&gt;#ip source binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;#ip source binding vlan &lt;1-4094&gt; &lt;A.B.C.D&gt; &lt;A.B.C.D&gt; interface LAG &lt;1-8&gt;</li> </ul>
ip ssh	<p>Use this command to generate the key files for SSH connection.</p> <p>&lt;all/v1/v2&gt; - Select the key files for SSH connection.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip ssh &lt;all/v1/v2&gt;</li> </ul>
ip telnet	<p>Use this command to enable telnet service.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ip telnet</li> </ul>

### **Example**

```
FX2120# configure
FX2120(config)# ip acl market_1
FX2120config-ip-acl)#
FX2120 (config-ip-acl)# deny 20 192.168.2.55/255.255.255.0 192.168.2.85/255.255.255.0
FX2120(config)#[/pre]
```

### **Telnet Command: ipv6**

Use this command to create an IPv6 access list (ACL).

#### **Syntax Items**

ipv6  
ipv6 acl  
ipv6 address  
ipv6 autoconfig  
ipv6 default-gateway  
ipv6 dhcp  
ipv6 mld

#### **Description**

Syntax Items	Description
ipv6 acl	<p>&lt;NAME&gt; - Set the name of the access list (ACL) based on IPv6. To configure detailed settings, enter the name of ACL to access into next level.</p> <p>&lt;config&gt;#ipv6 acl &lt;NAME&gt;</p> <p>Then, available sub-command includes:</p> <p>&lt;config-ipv6-acl&gt;#deny &lt;config-ipv6-acl&gt;#do &lt;config-ipv6-acl&gt;#end &lt;config-ipv6-acl&gt;#exit &lt;config-ipv6-acl&gt;#no &lt;config-ipv6-acl&gt;#permit &lt;config-ipv6-acl&gt;#sequence &lt;config-ipv6-acl&gt;#show</p> <p>Use the “deny” command to create deny rules for the IPv4 access list.</p> <p>&lt;0-255/icmp/ipv6/tcp /udp &gt; - Specify the IP protocol number or enter the name of the protocol.</p> <p>&lt;0-255/any&gt; - Specify ICMPv6 number.</p> <p>&lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; - Specify the source/destination IPv6 addresses and subnet masks.</p> <p>dscp &lt;0-63&gt; - Set the DSCP filtering by specifying a value for DSCP.</p> <p>precedence &lt;0-7&gt; - Set the cos value and the cos mask for a packet.</p>

---

<p>shutdown – Disable the Ethernet interface.</p> <p>any – Any IP address (as source or destination).</p> <p>&lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; - Set TCP port.</p> <p>match-all &lt;TCP_FLAG&gt; - Set TCP flags. List of TCP flags that should occur. If a flag should be set, it is prefixed by "+". If a flag should be unset, it is prefixed by "-". Available options are +urg, +ack, +psh, +rst, +syn, +fin, -urg, -ack, -psh, -rst, -syn and -fin. To define more than 1 flag - enter additional flags one after another without a space (example +syn-ack).</p> <p>&lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; - Set UDP port.</p>
<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt;</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; dscp &lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; dscp &lt;0-63&gt; shutdown</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; precedence &lt;0-7&gt; shutdown</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; shutdown</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; any dscp &lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; any dscp &lt;0-63&gt; shutdown</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; any precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; any precedence &lt;0-7&gt; shutdown</li> <li>● &lt;config-ipv6-acl&gt;#deny &lt;0-255&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; any shutdown</li> <li>● &lt;config-ipv6-acl&gt;deny icmp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big / parameter-problem / router-advertisement / router-solicitation / time-exceeded&gt; &lt;0-255/any&gt; dscp &lt;0-63&gt;</li> </ul>

---

- 
- <config-ipv6-acl>#deny icmp <X:X:X>/<0-128><X:X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> dscp <0-63> shutdown
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128><X:X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> precedence <0-7>
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128><X:X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> precedence <0-7> shutdown
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128><X:X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> shutdown
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> dscp <0-63>
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> dscp <0-63> shutdown
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> precedence <0-7>
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> precedence <0-7> shutdown
  - <config-ipv6-acl>#deny icmp <X:X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> shutdown
  - <config-ipv6-acl>#deny ipv6 <X:X:X>/<0-128>
-

- 
- |   |
|---|
| <ul style="list-style-type: none"> <li>● &lt;X:X::X:X&gt;/&lt;0-128&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>&lt;X:X::X:X&gt;/&lt;0-128&gt; dscp &lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>&lt;X:X::X:X&gt;/&lt;0-128&gt; dscp &lt;0-63&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>&lt;X:X::X:X&gt;/&lt;0-128&gt; precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>&lt;X:X::X:X&gt;/&lt;0-128&gt; precedence &lt;0-7&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>&lt;X:X::X:X&gt;/&lt;0-128&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; any dscp<br/>&lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; any dscp<br/>&lt;0-63&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; any<br/>precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; any<br/>precedence &lt;0-7&gt;shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; any<br/>shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt; dscp<br/>&lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt; dscp<br/>&lt;0-63&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>precedence &lt;0-7&gt; shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any &lt;X:X::X:X&gt;/&lt;0-128&gt;<br/>shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any dscp &lt;0-63&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any dscp &lt;0-63&gt;<br/>shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any precedence &lt;0-7&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any precedence &lt;0-7&gt;<br/>shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny ipv6 any any shutdown</li> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 /<br/>PORT_RANGE / any / daytime / discard / domain / drip /<br/>echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /<br/>pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time<br/>/ whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 /<br/>PORT_RANGE / any / daytime / discard / domain / drip /<br/>echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /<br/>pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time<br/>/ whois / www&gt;</li> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 /</li> </ul> |
|---|
-

---

<pre> PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; dscp &lt;0-63&gt; </pre>
<ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; dscp &lt;0-63&gt; shutdown</li> </ul>
<ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; match-all &lt;TCP_FLAG&gt; dscp &lt;0-63&gt;</li> </ul>
<ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; match-all &lt;TCP_FLAG&gt; dscp &lt;0-63&gt; shutdown</li> </ul>
<ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; match-all &lt;TCP_FLAG&gt; precedence &lt;0-7&gt;</li> </ul>
<ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#deny tcp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535 / PORT_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www&gt; match-all &lt;TCP_FLAG&gt; precedence &lt;0-7&gt; shutdown</li> </ul>

---

- 
- <config-ipv6-acl>#deny tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> match-all <TCP\_FLAG> shutdown
  - <config-ipv6-acl>#deny tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> precedence <0-7>
  - <config-ipv6-acl>#deny tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> precedence <0-7> shutdown
  - <config-ipv6-acl>#deny tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> shutdown
  - <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / bootpc / bootps / discard / domain /  
echo / nameserver / netbios-ns / ntp / rip / snmp /  
snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
who> <X:X::X:X>/<0-128> <0-65535 / PORT\_RANGE / any /  
bootpc / bootps / discard / domain / echo / nameserver /  
netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
tacacs-ds / talk / tftp / time / who>
  - <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / bootpc / bootps / discard / domain /  
echo / nameserver / netbios-ns / ntp / rip / snmp /  
snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
who> <X:X::X:X>/<0-128> <0-65535 / PORT\_RANGE / any /  
bootpc / bootps / discard / domain / echo / nameserver /  
netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
tacacs-ds / talk / tftp / time / who> dscp <0-63>
  - <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535 /  
PORT\_RANGE / any / bootpc / bootps / discard / domain /  
echo / nameserver / netbios-ns / ntp / rip / snmp /
-

- 
- snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
 who > <X:X::X:X>/<0-128> <0-65535/ PORT\_RANGE / any /  
 bootpc / bootps / discard / domain / echo / nameserver /  
 netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
 tacacs-ds / talk / tftp / time / who > dscp <0-63> shutdown  
 ● <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535/  
 PORT\_RANGE / any / bootpc / bootps / discard / domain /  
 echo / nameserver / netbios-ns / ntp / rip / snmp /  
 snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
 who > <X:X::X:X>/<0-128> <0-65535/ PORT\_RANGE / any /  
 bootpc / bootps / discard / domain / echo / nameserver /  
 netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
 tacacs-ds / talk / tftp / time / who > dscp <0-63> precedence  
 <0-7>  
 ● <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535/  
 PORT\_RANGE / any / bootpc / bootps / discard / domain /  
 echo / nameserver / netbios-ns / ntp / rip / snmp /  
 snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
 who > <X:X::X:X>/<0-128> <0-65535/ PORT\_RANGE / any /  
 bootpc / bootps / discard / domain / echo / nameserver /  
 netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
 tacacs-ds / talk / tftp / time / who > dscp <0-63> precedence  
 <0-7> shutdown  
 ● <config-ipv6-acl>#deny udp <X:X::X:X>/<0-128> <0-65535>  
 any
- 

Use the “do” command to run execution command in current mode.

<SEQUENCE> -

Related Syntax:

- <config-ipv6-acl>#do <SEQUENCE>
- 

Use the “end” command to finish current mode. Any changes in current mode will be saved.

Related Syntax:

- <config-ipv6-acl>#end
- 

Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.

Related Syntax:

- <config-ipv6-acl>#exit
- 

Use the “no sequence” command to delete any entry in management ACL.

<1-2147483647>- Specify an index number of the ACL.

Related Syntax:

- <config-ip-acl>#no sequence <1-2147483647>
- 

Use the “permit” command to create permit rules which bypass the packets meet the rule.

<0-255/icmp/ipv6/tcp /udp > - Specify the IP protocol number or enter the name of the protocol.

<0-255/any> - Specify ICMPv6 number.

<X:X::X:X>/<0-128> <X:X::X:X>/<0-128> - Specify the

---

source/destination IPv6 addresses and subnet masks.  
**dscp <0-63>** - Set the DSCP filtering by specifying a value for DSCP.  
**precedence <0-7>** - Set the cos value and the cos mask for a packet.  
**shutdown** – Disable the Ethernet interface.  
**any** – Any IP address (as source or destination).  
**<0-65535 / PORT\_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www> <X:X:X:X>/<0-128> <0-65535 / PORT\_RANGE / any / daytime / discard / domain / drip / echo / ftp / ftp-data / hostname / klogin / kshell / pop2 / pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time / whois / www>** - Set TCP port.  
**match-all <TCP\_FLAG>** - Set TCP flags. List of TCP flags that should occur. If a flag should be set, it is p prefixed by "+". If a flag should be unset, it is prefixed by "-". Available options are +urg, +ack, +psh, +rst, +syn, +fin, -urg, -ack, -psh, -rst, -syn and -fin. To define more than 1 flag - enter additional flags one after another without a space (example +syn-ack).  
**<0-65535/ PORT\_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who-<X:X:X:X>/<0-128> <0-65535/ PORT\_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who>** - Set UDP port.

**Related Syntax:**

- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> <X:X:X:X>/<0-128>**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> dscp <0-63>**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> dscp <0-63> shutdown**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> precedence <0-7>**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> precedence <0-7> shutdown**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> shutdown**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> any dscp <0-63>**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> any dscp <0-63> shutdown**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> any precedence <0-7>**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> any precedence <0-7> shutdown**
- **<config-ipv6-acl># permit <0-255> <X:X:X:X>/<0-128> any shutdown**

---

- 
- <config-ipv6-acl > permit icmp <X:X::X:X>/<0-128> <X:X::X:X>/<0-128> <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> dscp <0-63>
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> <X:X::X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> dscp <0-63> shutdown
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> <X:X::X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> precedence <0-7>
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> <X:X::X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> precedence <0-7> shutdown
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> <X:X::X:X>/<0-128><0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255/any> shutdown
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> dscp <0-63>
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> dscp <0-63> shutdown
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> precedence <0-7>
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> any <0-255 / any / destination-unreachable / echo-reply / echo-request / nd-na / nd-ns / packet-too-big/ parameter-problem/ router-advertisement / router-solicitation / time-exceeded> <0-255 /any> precedence <0-7> shutdown
  - <config-ipv6-acl ># permit icmp <X:X::X:X>/<0-128> any
-

---

```
<0-255 / any / destination-unreachable / echo-reply /
echo-request / nd-na / nd-ns / packet-too-big/
parameter-problem/ router-advertisement /
router-solicitation / time-exceeded> <0-255 /any>
shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128>
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128> dscp <0-63>
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128> dscp <0-63> shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128> precedence <0-7>
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128> precedence <0-7> shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128>
<X:X::X:X>/<0-128> shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128> any
dscp <0-63>
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128> any
dscp <0-63> shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128> any
precedence <0-7>
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128> any
precedence <0-7> shutdown
● <config-ipv6-acl ># permit ipv6 <X:X::X:X>/<0-128> any
shutdown
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128>
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128> dscp
<0-63>
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128> dscp
<0-63> shutdown
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128>
precedence <0-7>
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128>
precedence <0-7> shutdown
● <config-ipv6-acl ># permit ipv6 any <X:X::X:X>/<0-128>
shutdown
● <config-ipv6-acl ># permit ipv6 any any
● <config-ipv6-acl ># permit ipv6 any any dscp <0-63>
● <config-ipv6-acl ># permit ipv6 any any dscp <0-63>
shutdown
● <config-ipv6-acl ># permit ipv6 any any precedence <0-7>
● <config-ipv6-acl ># permit ipv6 any any precedence <0-7>
shutdown
● <config-ipv6-acl ># permit ipv6 any any shutdown
● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535
/ PORT_RANGE / any / daytime / discard / domain / drip /
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time
```

---

---

```

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www>  

● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535  

/ PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> dscp <0-63>  

● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535  

/ PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> dscp <0-63> shutdown  

● <config-ipv6-acl ># deny tcp <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> match-all <TCP_FLAG> dscp <0-63>  

● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535  

/ PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> match-all <TCP_FLAG> dscp <0-63>  

shutdown  

● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535  

/ PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  

PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  

/ whois / www> match-all <TCP_FLAG> precedence <0-7>  

● <config-ipv6-acl ># permit tcp <X:X::X:X>/<0-128> <0-65535  

/ PORT_RANGE / any / daytime / discard / domain / drip /  

echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  

pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time
```

---

---

```
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> match-all <TCP_FLAG> precedence <0-7>  
shutdown  
● <config-ipv6-acl># permit tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> match-all <TCP_FLAG> shutdown  
● <config-ipv6-acl># permit tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> precedence <0-7>  
● <config-ipv6-acl># permit tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> precedence <0-7> shutdown  
● <config-ipv6-acl># permit tcp <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> <X:X::X:X>/<0-128> <0-65535 /  
PORT_RANGE / any / daytime / discard / domain / drip /  
echo / ftp / ftp-data / hostname / klogin / kshell / pop2 /  
pop3 / smtp / sunrpc / syslog / tacacs-ds / talk / telnet / time  
/ whois / www> shutdown  
● <config-ipv6-acl># permit udp <X:X::X:X>/<0-128>  
<0-65535 / PORT_RANGE / any / bootpc / bootps / discard /  
domain / echo / nameserver / netbios-ns / ntp / rip / snmp /  
snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
who> <X:X::X:X>/<0-128> <0-65535 / PORT_RANGE / any /  
bootpc / bootps / discard / domain / echo / nameserver /  
netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog /  
tacacs-ds / talk / tftp / time / who>  
● <config-ipv6-acl># permit udp <X:X::X:X>/<0-128>  
<0-65535 / PORT_RANGE / any / bootpc / bootps / discard /  
domain / echo / nameserver / netbios-ns / ntp / rip / snmp /  
snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time /  
who> <X:X::X:X>/<0-128> <0-65535 / PORT_RANGE / any /
```

---

	<pre> bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; dscp &lt;0-63&gt; ● &lt;config-ipv6-acl &gt;# permit udp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; dscp &lt;0-63&gt; shutdown ● &lt;config-ipv6-acl &gt;# permit udp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; dscp &lt;0-63&gt; precedence &lt;0-7&gt; ● &lt;config-ipv6-acl &gt;# permit udp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535/ PORT_RANGE / any / bootpc / bootps / discard / domain / echo / nameserver / netbios-ns / ntp / rip / snmp / snmptrap / sunrpc / syslog / tacacs-ds / talk / tftp / time / who&gt; dscp &lt;0-63&gt; precedence &lt;0-7&gt; shutdown ● &lt;config-ipv6-acl &gt;# permit udp &lt;X:X::X:X&gt;/&lt;0-128&gt; &lt;0-65535&gt; any </pre>
	<p>Use the “sequence” command to deny or permit the ACL.</p> <p>&lt;1-2147483647&gt; - Enter the sequence of ACL entry. The sequence represents the priority of the ACE in the ACL.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-ipv6-acl &gt;#sequence &lt;1-2147483647&gt; deny</li> <li>● &lt;config-ipv6-acl &gt;#sequence &lt;1-2147483647&gt; permit</li> </ul>
	<p>Use the “show acl” command to list current status of the selected ACL.</p>
Ipv6 address	<p>Use this command to modify the administration IPv6 address.</p> <p>address &lt;X:X::X:X&gt; - Specify the IPv6 addresses. This IP is required when the administer wants to access into VigorSwitch through Telnet, SSH, HTTP, HTTPS, SNMP and so on.</p> <p>prefix &lt;0-128&gt; - Specify the prefix length of the IPv6 address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ipv6 address &lt;X:X::X:X&gt; prefix &lt;0-128&gt;</li> </ul>
ipv6 autoconfig	Use this command to enable IPv6 auto configuration feature.
Ipv6 default-gateway	Use this command to modify default gateway address.
	default-address <X:X::X:X> - Specify the IPv6 addresses of the gateway.

	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ipv6 default-gateway &lt;X:X::X:X&gt;</li> </ul>
ipv6 dhcp	<p>Use this command to enable DHCPv6 client to get IP address from remote DHCPv6 server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#ipv6 dhcp</li> </ul>
ipv6 mld	<p>Use this command to set MLD configuration.</p> <p>profile &lt;1-128&gt; - Use it to enter profile configuration.</p> <p>snooping - Use it to enable MLD snooping function.</p> <p>forward-method &lt;dip/mac&gt; - Specify a method to forward the packets.</p> <p>report-suppression – Use it to enable MLD snooping report-suppression function.</p> <p>unknown-multicast action &lt;drop/flood/router-port&gt; - Use it to set unknown multicast action.</p> <p>version &lt;1/2&gt; – Use it to change MLD support version.</p> <p>vlan &lt;1-4094&gt; - Use it to enable MLD on VLAN. Specify a VLAN ID for configuration.</p> <p>forbidden-port 10GigabitEthernet &lt;1-12&gt; - Specify a physical port.</p> <p>forbidden-port LAG &lt;1-8&gt; - Specify a LAG port.</p> <p>forbidden-router-port 10GigabitEthernet &lt;1-12&gt; - Use it to add static forbidden router port. Specify a physical port.</p> <p>forbidden-router-port LAG &lt;1-8&gt; - Use it to add static forbidden router port. Specify a LAG port.</p> <p>immediate-leave – Use it to enable fastleave function.</p> <p>last-member-query-count &lt;1-7&gt; - Use it to change how many query packets will send. Specify the last member query count. Default is 2.</p> <p>last-member-query-interval &lt;1-25&gt; - Use it to set interval between each query packet. Specify the last member query interval. Default is 1.</p> <p>query-interval &lt;30-18000&gt; - Use it to set interval between each query. Specify the query interval. Default is 125.</p> <p>response-time &lt;5-20&gt; - Use it to set response time. Specify a time value. Default is 10.</p> <p>robustness-variable &lt;1-7&gt; - Specify a robustness-variable value. Default is 2.</p> <p>router learn pim-dvmrp – Use it to enable learning router port by rousing protocol packets (DVMRP).</p> <p>static-group &lt;X:X::X:X&gt; interfaces 10GigabitEthernet &lt;1-12&gt; - Use it to add a static group. Specify a physical port.</p> <p>static-group &lt;X:X::X:X&gt; interfaces LAG &lt;1-8&gt; - Use it to add a static group. Specify a LAG port.</p> <p>static-port 10gigabitethernt &lt;1-12&gt;- Use it to add static forwarding port. Specify a physical port.</p> <p>static-port LAG &lt;1-8&gt;- Use it to add static forwarding port. Specify a LAG port.</p> <p>static-router-port 10GigabitEthernet &lt;1-12&gt;- Use it to add</p>

---

static router port. All query packets will forward to the specified port. Specify a physical port.

static-router-port LAG <1-8> - Use it to add static router port. All query packets will forward to the specified port. Specify a LAG port.

Related Syntax:

- <config>#ipv6 mld profile <1-128>  
    <config-mld-profile># do  
    <config-mld-profile># end  
    <config-mld-profile># exit  
    <config-mld-profile># profile range ipv6 <X:X::X:X>  
        action <deny/permit>  
    <config-mld-profile># profile range ipv6 <X:X::X:X>  
        <X:X::X:X>  
    <config-mld-profile># profile range ipv6 <X:X::X:X>  
        <X:X::X:X> action <deny/permit>  
    <config-mld-profile># show
  - <config>#ipv6 mld snooping
  - <config>#ipv6 mld snooping forward-method <dip/mac>
  - <config>#ipv6 mld snooping report-suppression
  - <config>#ipv6 mld snooping unknown-multicast action  
    <drop/flood/router-port>
  - <config>#ipv6 mld snooping version <1/2>
  - <config>#ipv6 mld snooping vlan <1-4094>
  - <config>#ipv6 mld snooping vlan <1-4094> forbidden-port  
    10GigabitEthernet <1-12>
  - <config>#ipv6 mld snooping vlan <1-4094> forbidden-port  
    LAG <1-8>
  - <config>#ipv6 mld snooping vlan <1-4094>  
    forbidden-router-port 10GigabitEthernet <1-12>
  - <config>#ipv6 mld snooping vlan <1-4094>  
    forbidden-router-port LAG <1-8>
  - <config>#ipv6 mld snooping vlan <1-4094>  
    immediate-leave
  - <config>#ipv6 mld snooping vlan <1-4094>  
    last-member-query-count <1-7>
  - <config>#ipv6 mld snooping vlan <1-4094>  
    last-member-query-interval <1-25>
  - <config>#ipv6 mld snooping vlan <1-4094> query-interval  
    <30-18000>
  - <config>#ipv6 mld snooping vlan <1-4094> response-time  
    <5-20>
  - <config>#ipv6 mld snooping vlan <1-4094>  
    robustness-variable <1-7>
  - <config>#ipv6 mld snooping vlan <1-4094> router learn  
    pim-dvmrp
  - <config>#ipv6 mld snooping vlan <1-4094> static-group  
    <X:X::X:X> interfaces 10GigabitEthernet <1-12>
  - <config>#ipv6 mld snooping vlan <1-4094> static-group
-

- 
- |  |   |
|--|---|
|  | <ul style="list-style-type: none"> <li>&lt;X:X::X:X&gt; interfaces LAG &lt;1-8&gt;</li> <li>● &lt;config&gt;#ipv6 mld snooping vlan &lt;1-4094&gt; static-port 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;#ipv6 mld snooping vlan &lt;1-4094&gt; static-port LAG &lt;1-8&gt;</li> <li>● &lt;config&gt;#ipv6 mld snooping vlan &lt;1-4094&gt; static-router-port 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;#ipv6 mld snooping vlan &lt;1-4094&gt; static-router-port LAG &lt;1-8&gt;</li> </ul> |
|--|---|
- 

### **Example**

```
FX2120# configure
FX2120(config)#
FX2120(config)# ipv6 mld snooping vlan 33
FX2120(config)# ipv6 acl CA_v6
FX2120(config-ipv6-acl)# deny 3 00:50::32:ff/24 00:50::78:aa/32
```

## **Telnet Command: jumbo-frame**

Use this command to modify the maximum frame size of jumbo frame.

### **Syntax Items**

jumbo-frame

### **Description**

Syntax Items	Description
jumbo-frame	Enable the function of jumbo frame. Set the maximum frame size. <1518-12288> - The default value is 1522. Related Syntax: <ul style="list-style-type: none"> <li>● &lt;config&gt;# jumbo-frame</li> <li>● &lt;config&gt;# jumbo-frame &lt;1518-12288&gt;</li> </ul>

### **Example**

```
FX2120# configure
FX2120(config)#
FX2120(config)# jumbo-frame 8000
FX2120(config)#

```

## **Telnet Command: lacp**

Use this command to set the system priority of the switch.

### **Syntax Items**

lacp

lacp system-priority

### Description

Syntax Items	Description
lacp	Enable the function.
lacp system-priority	<p>It is used for selecting a master switch between two devices. Lower system priority has higher priority. The device with higher priority value can determine which port is able to join LAG.</p> <p>&lt;1-65535&gt; - Specify the system priority value.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● &lt;config&gt;# lacp</li><li>● &lt;config&gt;# lacp system-priority &lt;1-65535&gt;</li></ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# lacp system-priority 1000
FX2120(config)#[/pre>
```

## Telnet Command: lag

LAG port can transmit packets to all ports for balancing the traffic loading. Use this command to change the load balance algorithm to src-dst-mac or src-dst-mac-ip as the Load Balance policy.

### Syntax Items

lag load-balance

### Description

Syntax Items	Description
lag load-balance	<p>LAG load balancing is based on source and destination MAC address and/or IP address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● &lt;config&gt;# lag load-balance src-dst-mac</li><li>● &lt;config&gt;# lag load-balance src-dst-mac-ip</li></ul>

### Example

```
FX2120# configure
FX2120(config)# lag load-balance src-dst-mac
FX2120(config)#[/pre>
```

## Telnet Command: line

Use this command to select line configuration mode.

### Syntax Items

line console

line ssh

line telent

### Description

Syntax Items	Description
console/ssh/telnet	<p>Select console configuration mode.</p> <p>To configure detailed settings, access into next level.</p> <pre>&lt;config&gt;#line &lt;console/ssh/telnet&gt;</pre> <p>console - Select the console line to configure. Then, available sub-commands are:</p> <pre>&lt;config-line&gt;#do &lt;config-line&gt;#exec-timeout &lt;config-line&gt;#exit &lt;config-line&gt;#lhistory &lt;config-line&gt;#no &lt;config-line&gt;#password-thresh &lt;config-line&gt;#silent-time</pre>
	<p>Select SSH line to configure. Then, available sub-commands are:</p> <pre>&lt;config-line&gt;#do &lt;config-line&gt;#end &lt;config-line&gt;#exec-timeout &lt;config-line&gt;#exit &lt;config-line&gt;#password-thresh &lt;config-line&gt;#silent-time</pre>
	<p>telnet - Select telnet line to configure. Then, available sub-commands are:</p> <pre>&lt;config-line&gt;#do &lt;config-line&gt;#end &lt;config-line&gt;#exec-timeout &lt;config-line&gt;#exit &lt;config-line&gt;#password-thresh &lt;config-line&gt;#silent-time</pre>
#do	<p>Use the “do” command to run execution command in current mode.</p> <p>&lt;SEQUENCE&gt; -</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#do &lt;SEQUENCE&gt;</li> </ul>
#exec-timeout	<p>Use the “exec-timeout” to set the session timeout configuration.</p> <p>&lt;0-65535&gt; - Enter the number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#exec-timeout &lt;0-65535&gt;</li> </ul>
#exit	<p>Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config-line&gt;#exit</li> </ul>
#history	<p>Use the “history” command to specify the index number of history.</p> <p>&lt;1-256&gt; - Enter a number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#history &lt;1-256&gt;</li> </ul>
#no	<p>Use the “no” command to negate line command.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#no enable</li> <li>● &lt;config-line&gt;#no history</li> <li>● &lt;config-line&gt;#no login</li> </ul>
#password-thresh	<p>Use the “password-thresh” command to set the login password intrusion threshold.</p> <p>&lt;0-120&gt; - Set a number of allowed password attempts. 0 means no threshold.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#password-thresh &lt;0-120&gt;</li> </ul>
#silent-time	<p>Use the “silent-time” command to set fail silent time.</p> <p>&lt;0-65535&gt; - Set the time to disable the console response.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-line&gt;#silent-time &lt;0-65535&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# line telnet
FX2120(config-line)#
```

## Telnet Command: lldp

Use this command to set LLDP function.

### Syntax Items

lldp  
 lldp holdtime-multiplier  
 lldp lldpdu  
 lldp med  
 lldp reinit-delay  
 lldp tx-delay  
 lldp tx-interval

### Description

Syntax Items	Description
lldp	Enable the function of LLDP.
lldp holdtime-multiplier	Set the multiplier used for calculating the LLDP discovery

	<p>packet hold time.  <i>&lt;2-10&gt;</i> - Set the LLDP hold time multiplier.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp holdtime-multiplier &lt;2-10&gt;</li> </ul>
lldp lldpdu	<p>bridging - The LLDP packets will be bridging when LLDP is disabled.</p> <p>filtering - The LLDP packets will be filtered and deleted when LLDP is disabled.</p> <p>flooding - The LLDP packets will be flooded and forwarded to all interfaces when LLDP is disabled.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp lldpdu bridging</li> <li>● &lt;config&gt;# lldp lldpdu filtering</li> <li>● &lt;config&gt;# lldp lldpdu flooding</li> </ul>
lldp med	<p>med fast-start-repeat-count - Set the LLDP PDU fast start TX repeat count.</p> <p>med network-policy - Set the LLDP MED network policy table.</p> <p>med network-poicy voice auto - Enable the network policy voice auto mode.</p> <p>&lt;1-10&gt; - Set the fast start repeat count.</p> <p>&lt;1-32&gt; - Specify the index number of the policy.</p> <p>app &lt;guest-voice/ guest-voice-signaling / softphone-voice / streaming-video / video-conferencing / video-signaling / voice / voice-signaling&gt; - Configure the application type for the policy.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID.</p> <p>vlan-type &lt;tag/untag&gt; - Set the VLAN tag status.</p> <p>priority &lt;0-7&gt; - Specify the L2 priority.</p> <p>dscp &lt;0-63&gt; - Specify the DSCP value.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp med fast-start-repeat-count &lt;1-10&gt;</li> <li>● &lt;config&gt;# lldp med network-policy &lt;1-32&gt; app&lt; guest-voice/ guest-voice-signaling / softphone-voice / streaming-video / video-conferencing / video-signaling / voice / voice-signaling&gt; vlan &lt;1-4094&gt; vlan-type &lt;tag/untag&gt; priority &lt;0-7&gt; dscp &lt;0-63&gt;</li> <li>● &lt;config&gt;# lldp med network-poicy voice auto</li> </ul>
lldp reinit-delay	<p>Set the LLDP re-initial delay to avoid LLDP generating too many PDU.</p> <p>&lt;1-10&gt; - Specify a number for LLDP server to initialize.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp reinit-delay &lt;1-10&gt;</li> </ul>
lldp tx-delay	<p>Set the delay time between the successful LLDP frame transmissions.</p> <p>&lt;1-8191&gt; - Enter the number of delay time.</p> <p>Note that both tx-interval and tx-delay will affect the LLDP PDU TX time.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp tx-delay &lt;1-8191&gt;</li> </ul>
lldp tx-interval	<p>Set the LLDP TX interval.</p> <p>&lt;5-32767&gt; - Enter the interval in unit of second.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# lldp tx-interval &lt;5-32767&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# lldp holdtime-multiplier 5
FX2120(config)#

```

## Telnet Command: logging

Use this command to set logging service on VigorSwitch.

### Syntax Items

logging  
 logging buffered  
 logging console  
 logging file  
 logging host

### Description

Syntax Items	Description
logging	Enable the logging service.
logging buffered	Store the log message in the RAM.
logging console	<p>Specify the logging level.</p> <p>&lt;0-7&gt; - Specify the logging level by entering a number (from EMEGR-DEBUG).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logging console</li> <li>● &lt;config&gt;# logging console severity &lt;0-7&gt;</li> </ul>
logging file	<p>Store the log message in the flash.</p> <p>&lt;0-7&gt; - Specify the logging level by entering a number (from EMEGR-DEBUG).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logging file severity &lt;0-7&gt;</li> </ul>
logging host	<p>Define the logging server.</p> <p>host &lt;A.B.C.D&gt; - Enter an IP address of the remote (or local) server.</p> <p>facility &lt;local0-local7&gt; - Specify the facility parameter for the syslog message.</p> <p>port &lt;1-65535&gt; - Enter a number for the remote server.    Default is 514.</p>

---

severity <0-7> - Specify the logging level by entering a number (from EMEGR-DEBUG).

<HOSTNAME> - Define a name as the host.

Related Syntax:

- <config>#logging host <A.B.C.D> facility <local0-local7>
  - <config>#logging host <A.B.C.D> port <1-65535>
  - <config>#logging host <A.B.C.D> port <1-65535> facility <local0-local7>
  - <config>#logging host <A.B.C.D> port <1-65535> severity <0-7> facility <local0-local7>
  - <config>#logging host <A.B.C.D> severity <0-7> facility <local0-local7>
  - <config>#logging host <HOSTNAME> facility <local0-local7>
  - <config>#logging host <HOSTNAME> port <1-65535>
  - <config>#logging host <HOSTNAME> port <1-65535> facility <local0-local7>
  - <config>#logging host <HOSTNAME> port <1-65535> severity <0-7> facility <local0-local7>
  - <config>#logging host <HOSTNAME> severity <0-7> facility <local0-local7>
  - <config>#logging host <X:X::X:X> facility <local0-local7>
  - <config>#logging host <X:X::X:X> port <1-65535>
  - <config>#logging host <X:X::X:X> port <1-65535> facility <local0-local7>
  - <config>#logging host <X:X::X:X> port <1-65535> severity <0-7> facility <local0-local7>
- 

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# logging host aa:00::1a:FF facility local1
```

## Telnet Command: logmail

Use this command to configure log mail.

### Syntax Items

logmail active  
logmail auth  
logmail category  
logmail encpassword  
logmail encry  
logmail password  
logmail port  
logmail receiver  
logmail sender  
logmail server

logmail username

#### Description

Syntax Items	Description
logmail active	<p>&lt;disable/enable&gt; - Enable or disable the function of log mail.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail active &lt;disable/enable&gt;</li> </ul>
logmail auth	<p>&lt;disable/enable&gt; - Enable or disable the function of SMTP server authentication.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail auth &lt;disable/enable&gt;</li> </ul>
logmail category	<p>&lt;AAA, ACL, AUTHMGR,CABLE_DIAG, DAI, DHCP_SNOOPING, GVRP, IGMP_SNOOPING, IPSG, L2, LLDP, Mac-based, Mirror, MLD_SNOOPING, Platform, PM, POE, Port, PORT_SECURITY, QoS, Rate, SNMP, STP, Security, System, Surveillance, Trunk, UDLD, VLAN, CLEAR&gt; - Specify one type for the logmail.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail category &lt;AAA, ACL, AUTHMGR,CABLE_DIAG, DAI, DHCP_SNOOPING, GVRP, IGMP_SNOOPING, IPSG, L2, LLDP, Mac-based, Mirror, MLD_SNOOPING, Platform, PM, POE, Port, PORT_SECURITY, QoS, Rate, SNMP, STP, Security, System, Surveillance, Trunk, UDLD, VLAN, CLEAR&gt;</li> </ul>
logmail encpassword	<p>Set SMTP encrypt authentication password.</p> <p>&lt;PASSWORD&gt; - Enter the password for SMTP server encrypt authentication.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail encpassword &lt;PASSWORD&gt;</li> </ul>
logmail encry	<p>&lt;disable/ssltls/starttls&gt; - Specify the encryption type for mail alert.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail encry &lt;disable/ ssltls/starttls&gt;</li> </ul>
logmail password	<p>&lt;PASSWORD&gt; - Enter the password for SMTP server authentication.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail password &lt;PASSWORD&gt;</li> </ul>
logmail port	<p>&lt;0-65535&gt;- Enter a port number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail port &lt;0-65535&gt;</li> </ul>
logmail receiver	<p>Specify an address for receiving the alert mail.</p> <p>&lt;ADDRESS&gt; - Enter the email address of the receiver.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail receiver &lt;ADDRESS&gt;</li> </ul>
logmail sender	<p>Specify an address which sends out the alert mail.</p> <p>&lt;ADDRESS&gt; - Enter the email address of the sender.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail</li> </ul>
logmail server	<p>Set the IP address of the server.            &lt;ADDRESS&gt; - Enter the IP address of the SMTP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail server &lt;ADDRESS&gt;</li> </ul>
logmail username	<p>&lt;NAME&gt; - Enter the username authenticated by STMP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# logmail username &lt;NAME&gt;</li> </ul>

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# logmail receiver carrie_ni@draytek.com
FX2120(config)#+
```

### Telnet Command: **loop-protection**

Use this command to set loop-protection.

#### Syntax Items

loop-protection action  
 loop-protection periodicTime  
 loop-protection state

#### Description

Syntax Items	Description
loop-protection action	<p>Specify an action to be taken when the loop is happened.            &lt;all/log/shutdown&gt; - Specify one action to be executed.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# loop-protection action &lt;all/log/shutdown&gt;</li> </ul>
loop-protection periodicTime	<p>Send the loop protection packets to the network hosts.            &lt;1-3&gt; - Enter the number of the packet.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# Related Syntax:</li> <li>● &lt;config&gt;# loop-protection periodicTime &lt;1-3&gt;</li> </ul>
loop-protection state	<p>&lt;enable/disable&gt; - Enable or disable the function of loop protection.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# loop-protection state &lt;enable/disable&gt;</li> </ul>

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# loop-protection state enable
FX2120(config)#+
```

## Telnet Command: mac

Use this command to create a MAC access list.

### Syntax Items

mac acl

mac address-table

### Description

Syntax Items	Description
mac acl	<p>&lt;NAME&gt; - Set the name of the access list (ACL). To configure detailed settings, enter the name of ACL to access into next level.</p> <p>&lt;config&gt;#mac acl &lt;NAME&gt;</p> <p>Then, available sub-commands are:</p> <p>&lt;config-mac-acl&gt;#deny &lt;config-mac-acl&gt;#do &lt;config-mac-acl&gt;#end &lt;config-mac-acl&gt;#exit &lt;config-mac-acl&gt;#permit &lt;config-mac-acl&gt;#sequence</p> <p>Use the "deny" command to add deny rules for the MAC access list:</p> <p>&lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; - Specify the source and destination MAC addresses and subnet masks.</p> <p>cos &lt;0-7&gt;&lt;0-7&gt; - Set the cos value and the cos mask for a packet.</p> <p>&lt;0x0600-0xFFFF&gt; - Set the EtherType of the packet.</p> <p>Shutdown – Disable the Ethernet interface.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID of the packet.</p> <p>any – Any MAC address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● &lt;config-mac-acl&gt;#deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt;</li><li>● &lt;config-mac-acl&gt;#deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li><li>● &lt;config-mac-acl&gt;#deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt; shutdown</li><li>● &lt;config-mac-acl&gt;#deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt; shutdown</li><li>● &lt;config-mac-acl&gt;#deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; ethtype &lt;0x0600-0xFFFF&gt;</li><li>● &lt;config-mac-acl&gt;# deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt; ethtype &lt;0x0600-0xFFFF&gt; shutdown</li><li>● &lt;config-mac-acl&gt;# deny &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;&lt;A:B:C:D:E:F&gt;</li></ul>

- 
- ><A:B:C:D:E:F>/<A:B:C:D:E:F> shutdown
  - <config-mac-acl>#deny any <A:B:C:D:E:F>/<A:B:C:D:E:F><A:B:C:D:E:F>/<A:B:C:D:E:F> cos <0-7><0-7>
  - <config-mac-acl>#deny any <A:B:C:D:E:F>/<A:B:C:D:E:F><A:B:C:D:E:F>/<A:B:C:D:E:F> cos <0-7><0-7> ethtype <0x0600-0xFFFF>
  - <config-mac-acl>#deny any <A:B:C:D:E:F>/<A:B:C:D:E:F><A:B:C:D:E:F>/<A:B:C:D:E:F> cos <0-7><0-7> ethtype <0x0600-0xFFFF> shutdown
  - <config-mac-acl>#deny any <A:B:C:D:E:F>/<A:B:C:D:E:F><A:B:C:D:E:F>/<A:B:C:D:E:F> cos <0-7><0-7> shutdown
  - <config-mac-acl>#deny any any cos <0-7><0-7>
  - <config-mac-acl>#deny any any cos <0-7><0-7> ethtype <0x0600-0xFFFF>
  - <config-mac-acl>#deny any any cos <0-7><0-7> ethtype <0x0600-0xFFFF> shutdown
  - <config-mac-acl>#deny any any cos <0-7><0-7> shutdown
  - <config-mac-acl>#deny any any ethtype <0x0600-0xFFFF>
  - <config-mac-acl>#deny any any ethtype <0x0600-0xFFFF> shutdown
  - <config-mac-acl>#deny any any shutdown
  - <config-mac-acl>#deny any any vlan <1-4094>
  - <config-mac-acl>#deny any any vlan <1-4094> cos <0-7><0-7>
  - <config-mac-acl>#deny any any vlan <1-4094> cos <0-7><0-7> ethtype <0x0600-0xFFFF>
  - <config-mac-acl>#deny any any vlan <1-4094> cos <0-7><0-7> ethtype <0x0600-0xFFFF> shutdown
  - <config-mac-acl>#deny any any vlan <1-4094> ethtype <0x0600-0xFFFF>
  - <config-mac-acl>#deny any any vlan <1-4094> ethtype <0x0600-0xFFFF> shutdown
  - <config-mac-acl>#deny any any vlan <1-4094> shutdown
- 

Use the “do” command to run execution command in current mode.

<SEQUENCE> -

Related Syntax:

- <config-mac-acl>#do <SEQUENCE>
- 

Use the “end” command to finish current mode. Any changes in current mode will be saved.

Related Syntax:

- <config-mac-acl>#end
- 

Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.

Related Syntax:

- <config-mac-acl>#exit
- 

Use the “no sequence” command to delete any entry in management ACL.

---

---

<p>&lt;1-65535&gt;- Specify an index number of the ACL.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-mac-acl&gt;#no sequence &lt;1-65535&gt;</li> </ul>	<p>Use the “permit” command to add permit rules which bypass the packets meet the rule.</p> <p>&lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;- Specify the source and destination MAC addresses and subnet masks.</p> <p>cos &lt;0-7&gt;&lt;0-7&gt; - Set the cos value and the cos mask for a packet.</p> <p>&lt;0x0600-0xFFFF&gt; - Set the EtherType of the packet.</p> <p>Shutdown – Disable the Ethernet interface.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID of the packet.</p> <p>any – Any MAC address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt;cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt;cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt;ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#permit any &lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> </ul>
	<p>Use the “sequence” command to deny or permit the ACL.</p> <p>&lt;1-2147483647&gt; - Enter the sequence index ACE. The sequence represents the priority of the ACE in the ACL.</p> <p>&lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt;- Specify the source and destination MAC addresses and subnet masks.</p> <p>cos &lt;0-7&gt;&lt;0-7&gt; - Set the cos value and the cos mask for a packet.</p>

---





	<ul style="list-style-type: none"> <li>&lt;A:B:C:D:E:F&gt;/&lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any vlan &lt;1-4094&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any vlan &lt;1-4094&gt; cos &lt;0-7&gt;&lt;0-7&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any vlan &lt;1-4094&gt; cos &lt;0-7&gt;&lt;0-7&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> <li>● &lt;config-mac-acl&gt;#sequence &lt;1-2147483647&gt;permit any any vlan &lt;1-4094&gt; ethtype &lt;0x0600-0xFFFF&gt;</li> </ul>
mac address-table	<p>Set the aging time for an entry remains in the MAC address table.</p> <p>address-table static - Add a static address to the MAC address table to drop the packets with the specified source or destination MAC address.</p> <p>&lt;10-630&gt; - Unit is second. Default is 300.</p> <p>static &lt;A:B:C:D:E:F&gt; - Enter the MAC address.</p> <p>vlan &lt;1-4094&gt; - Specify the VLAN ID of the packet.</p> <p>10gigabitEthernet &lt;1-12&gt; - Specify a physical port.</p> <p>LAG &lt;1-8&gt; - Specify a LAG port.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mac address-table aging-time &lt;10-630&gt;</li> <li>● &lt;config&gt;# mac address-table static &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; drop</li> <li>● &lt;config&gt;# mac address-table static &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; interfaces 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;# mac address-table static &lt;A:B:C:D:E:F&gt; vlan &lt;1-4094&gt; interfaces LAG &lt;1-8&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)# mac acl test_CA
FX2120 (config-mac-acl)# deny 00:50:00:7f:12:11/00:00:00:00:10:20
00:50:00:aa:bb:cc/00:00:00:00:12:00 cos 3 2 ethtype 0x0600
FX2120 (config-mac-acl)# deny any 00:50:00:7f:12:11/00:00:00:00:10:20 cos 5 6 ethtype 0x0600
FX2120 (config-mac-acl)# deny any
FX2120(config)# mac address-table static 00:50:07:12:ff:aa vlan 300 drop
```

### Telnet Command: mailalert

Use this command to configure mail alert for various conditions.

### Syntax Items

mailalert active  
mailalert auth  
mailalert devicecheck  
mailalert encpassword  
mailalert encry  
mailalert hwmon  
mailalert interval  
mailalert ipconfilict  
mailalert password  
mailalert poestatus  
mailalert port  
mailalert portlink  
mailalert portspeed  
mailalert receiver  
mailalert sender  
mailalert server  
mailalert sysrestart  
mailalert throughputcheck  
mailalert username

### Description

Syntax Items	Description
mailalert active	<disable/enable> - Enable or disable the function of mail alert. Related Syntax: ● <config># mailalert active <disable/enable>
mailalert auth	<disable/enable> - Enable or disable the function of SMTP server authentication. Related Syntax: ● <config># mailalert auth <disable/enable>
mailalert devicecheck	<disable/enable> - Enable or disable the function of sending a mail alert when encountering a device check error. Related Syntax: ● <config># mailalert devicecheck <disable/enable>
mailalert encpassword	<PASSWORD> - Set a encryption authentication password for the mail alert. Related Syntax: ● <config># mailalert encpassword <PASSWORD>
mailalert encry	Specify the encryption type for mail alert. <disable/ssltls/starttls> - Related Syntax: ● <config># mailalert encry <disable/ ssltls/starttls>
mailalert hwmon	Send a mail alert when hardware monitor error. <disable/enable> - Enable or disable the function.

	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert hwmon &lt;disable/enable&gt;</li> </ul>
mailalert interval	<p>Set the transmission interval for the mail alert.  &lt;1-60&gt; - Unit is second.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert interval &lt;1-60&gt;</li> </ul>
mailalert ipconflict	<p>&lt;disable/enable&gt; - Enable or disable the function of sending a mail alert if encountering the IP conflict.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert ipconflict &lt;disable/enable&gt;</li> </ul>
mailalert password	<p>&lt;PASSWORD&gt; - Enter the password for SMTP server authentication.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert password &lt;PASSWORD&gt;</li> </ul>
mailalert poestatus	<p>&lt;disable/enable&gt; - Enable or disable the function of sending a mail alert when PoE status is changed.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert poestatus &lt;disable/enable&gt;</li> </ul>
mailalert port	<p>&lt;0-65535&gt;- Enter a port number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert port &lt;0-65535&gt;</li> </ul>
mailalert portlink	<p>&lt;disable/enable&gt; - Enable or disable the function of sending an alert when the port link status changes.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert portlink &lt;disable/enable&gt;</li> </ul>
mailalert portspeed	<p>&lt;disable/enable&gt; - Enable or disable the function of sending an alert when the port link speed changes.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert portspeed &lt;disable/enable&gt;</li> </ul>
mailalert receiver	<p>Specify an address for receiving the alert mail.</p> <p>&lt;ADDRESS&gt; - Enter the email address of the receiver.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert receiver &lt;ADDRESS&gt;</li> </ul>
mailalert sender	<p>Specify an address which sends out the alert mail.</p> <p>&lt;ADDRESS&gt; - Enter the email address of the sender.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert sender &lt;ADDRESS&gt;</li> </ul>
mailalert server	<p>Set the IP address of the server.</p> <p>&lt;ADDRESS&gt; - Enter the IP address of the SMTP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert server &lt;ADDRESS&gt;</li> </ul>
mailalert sysrestart	<p>&lt;disable/enable&gt; -Enable or disable the function of sending a mail alert when the system restarts.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert sysrestart &lt;disable/enable&gt;</li> </ul>
mailalert throughputcheck	<p>&lt;disable/enable&gt; - Enable or disable the function of sending a mail alert when reaching the throughput threshold.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert throughputcheck &lt;disable/enable&gt;</li> </ul>
mailalert username	<p>&lt;NAEM&gt; - Enter the username authenticated by SMTP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mailalert username &lt;NAME&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# mailalert receiver carrie_ni@draytek.com
```

## Telnet Command: management

Use this command to create a management access list and set configuration mode.

### Syntax Items

management access-list

management access-class

### Description

Syntax Items	Description
management access-list	<p>&lt;NAME&gt; - Enter the name of the access list.</p> <p>To configure detailed settings, enter the name of ACL to access into next level.</p> <p>&lt;config&gt;#management access-list &lt;NAME&gt;</p> <p>Then, available sub-commands are:</p> <ul style="list-style-type: none"> <li>&lt;config-macl&gt;#deny</li> <li>&lt;config-macl&gt;#do</li> <li>&lt;config-macl&gt;#end</li> <li>&lt;config-macl&gt;#exit</li> <li>&lt;config-macl&gt;#permit</li> <li>&lt;config-macl&gt;#sequence</li> </ul> <p>Use the “deny” command to add deny rules for the management access list:</p> <p>10GigabitEthernet &lt;1-12&gt; - Specify a physical port.</p> <p>LAG &lt;1-8&gt; - Specify a LAG port.</p> <p>service &lt;all/http/https/snmp/ssh/telnet&gt; - Specify the service type.</p> <p>ip &lt;A.B.C.D&gt;/&lt;A.B.C.D&gt; - Specify the source IP address with mask for the packets.</p> <p>ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; - Specify the source IPv6 address and prefix length of the packet.</p> <p>Related Syntax:</p>

- <config-macl>#deny interfaces 10GigabitEthernet <1-12> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#deny interfaces LAG <1-8> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#deny ip <A.B.C.D>/<A.B.C.D> interfaces 10GigabitEthernet <1-12> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#deny ip <A.B.C.D>/<A.B.C.D> interfaces LAG <1-8> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#deny ipv6 <X:X::X:X>/<0-128> interfaces 10GigabitEthernet <1-12> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#deny ipv6 <X:X::X:X>/<0-128> interfaces LAG <1-8> service <all/http/https/snmp/ssh/telnet>

Use the “do” command to run execution command in current mode.

<SEQUENCE> -

Related Syntax:

- <config-macl>#do <SEQUENCE>

Use the “end” command to finish current mode. Any changes in current mode will be saved.

Related Syntax:

- <config-macl>#end

Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.

Related Syntax:

- <config-macl>#exit

Use the “no sequence” command to delete any entry in management ACL.

<1-65535>- Specify an index number of the ACL.

Related Syntax:

- <config-macl>#no sequence <1-65535>

Use the “permit” command to add permit rules which bypass the packets meet the rule.

10GigabitEthernet <1-12> - Specify a physical port.

LAG <1-8> - Specify a LAG port.

service <all/http/https/snmp/ssh/telnet> - Specify the service type.

ip <A.B.C.D>/<A.B.C.D> - Specify the source IP address with mask for the packets.

ipv6 <X:X::X:X>/<0-128> - Specify the source IPv6 address and prefix length of the packet.

Related Syntax:

- <config-macl>#permit interfaces 10GigabitEthernet <1-12> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#permit interfaces LAG <1-8> service <all/http/https/snmp/ssh/telnet>
- <config-macl>#permit ip <A.B.C.D>/<A.B.C.D> interfaces

- 
- |   |
|---|
| <pre>10GigabitEthernet &lt;1-12&gt; service &lt;all/http/https/snmp/ssh/telnet&gt; ● &lt;config-macl&gt;#permit ip &lt;A.B.C.D&gt;/&lt;A.B.C.D&gt; interfaces LAG &lt;1-8&gt; service &lt;all/http/https/snmp/ssh/telnet&gt; ● &lt;config-macl&gt;#permit ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; interfaces 10GigabitEthernet &lt;1-12&gt; service &lt;all/http/https/snmp/ssh/telnet&gt; ● &lt;config-macl&gt;#permit ipv6 &lt;X:X::X:X&gt;/&lt;0-128&gt; interfaces LAG &lt;1-8&gt; service &lt;all/http/https/snmp/ssh/telnet&gt;</pre> |
|---|
- 

Use the “sequence” command to deny or permit the ACL.

<1-65535>- Specify an index number of the ACL.

10GigabitEthernet <1-12> - Specify a physical port.

LAG <1-8> - Specify a LAG port.

service <all/http/https/snmp/ssh/telnet> - Specify the service type.

ip <A.B.C.D>/<A.B.C.D> - Specify the source IP address with mask for the packets.

ipv6 <X:X::X:X>/<0-128> - Specify the source IPv6 address and prefix length of the packet.

Related Syntax:

- <config-macl>#sequence <1-65535>deny interfaces
   
10GigabitEthernet <1-12> service
   
<all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535>deny interfaces LAG
   
<1-8> service <all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535>deny ip
   
<A.B.C.D>/<A.B.C.D> interfaces 10GigabitEthernet <1-12>
   
service <all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535>deny ip
   
<A.B.C.D>/<A.B.C.D> interfaces LAG <1-8> service
   
<all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535>deny ipv6
   
<X:X::X:X>/<0-128> interfaces 10GigabitEthernet <1-12>
   
service <all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535>deny ipv6
   
<X:X::X:X>/<0-128> interfaces LAG <1-8> service
   
<all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535> permit interfaces
   
10GigabitEthernet <1-12> service
   
<all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535> permit interfaces LAG
   
<1-8> service <all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535> permit ip
   
<A.B.C.D>/<A.B.C.D> interfaces 10GigabitEthernet <1-12>
   
service <all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535> permit t ip
   
<A.B.C.D>/<A.B.C.D> interfaces LAG <1-8> service
   
<all/http/https/snmp/ssh/telnet>
  - <config-macl>#sequence <1-65535> permit ipv6
   
<X:X::X:X>/<0-128> interfaces 10GigabitEthernet <1-12>
-

	<ul style="list-style-type: none"> <li>service &lt;all/http/https/snmp/ssh/telnet&gt;</li> <li>● &lt;config-macl&gt;#sequence &lt;1-65535&gt; permit &lt;X:X::X:X&gt;/&lt;0-128&gt; interfaces LAG &lt;1-8&gt; service &lt;all/http/https/snmp/ssh/telnet&gt;</li> </ul>
management access-class	<p>Specify an ACL as active access-list.</p> <p>&lt;NAME&gt; - Enter the name of the access list.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# management access-class &lt;NAME&gt;</li> </ul>

#### Example

```
FX2120# configure
FX2120 (config)#
FX2120 (config)# management access-list CA_ACL
FX2120 (config-macl)# deny ip 192.168.2.56/255.255.255.0 interfaces gigabitethernet 3 service
telnet
FX2120 (config-macl)#
FX2120 (config-macl)# deny ipv6 00:50::7f:3b/24
```

### Telnet Command: management-vlan

Use this command to set VLAN ID for management VLAN.

#### Syntax Items

management-vlan vlan

#### Description

Syntax Items	Description
management-vlan vlan	<p>Set the management VLAN ID.</p> <p>&lt;1-4094&gt;- Specify the VLAN ID number of management VLAN.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# management-vlan vlan &lt;1-4094&gt;</li> </ul>

#### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# management-vlan vlan 200
VLAN 200: VLAN does not exist
FX2120(config)#

```

### Telnet Command: mirror

Use this command to set the source / destination interface of a port mirror session.

#### Syntax Items

mirror session

#### Description

Syntax Items	Description
mirror session	<p>Set the destination/source interface of a port mirror session.</p> <p>&lt;1-4&gt; - Specify the mirror session ID number.</p> <p>10GigabitEthernet &lt;1-12&gt; - Specify a physical port as the SPAN destination.</p> <p>LAG &lt;1-8&gt; - Specify a LAG port.</p> <p>allow-ingress - Enable the ingress traffic forwarding.</p> <p>&lt;both/rx/tx&gt; - Specify the mirror direction, TX only, RX only or TX and RX.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mirror session &lt;1-4&gt; destination interface 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;# mirror session &lt;1-4&gt; destination interface 10GigabitEthernet &lt;1-12&gt; allow-ingress</li> <li>● &lt;config&gt;# mirror session &lt;1-4&gt; source interfaces 10GigabitEthernet &lt;1-12&gt; &lt;both/rx/tx&gt;</li> <li>● &lt;config&gt;# mirror session &lt;1-4&gt; source interfaces LAG &lt;1-8&gt;&lt;both/rx/tx&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# mirror session 3 destination interface 10GigabitEthernet 3 allow
FX2120(config)#
FX2120(config)# mirror session 3 source interfaces LAG 3 both
FX2120(config)#

```

## Telnet Command: mvr

Use this command to enable MVR function and configure related settings.

### Syntax Items

mvr  
mvr group  
mvr mode  
mvr query-time  
mvr vlan

### Description

Syntax Items	Description
mvr	<p>Enable MVR function.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mvr</li> </ul>
mvr group	<p>Set MVR group address.</p> <p>&lt;A.B.C.D&gt; - Enter an IP address.</p> <p>&lt;1-128&gt; - Specify a number for contiguous series of IPv4</p>

	<p>multicast address.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mvr group &lt;A.B.C.D&gt;&lt;1-128&gt;</li> </ul>
mvr mode	<p>Set MVR mode as compatible or dynamic.</p> <p>&lt;compatible&gt; - The switch does not support IGMP dynamic joins on the source ports.</p> <p>&lt;dynamic&gt; - The switch supports MVR membership on the source ports.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mvr mode &lt;compatible/dynamic&gt;</li> </ul>
mvr query-time	<p>Set query response time for MVR.</p> <p>&lt;1-10&gt; - Specify the response time (second).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mvr query-time &lt;1-10&gt;</li> </ul>
mvr vlan	<p>Set a VLAN ID for MVR.</p> <p>&lt;1-4094&gt; - Specify the existed static VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# mvr vlan &lt;1-4094&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)#mvr group 192.168.2.33
The operation will delete the MVR VLAN groups include static MVR groups.Continue
? [yes/no]:y
Input Parameter Error
FX2120(config)#

```

### Telnet Command: no

Use this command to disable specific command.

#### Syntax Items

no <command>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# no port-security
FX2120(config)#

```

### Telnet Command: openvpn

Use this command to enable/disable the OpenVPN tunnel.

#### Syntax Items

openvpn enable

```
openvpn disable  
openvpn filename
```

#### Description

Syntax Items	Description
enable	Enable the OpenVPN tunnel.
disable	Disable the OpenVPN tunnel.
filename	<NAME> - Define a name for OpenVPN configuration. Related Syntax: ● <config># openvpn filename <NAME>

#### Example

```
FX2120# configure  
FX2120(config)#openvpn enable  
killall: openvpn: no process killed  
FX2120(config)#
```

### Telnet Command: poe

Use this command configure settings for PoE device. This command is not available for the non-PoE model.

#### Syntax Items

```
poe mode  
poe schedule
```

#### Description

Syntax Items	Description
poe mode	auto - VigorSwitch determines the power watts for PoE device based on actual demand. manual - VigorSwitch will supply actual power demand for the PoE device and reserved PD class power for the PoE device. none - VigorSwitch does not supply any power for the PoE device. Related Syntax: ● <config># poe mode auto ● <config># poe mode manual ● <config># poe mode none
poe schedule	Specify a schedule for PoE device. global-enable - Enable the global setting. index <1-24> - Specify the index number of the schedule profiles. Related Syntax: ● <config># poe schedule global-enable ● <config># poe schedule index <1-24>

**Example**

```
FX2120# configure
FX2120(config)#
FX2120(config)# poe
```

**Telnet Command: port-security**

Use this command to enable the function of port security.

**Syntax Items**

port-security

**Example**

```
FX2120# configure
FX2120(config)# port-security
FX2120(config)#
```

**Telnet Command: qos**

Use this command to configure QoS settings.

**Syntax Items**

qos  
qos map  
qos queue  
qos trust

**Description**

Syntax Items	Description
qos	Enable the quality of service based on basic trust type to assign the queue for packets. Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# qos</li></ul>
qos map	map cos-queue - Set the CoS to queue map. map dscp-queue - Set the DSCP to queue map. map precedence-queue - Set the IP Precedence to queue map. map queue-cos - Modify the queue to CoS map. map queue-dscp - Modify the queue to DSCP map. map queue-precedence - Modify the queue to IP precedence map. <1-8> - Specify the queue number for the following CoS values mapped. <1-8> - Specify the queue number to which the DSCP value shall correspond. <1-8> - Specify the queue number to which the IP precedence value shall correspond. <0-7> - Enter the cos value to which the queue ID shall

	<p>correspond.</p> <p>&lt;0-7&gt; - Enter the DSCP value to which the queue ID shall correspond.</p> <p>&lt;0-7&gt; - Enter the IP precedence value to which the queue ID shall correspond.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# qos map cos-queue SEQUENCE to &lt;1-8&gt;</li> <li>● &lt;config&gt;# qos map dscp-queue SEQUENCE to &lt;1-8&gt;</li> <li>● &lt;config&gt;# qos map precedence-queue SEQUENCE to &lt;1-8&gt;</li> <li>● &lt;config&gt;# qos map queue-cos SEQUENCE to &lt;0-7&gt;</li> <li>● &lt;config&gt;# qos map queue-dscp SEQUENCE to &lt;0-7&gt;</li> <li>● &lt;config&gt;# qos map queue-precedence SEQUENCE to &lt;0-7&gt;</li> </ul>
qos queue	<p>queue strict-priority-num - Set the number of strict priority queue.</p> <p>queue weight SEQUENCE - Set the number of non-strict priority queue.</p> <p>&lt;0-8&gt; - Specify the queue number.</p> <p>&lt;weight1-weight8&gt; &lt;1-127&gt; - Specify a number (1~127) representing queue weight value.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# qos queue strict-priority-num &lt;0-8&gt;</li> <li>● &lt;config&gt;# qos queue weight SEQUENCE &lt;weight1 - weight8&gt; &lt;1-127&gt;</li> </ul>
qos trust	<p>Set the trust type, cos, for the device to judge the appropriate queue of the packets.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# qos trust &lt;cos/cos-dscp/ dscp/ip-precedence&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# qos map cos-queue SEQUENCE to 3
FX2120(config)#+
```

## Telnet Command: radius

Use this command to configure settings for RADIUS server.

### Syntax Items

radius default-config

radius host

### Description

Syntax Items	Description
radius default-config	<p>Key &lt;RADIUSKEY&gt; - Specify key string for RADIUS server.</p> <p>Retransmit &lt;1-10&gt; - Specify the retransmit times (from 1 to 10)</p>

---

	<p>for RADIUS server.</p> <p>Timeout &lt;1-30&gt; - Specify the time out value (from 1 to 30) for RADIUS server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# radius default-config key &lt;RADIUSKEY&gt;</li> <li>● &lt;config&gt;# radius default-config key &lt;RADIUSKEY&gt; retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius default-config key &lt;RADIUSKEY&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius default-config retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius default-config retransmit &lt;1-10&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius default-config timeout &lt;1-30&gt;</li> </ul>
radius host	<p>host &lt;HOSTNAME&gt; - Specify a domain name or IP address for RADIUS server host.</p> <p>auth-port &lt;0~65535&gt; - Specify a UDP port number for RADIUS server.</p> <p>key &lt;RADIUSKEY&gt; - Specify key string for RADIUS server.</p> <p>priority &lt;0~65535&gt; - Specify the priority for RADIUS server.</p> <p>retransmit &lt;1-10&gt; - Specify the retransmit times (from 1 to 10) for RADIUS server.</p> <p>timeout &lt;1-30&gt; - Specify the time out value (from 1 to 30) for RADIUS server.</p> <p>type &lt;802.1x / all / login&gt; - Choose the usage type for 802.1X authentication, or login, or both 802.1X authentication and login of RADIUS type.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; auth-port &lt;0~65535&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; auth-port &lt;0~65535&gt; key &lt;RADIUSKEY&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; auth-port &lt;0~65535&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; auth-port &lt;0~65535&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; auth-port &lt;0~65535&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt; type &lt;802.1x / all / login&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; key &lt;RADIUSKEY&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; key &lt;RADIUSKEY&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt; type &lt;802.1x / all / login&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; priority &lt;0~65535&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; priority &lt;0~65535&gt; retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; priority &lt;0~65535&gt;</li> </ul>

---

- 
- |  |  |
|--|--|
|  | <ul style="list-style-type: none"> <li>retransmit &lt;1-10&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; priority &lt;0-65535&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt; type &lt;802.1x / all / login&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; retransmit &lt;1-10&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; retransmit &lt;1-10&gt; timeout &lt;1-30&gt; type &lt;802.1x / all / login&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; timeout &lt;1-30&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; timeout &lt;1-30&gt; type &lt;802.1x / all / login&gt;</li> <li>● &lt;config&gt;# radius host &lt;HOSTNAME&gt; type &lt;802.1x / all / login&gt;</li> </ul> |
|--|--|
- 

### **Example**

```
FX2120# configure
FX2120(config)#
FX2120(config)# radius default-config key 123456789 retransmit 3 timeout 10
FX2120(config)# radius host radius auth-port 3000
```

## **Telnet Command: schedule**

Use this command to set schedule.

### **Syntax Items**

schedule index

### **Description**

---

<b>Syntax Items</b>	<b>Description</b>
schedule index	<p>Specify an index number for configuring detailed settings of a schedule profile.</p> <p>&lt;1-15&gt; - Enter a number to select a schedule profile.</p> <p>&lt;DESCRIPTION&gt; - Give a brief description for such profile.</p> <p>cycle-days - The action applied with the schedule will take place every few days.</p> <p>monthly-date - The action applied with the schedule will take place in specified day within a month.</p> <p>once - The action applied with the schedule will take place for one time.</p> <p>weekdays - The action applied with the schedule will take place on a certain day within a week.</p> <p>&lt;1-31&gt; - Enter a number to make action repeat.</p> <p>&lt;apr / aug / dec / feb /jan / jul / jun / jul / mar / may / nov / oct / sep &gt; - Represent month of April, August, December, February, January, July, June, March, May, November, October, and September.</p> <p>&lt;sun /mon /tue /wed / thu / fri / sat&gt; - Represent Sunday, Monday, Tuesday, Wednesday, Thursday, Friday and Saturday.</p> <p>&lt;1-31&gt; - Enter a number as the start date within a month.</p>

---

---

<p>&lt;2000-2035&gt; - Enter the number as the year of start date.          &lt;HH:MM&gt; - Enter the hours and the minutes.          &lt;on/off&gt; - Enable (on) or disable (off) the action applied with such profile.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# schedule index &lt;1-15&gt; description &lt;DESCRIPTION&gt;</li> <li>● &lt;config&gt;# schedule index &lt;1-15&gt; how-often cycle-days &lt;1-31&gt; start-date &lt;apr / aug / dec / feb /jan / jul / jun / mar / may / nov / oct / sep &gt; &lt;1-31&gt; &lt;2000-2035&gt; start-time &lt;HH:MM&gt; duration &lt;HH:MM&gt; action &lt;on/off&gt;</li> <li>● &lt;config&gt;# schedule index &lt;1-15&gt; how-often monthly-date &lt;1-31&gt; start-date &lt;apr / aug / dec / feb /jan / jul / jun / mar / may / nov / oct / sep &gt; &lt;1-31&gt; &lt;2000-2035&gt; start-time &lt;HH:MM&gt; duration &lt;HH:MM&gt; action &lt;on/off&gt;</li> <li>● &lt;config&gt;# schedule index &lt;1-15&gt; how-often once start-date&lt;apr / aug / dec / feb /jan / jul / jun / mar / may / nov / oct / sep &gt; &lt;1-31&gt; &lt;2000-2035&gt; start-time &lt;HH:MM&gt; duration &lt;HH:MM&gt; action &lt;on/off&gt;</li> <li>● &lt;config&gt;# schedule index &lt;1-15&gt; how-often weekdays &lt;sun /mon /tue /wed / thu / fri / sat&gt; start-date &lt;apr / aug / dec / feb /jan / jul / jun / mar / may / nov / oct / sep &gt; &lt;1-31&gt; &lt;2000-2035&gt; start-time &lt;HH:MM&gt; duration &lt;HH:MM&gt; action &lt;on/off&gt;</li> </ul>
--

---

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# schedule index 1 how-often cycle-days 3 start-date jan 1 2019 start-time 08:01
duration 17:30 action on
FX2120(config)# schedule index 2 how-often weekdays sun start-date may 11 2019 start-time
02:10 duration 12:10 action on
FX2120(config)#

```

## Telnet Command: sflow

Use this command to configure sflow profile.

### Syntax Items

sflow profile

### Description

Syntax Items	Description
sflow profile	<p>profile &lt;1-8&gt; - Enter the ID number (1 to 8) of the profile.</p> <p>rate &lt;0-65535&gt; - Set the sampling rate for the sFlow profile. 0 means to disable the sampling rate.</p> <p>interval &lt;0-65535&gt; - Set the time interval for the sFlow profile.</p> <p>collector &lt;HOSTNAME&gt; - Set the collector hostname.</p> <p>data_sources interfaces 10GigabitEthernet &lt;1-12&gt; - Speicfy the</p>

---

	<p>LAN port.</p> <p>port &lt;0-65535&gt; - Set the TCP/UDP port number for the profile.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# sflow profile &lt;1-8&gt; rate &lt;0-65535&gt; interval &lt;0-65535&gt; collector &lt;HOSTNAME&gt; data_sources interfaces 10GigabitEthernet &lt;1-12&gt;</li> <li>● &lt;config&gt;# sflow profile &lt;1-8&gt; rate &lt;value&gt; interval &lt;0-65535&gt; collector &lt;HOSTNAME&gt; port &lt;0-65535&gt; data_sources interfaces 10GigabitEthernet &lt;1-12&gt;</li> </ul>
--	--

---

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# sflow profile 3 rate 2558 interval 9600 collector sHost port 1000 data_source
interfaces 10GigabitEthernet 10
DNS resolution failed. Please check DNS server setting or host name
FX2120(config)#
FX2120(config)# sflow profile 3 rate 2558 interval 9600 collector sHost data_sources interfaces
10GigabitEthernet 10
FX2120(config)#

```

## Telnet Command: snmp

Use this command to define SNMP community.

### Syntax Items

snmp community  
 snmp engineid  
 snmp group  
 snmp host  
 snmp trap  
 snmp user  
 snmp view

### Description

---

Syntax Items	Description
snmp community	<p>snmp community - Set community name for SNMP v1 and v2, and access group name.</p> <p>Available parameters for SNMP community:</p> <p>&lt;NAME&gt; after community - Enter a string (maximum length: 20 characters) as community name.</p> <p>&lt;NAME&gt; after group - Enter a string (maximum length: 30 characters) as access group.</p> <p>ro - Set the community as read only.</p> <p>rw - Set the community as read and write.</p> <p>Related Syntax:</p>

---

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp community &lt;NAME&gt; group &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp community &lt;NAME&gt; ro</li> <li>● &lt;config&gt;# snmp community &lt;NAME&gt; rw</li> <li>● &lt;config&gt;# snmp community &lt;NAME&gt; view &lt;NAME&gt; ro</li> <li>● &lt;config&gt;# snmp community &lt;NAME&gt; view &lt;NAME&gt; rw</li> </ul>
snmp engineid	<p>snmp engineid - Set the remote host for SNMP engine.</p> <p>default - Reset to default setting of engine ID for SNMP server.</p> <p>&lt;ENGINEID&gt; - Such number must be 10 ~ 64 hexadecimal.</p> <p>&lt;A.B.C.D&gt; - Enter the IP address of the remote SNMP server.</p> <p>&lt;HOSTNAME&gt; - Enter the host name of the remote SNMP server.</p> <p>&lt;X:X::X:X&gt; - Enter the IPv6 address for remote SNMP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp engineid &lt;ENGINEID&gt;</li> <li>● &lt;config&gt;# snmp engineid default</li> <li>● &lt;config&gt;# snmp engineid remote &lt;A.B.C.D&gt; &lt;ENGINEID&gt;</li> <li>● &lt;config&gt;# snmp engineid remote &lt;HOSTNAME&gt; &lt;ENGINEID&gt;</li> <li>● &lt;config&gt;# snmp engineid remote &lt;X:X::X:X&gt;&lt;ENGINEID&gt;</li> </ul>
snmp group	<p>snmp group - Set the SNMP group.</p> <p>&lt;NAME&gt; - Specify the name of SNMP group.</p> <p>version &lt;1/2c/3&gt; - Specify the version of SNMP service.</p> <p>&lt;auth/noauth/priv&gt; - Specify the packet authentication mode. "auth" means to perform packet authentication without encryption. It is applicable for SNMPv3 only. "noauth" means no packet authentication performed. "priv" means to perform packet authentication with encryption and also it is applicable for SNMPv3 only.</p> <p>read-view &lt;NAME&gt; - Set the view name to enable agent configuration.</p> <p>notify-view &lt;NAME&gt; - Set the view name to send only trap included in SNMP view for notification.</p> <p>write-view &lt;NAME&gt; - Set the view name to enable viewing.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp group &lt;NAME&gt; version &lt;1/2c/3&gt; &lt;auth/noauth/priv&gt; read-view &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp group &lt;NAME&gt; version &lt;1/2c/3&gt; &lt;auth/noauth/priv&gt; read-view &lt;NAME&gt; notify-view &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp group &lt;NAME&gt; version &lt;1/2c/3&gt; &lt;auth/noauth/priv&gt; read-view &lt;NAME&gt; notify-view &lt;NAME&gt; write-view &lt;NAME&gt;</li> </ul>
snmp host	<p>snmp host - Set a host to receive SNMP notifications.</p> <p>&lt;A.B.C.D&gt; - Enter the IPv4/IPv6 address or host name of the receipt.</p> <p>version &lt;1/2c/3&gt; - Specify the version of SNMP service.</p> <p>&lt;NAME&gt; - Set the community name sent with the notification.</p>

---

	<p>udp-port &lt;1-65535&gt; - Set the UDP port number.      timeout &lt;1-300&gt; - Set the timeout of V2c informs.      retries &lt;1-255&gt; - Enter the retry counter of V2c informs.</p> <p>Related Syntax:</p> <p>Set a host to receive SNMP notifications.</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> </ul>
	<p>Set a host to receive SNMP notifications. Notification type is informs.</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; informs version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> </ul>
	<p>Set a host to receive SNMP notifications. Notification type is traps.</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps &lt;NAME&gt; retries</li> </ul>

---

- 
- |  |  |
|--|--|
| <pre>&lt;1-255&gt;</pre>   | <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; traps version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;A.B.C.D&gt; version &lt;1/2c/3&gt;&lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> </ul> |
| <hr/> <pre>&lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt;</pre> | <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; timeout</li> </ul>   |
-

- 
- |  |   |
|--|---|
|  | <p>&lt;1-300&gt;</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; retries &lt;1-255&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME informs &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME traps version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt;</li> </ul> |
|--|---|
-

- 
- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host HOSTNAME version &lt;1/2c/3&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> </ul> | <ul style="list-style-type: none"> <li>&lt;NAME&gt; udp-port &lt;1-65535&gt;</li> </ul> |
|--|---|
- 
- <config># snmp host <X:X::X:X> <NAME>
  - <config># snmp host <X:X::X:X> <NAME> retries <1-255>
  - <config># snmp host <X:X::X:X> <NAME> retries <1-255> timeout <1-300>
  - <config># snmp host <X:X::X:X> <NAME> retries <1-255> timeout <1-300> retries <1-255>
  - <config># snmp host <X:X::X:X> <NAME> udp-port <1-65535>
  - <config># snmp host <X:X::X:X> <NAME> udp-port <1-65535> retries <1-255>
  - <config># snmp host <X:X::X:X> <NAME> udp-port <1-65535> timeout <1-300>
  - <config># snmp host <X:X::X:X> <NAME> udp-port <1-65535> timeout <1-300> retries <1-255>
  - <config># snmp host <X:X::X:X> informs <NAME>
  - <config># snmp host <X:X::X:X> informs <NAME> retries <1-255>
  - <config># snmp host <X:X::X:X> informs <NAME> timeout <1-300>
  - <config># snmp host <X:X::X:X> informs <NAME> retries <1-255> timeout <1-300> retries <1-255>
  - <config># snmp host <X:X::X:X> informs <NAME> udp-port <1-65535>
  - <config># snmp host <X:X::X:X> informs <NAME> udp-port <1-65535> retries <1-255>
  - <config># snmp host <X:X::X:X> informs <NAME> udp-port <1-65535> timeout <1-300>
  - <config># snmp host <X:X::X:X> informs <NAME> udp-port <1-65535> timeout <1-300> retries <1-255>
  - <config># snmp host <X:X::X:X> traps <NAME>
  - <config># snmp host <X:X::X:X> traps <NAME> retries <1-255>
  - <config># snmp host <X:X::X:X> traps <NAME> timeout <1-300>
  - <config># snmp host <X:X::X:X> traps <NAME> timeout <1-300> retries <1-255>
  - <config># snmp host <X:X::X:X> traps <NAME> udp-port <1-65535>
  - <config># snmp host <X:X::X:X> traps <NAME> udp-port <1-65535> retries <1-255>
-

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; traps &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; traps &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; retries &lt;1-255&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt;</li> <li>● &lt;config&gt;# snmp host &lt;X:X::X:X&gt; version &lt;1/2c/3&gt; &lt;NAME&gt; udp-port &lt;1-65535&gt; timeout &lt;1-300&gt; retries &lt;1-255&gt;</li> </ul>
snmp trap	<p>snmp trap - Send the SNMP traps.</p> <p>auth – Enable the SNMP authentication failure trap.</p> <p>cold-start – Enable the SNMP cold startup failure trap.</p> <p>linkUpDown – Enable the SNMP link up and down failure trap.</p> <p>wort-security – Enable the SNMP port security trap.</p> <p>Warm-start – Enable the SNMP warm startup failure trap.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp trap &lt;auth / cold-start / linkUpDown / port-security / warm-start&gt;</li> </ul>
snmp user	<p>snmp user - Set SNMP user account.</p> <p>&lt;username&gt; - Specify a name of SNMP user.</p> <p>&lt;groupNAME&gt; - Sepcify a name of SNMP group.</p> <p>auth &lt;md5/sha&gt; - Specify the authentication mode, md5 or sha.</p> <p>&lt;AUTHPASSWD&gt; - Enter the password for the md5/sha mode.</p> <p>Pri &lt;PRIVPASSWD&gt; - Enter a password as a privacy key.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# snmp user &lt;username&gt; &lt;groupNAME&gt;</li> <li>● &lt;config&gt;# snmp user &lt;username&gt; &lt;groupNAME&gt; auth &lt;md5/sha&gt; &lt;AUTHPASSWD&gt;</li> <li>● &lt;config&gt;# snmp user &lt;username&gt; &lt;groupNAME&gt; auth &lt;md5/sha&gt; &lt;AUTHPASSWD&gt; priv &lt;PRIVPASSWD&gt;</li> </ul>
snmp view	<p>snmp view - Set the SNMP view.</p> <p>&lt;NAME&gt; - Enter the SNMP view name.</p> <p>Subtree &lt;OID&gt; - Specify the ASN.1 subtree object identifier (OID).</p> <p>oid-mask &lt;mask/all&gt; - Speicfy the OID mask, or use all for all masks.</p> <p>viewtype &lt;exluded/included&gt; - Let the selected MIBs include or</p>

exclude in the SNMP view.

Related Syntax:

- <config># snmp view <NAME> subtree <OID> oid-mask <mask> viewtype <excluded/included>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# snmp engineid remote 192.168.2.38 00036D001188
FX2120(config)# snmp engineid remote 00:50::16:88 00036D002288
FX2120(config)# snmp host 192.168.2.89 CAR_community udp-port 1500 timeout 200
FX2120(config)# snmp host 192.168.2.88 informs version 2c CAR_community udp-port 3000
timeout 180 retries 35
FX2120(config)# snmp host 192.168.2.88 traps version 2c CAR_traps udp-port 6500 timeout 60
retries 2
FX2120(config)# snmp host 192.168.2.88 version 2c CAR_version udp-port 3000 timeout 60
retries 2
FX2120(config)# snmp host HOSTNAME CAR_host udp-port 3000 timeout 60 retries
2
FX2120(config)# snmp host HOSTNAME informs HA_informs udp-port 3000 timeout 60 retries
2
FX2120(config)# snmp host HOSTNAME version 2c HT_verstion udp-port 3000 timeout 60
retries 2
FX2120(config)# snmp user CA_user_1 CA_group_1 auth md5 CA12345678 priv PR12345678
FX2120(config)# snmp view CAR_community subtree 10 oid-mask 9 viewtype included
FX2120(config)#

```

## Telnet Command: sntp

Use this command to configure settings for remote SNTP server.

### Syntax Items

sntp host

### Description

Syntax Items	Description
sntp host	<p>Set the remote SNTP server by specifying IP address or hostname.</p> <p>&lt;HOSTNAME&gt; - Enter the IP address or hostname of SNTP server.</p> <p>&lt;1-65535&gt; - Specify the port number for the SNTP server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"><li>● &lt;config&gt;# sntp host &lt;HOSTNAME&gt;</li><li>● &lt;config&gt;# sntp host &lt;HOSTNAME&gt;&gt; port &lt;1-65535&gt;</li></ul>

### Example

```
FX2120# configure
FX2120(config)#

```

```
FX2120(config)# sntp host KEY1245 port 3000
FX2120(config)#
```

## Telnet Command: spanning-tree

Use this command to configure settings for spanning-tree.

### Syntax Items

- spanning-tree
- spanning-tree bpdu
- spanning-tree forward-delay
- spanning-tree hello-time
- spanning-tree max-hops
- spanning-tree maximum-age
- spanning-tree mode
- spanning-tree mst
- spanning-tree pathcost
- spanning-tree priority
- spanning-tree tx-hold-count

### Description

Syntax Items	Description
spanning-tree	<p>Enable the function of spanning-tree.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree</li> </ul>
spanning-tree bpdu	<p>Filter/flood the BPDU packets.</p> <p>&lt;filtering&gt; - Packets will be filtered when STP is disabled on specified interface.</p> <p>&lt;flooding&gt; - Packets will be flooded to all interfaces with STP disabled and flooding mode.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree bpdu&lt;filtering/flooding&gt;</li> </ul>
spanning-tree forward-delay	<p>Set the STP forward delay time.</p> <p>&lt;4-30&gt; - Default value is 15 (seconds).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree forward-delay &lt;4-30&gt;</li> </ul>
spanning-tree hello-time	<p>Set the hello time interval to broadcast the message to other bridges.</p> <p>&lt;1-10&gt; - Default value is 2 (seconds).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree hello-time &lt;1-10&gt;</li> </ul>
spanning-tree max-hops	<p>Set the number of hops for BPDI packets to be forwarded in the MSTP region.</p> <p>&lt;1-40&gt; - Default value is 20 (seconds).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree max-hops &lt;1-40&gt;</li> </ul>

spanning-tree maximum-age	<p>Set the time interval for VigorSwitch to wait without receiving the configuration message.</p> <p>&lt;6-40&gt; - Default value is 20 (seconds).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree maximum-age &lt;6-40&gt;</li> </ul>
spanning-tree mode	<p>&lt;mstp/rstp/stp&gt; - Specify the operation mode for spanning tree, such as multiple spanning tree (MSTP), rapid spanning tree (RSTP) or spanning tree (STP).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree mode &lt;mstp/rstp/stp&gt;</li> </ul>
spanning-tree mst	<p>spanning-tree mst - Configure port priority settings for MST.</p> <p>&lt;0-15&gt; - Specify the instance ID.</p> <p>&lt;0-61440&gt; - Set the priority for the specified instance ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree mst &lt;0-15&gt; priority &lt;0-61440&gt;</li> </ul>
	<p>spanning-tree mst configuration - Access into the MSTP configuration mode. To configure detailed settings, access into next level.</p> <p>&lt;config&gt;# spanning-tree mst configuration</p> <p>&lt;config-mst&gt;#</p> <p>Then, available sub-commands are:</p> <p>&lt;config-mst&gt;#do</p> <p>&lt;config-mst&gt;# end</p> <p>&lt;config-mst&gt;# exit</p> <p>&lt;config-mst&gt;# instance</p> <p>&lt;config-mst&gt;# name</p> <p>&lt;config-mst&gt;# no</p> <p>&lt;config-mst&gt;# revision</p> <p>do &lt;SEQUENCE&gt; - Enter the action to be performed.</p> <p>end - End current mode.</p> <p>exit - Exit from current mode.</p> <p>instance &lt;0-15&gt; vlan &lt;1-4094&gt; - Specify the instance ID number and VLAN ID number.</p> <p>name &lt;NAME&gt; - Set a name of MST configuration.</p> <p>no - Set to default setting.</p> <p>revision &lt;0-65535&gt; - Set revision level.</p>
spanning-tree pathcost	<p>Set the path-cost method for spanning tree.</p> <p>&lt;long/short&gt; - Long means the path cost ranging from 1 to 200000000; short means the path cost ranging from 1 to 65535.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree pathcost method &lt;long/short&gt;</li> </ul>
spanning-tree priority	<p>Set the priority for the specified instance ID.</p> <p>&lt;0-61440&gt; - The number must be multiple of 4096.</p> <p>Related Syntax:</p>

	<ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree priority &lt;0-61440&gt;</li> </ul>
spanning-tree tx-hold-count	<p>Set the maximum number of packets transmission per second. &lt;1-10&gt; - Valid range is from 1 to 10.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# spanning-tree tx-hold-count &lt;1-10&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# spanning-tree forward-delay 20
FX2120(config)#
FX2120(config)# spanning-tree maximum-age 38
FX2120(config)#
FX2120(config)# spanning-tree tx-hold-count 3
FX2120(config)#

```

### Telnet Command: start-up

Use this command to restart ICP status after rebooting VigorSwitch.

#### Syntax Items

start-up icp

#### Description

Syntax Items	Description
start-up icp	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# start-up icp enable</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# start-up icp enable
FX2120(config)#

```

### Telnet Command: storm-control

Use this command to configure settings for Storm Control.

#### Syntax Items

storm-control ifg exclude  
 storm-control ifg include  
 storm-control unit bps  
 storm-control unit pps

#### Description

Syntax Items	Description
--------------	-------------

storm-control ifg exclude	Exclude the preamble and IFG (inter frame gap) into the calculating. Related Syntax: ● <config># storm-control ifg exclude
storm-control ifg include	Include the preamble and IFG (inter frame gap) into the calculating. Related Syntax: ● <config># storm-control ifg include
storm-control unit bps	Change the unit of calculating method for storm-control. bps – Calculate the storm control rate by octet-based. Related Syntax: ● <config># storm-control unit bps
storm-control unit pps	Change the unit of calculating method for storm-control. pps – Calculate the storm control rate by packet-based. Related Syntax: ● <config># storm-control unit pps

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# storm-control ifg exclude
FX2120(config)#
FX2120(config)# storm-control unit bps
FX2120(config)#
```

## Telnet Command: surveillance-vlan

Use this command to configure settings for surveillance-VLAN.

### Syntax Items

surveillance-vlan  
 surveillance-vlan aging-time  
 surveillance-vlan cos  
 surveillance-vlan oui-table  
 surveillance-vlan vlan

### Description

Syntax Items	Description
surveillance-vlan	Enable the function of surveillance VLAN on VigorSwitch. Related Syntax: ● <config># surveillance-vlan
surveillance-vlan aging-time	Set the aging time for surveillance VLAN. <30-65536> - Enter a value as aging time. Related Syntax: ● <config># surveillance-vlan aging-time <30-65536>

surveillance-vlan cos	<p>Set the class of service (0~7) for surveillance VLAN.          &lt;0-7&gt;- Enter a number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# surveillance-vlan cos &lt;0-7&gt; remark</li> </ul>
surveillance-vlan oui-table	<p>Enable OUI surveillance VLAN configuration for specified interface.</p> <p>&lt;A:B:C&gt; - Enter the OUI address (e.g., 00:50:12).</p> <p>&lt;DESCRIPTION&gt; - Enter a string to briefly explain the surveillance VLAN.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# surveillance-vlan oui-table &lt;A:B:C&gt;</li> <li>&lt;DESCRIPTION&gt;</li> </ul>
surveillance-vlan vlan	<p>Specify a VLAN profile as surveillance VLAN.</p> <p>&lt;2-4094&gt; - Specify the surveillance VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# surveillance-vlan vlan &lt;2-4094&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)#
FX2120(config)# surveillance-vlan aging-time 60
FX2120(config)#
FX2120(config)# surveillance-vlan oui-table 00:50:12 fortestonly
FX2120(config)#

```

## Telnet Command: system

Use this command to modify the contact information of VigorSwitch.

### Syntax Items

system contact  
 system location  
 system name

### Description

Syntax Items	Description
system contact	<p>&lt;CONTACT&gt; - Enter a string (maximum length: 256 characters).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# system contact &lt;CONTACT&gt;</li> </ul>
system location	<p>&lt;LOCATION&gt; - Specify the location of the host.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# system location &lt;LOCATION&gt;</li> </ul>
system name	<p>&lt;NAME&gt; - Change the name of the system. The default name is "FX2120".</p>

	Related Syntax: <ul style="list-style-type: none"> <li>● &lt;config&gt;# system name &lt;NAME&gt;</li> </ul>
--	---

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# system contact callMIS
FX2120(config)#
FX2120(config)# system location DrayTek
FX2120(config)# system name UPDATEFRIM
UPDATEFRIM(config)#

```

## Telnet Command: tacacs

Use this command to configure TACACS+ server.

### Syntax Items

tacacs default-config  
tacacs host

### Description

Syntax Items	Description
tacacs default-config	<p>Set the default parameters for the TACACS+ server. Modify the default parameters of server key and timeout setting for the TACACS+ server. &lt;TACPLUSKEY&gt; - Enter a string as the TACACS+ server key. &lt;1-30&gt; - Enter a value as the TACACS+ server timeout.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tacacs default-config</li> <li>● &lt;config&gt;# tacacs default-config key &lt;TACPLUSKEY&gt;</li> <li>● &lt;config&gt;# tacacs default-config key &lt;TACPLUSKEY&gt; timeout &lt;1-30&gt;</li> </ul>
tacacs host	<p>Set host name for the TACACS+ server or set host name, server key and priority for the TACACS+ server. &lt;HOSTNAME&gt; - Enter the host name of the TACACS+ server. &lt;TACPLUSKEY&gt; - Enter a string as the TACACS+ server key. &lt;1-65535&gt; - Enter a value as server priority in server group. &lt;1-30&gt; - Enter a timeout setting.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tacacs host &lt;HOSTNAME&gt;</li> <li>● &lt;config&gt;# tacacs host &lt;HOSTNAME&gt; key &lt;TACPLUSKEY&gt;</li> <li>● &lt;config&gt;# tacacs host &lt;HOSTNAME&gt; key &lt;TACPLUSKEY&gt; priority &lt;1-65535&gt;</li> <li>● &lt;config&gt;# tacacs host &lt;HOSTNAME&gt; key &lt;TACPLUSKEY&gt; priority &lt;0-65535&gt; timeout &lt;1-30&gt;</li> </ul>

### Example

```

FX2120# configure
FX2120(config)#
FX2120(config)# tacacs default-config key tce00056 timeout 25
DNS resolution failed. Please check DNS server setting or host name
FX2120(config)# tacacs host carrie02 key TA012345 priority 3000 timeout 10
FX2120(config)#

```

## Telnet Command: tr069

Use this command to configure parameter settings of TR-069.

### Syntax Items

- tr069 acsPwd
- tr069 acsUsername
- tr069 acsurl
- tr069 cpeEnable
- tr069 cpePwd
- tr069 cpeUsername
- tr069 cpeport
- tr069 healthlinkstatus
- tr069 healthpoewarning
- tr069 healthspeedstatus
- tr069 periodicInfo
- tr069 periodicTime
- tr069 ssl
- tr069 stun
- tr069 stunMAXkeepalive
- tr069 stunMINkeepalive
- tr069 stunaddr
- tr069 stunport
- tr069 tls

### Description

Syntax Items	Description
tr069 acsPwd	<p>&lt;PASSWORD&gt; - Enter the password used for registering to VigorACS server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 acsPwd&lt;PASSWORD&gt;</li> </ul>
tr069 acsUsername	<p>&lt;NAME&gt; - Enter the username used for registering to VigorACS server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 acsUsername&lt;NAME&gt;</li> </ul>
tr069 acsurl	<p>&lt;ADDRESS&gt; - Enter the URL for VigorACS server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 acsurl &lt;ADDRESS&gt;</li> </ul>

tr069 cpeEnable	<p>&lt;disable/enable&gt; - Enter Enable for VigorACS controlling such CPE through the Internet.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 cpeEnable &lt;disable/enable&gt;</li> </ul>
tr069 cpePwd	<p>&lt;PASSWORD&gt; - Enter the password that VigorACS server can use it to authenticate and control the CPE device.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 cpePwd &lt;PASSWORD&gt;</li> </ul>
tr069 cpeUsername	<p>&lt;NAME&gt; - Enter the username that VigorACS server can use it to authenticate and control the CPE device.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 cpeUsername &lt;NAME&gt;</li> </ul>
tr069 cpeport	<p>&lt;0-65535&gt; - Enter the port number for CPE.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 cpeport &lt;0-65535&gt;</li> </ul>
tr069 healthlinkstatus	<p>Perform the health check for the link status of specified interface(s).</p> <p>&lt;PORTLIST&gt; - Specify the interface, such as GE1, GE3-GE5 and so on.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 healthlinkstatus &lt;PORTLIST&gt;</li> </ul>
tr069 healthpoewarning	<p>Perform the health check for PoE port warning status.</p> <p>&lt;PORTLIST&gt; - Specify the interface, such as GE1, GE3-GE5 and so on.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 healthpoewarning &lt;PORTLIST&gt;</li> </ul>
tr069 healthspeedstatus	<p>Perform the health check for link speed status of specified interface(s).</p> <p>&lt;PORTLIST&gt; - Specify the interface, such as GE1, GE3-GE5 and so on.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 healthspeedstatus &lt;PORTLIST&gt;</li> </ul>
tr069 periodicInfo	<p>&lt;disable/enable&gt; - Enter Enable to activate periodic information setting.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 periodicInfo &lt;disable/enable&gt;</li> </ul>
tr069 periodicTime	<p>TIME Update the CPE information to VigorACS server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 periodicTime TIME</li> </ul>
tr069 ssl	<p>&lt;disable/enable&gt; - Enter Enable to enable CPE management protocol with SSL.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 ssl &lt;disable/enable&gt;</li> </ul>
tr069 stun	<p>&lt;disable/enable&gt; - Enter Enable to enable CPE management protocol with STUN server.</p>

	<p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 stun &lt;disable/enable&gt;</li> </ul>
tr069 stunMAXkeepalive	<p>Set the maximum time period for CPE to send the binding request to VigorACS server.</p> <p>&lt;0-65535&gt; - Enter a number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 stunMAXkeepalive &lt;0-65535&gt;</li> </ul>
tr069 stunMINkeepalive	<p>Set the minimum time period for CPE to send the binding request to VigorACS server.</p> <p>&lt;0-65535&gt; - Enter a number.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 stunMINkeepalive &lt;0-65535&gt;</li> </ul>
tr069 stunaddr	<p>&lt;ADDRESS&gt; - Enter the URL/IP address of STUN server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 stunaddr &lt;ADDRESS&gt;</li> </ul>
tr069 stunport	<p>&lt;0-65535&gt; - Set the port number for STUN server.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 stunport &lt;0-65535&gt;</li> </ul>
tr069 tls	<p>Set TLS version (1.2 or 1.3).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# tr069 tls version &lt;tls1.2/tls1.3&gt;</li> </ul>

### Example

```
FX2120# configure
FX2120(config)#
FX2120(config)# tr069 stunaddr 192.168.3.99
FX2120(config)#+
```

## Telnet Command: udld

Use this command to set the time interval of UniDirectional Link Detection (UDLD) sent message.

### Syntax Items

udld

### Description

Syntax Items	Description
udld message time	<p>&lt;1-90&gt; - Specify a time interval (unit: second) for sending message.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;#udld message time &lt;1-90&gt;</li> </ul>

### Example

### Example

```

FX2120# configure
FX2120(config)#
FX2120(config)# udld message time 35
FX2120(config)#

```

## Telnet Command: username

Use this command to add a new user account or edit an existing user account.

### Syntax Items

username

### Description

Syntax Items	Description
username	<p>privilege - Set a user account with the privilege of admin, user or customized level.</p> <p>secret - Set a user account with unencrypted password.</p> <p>secret encrypted - Set a user account with encrypted password.</p> <p>&lt;WORD&gt; - Enter the name (0~32 characters) of the local user profile.</p> <p>&lt;admin/ user&gt; - Specify the privilege level to be admin (privilege 15) / user (privilege 1).</p> <p>&lt;PASSWORD&gt; - Enter a string as the password for the local user.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# username &lt;WORD&gt; privilege &lt;admin/user&gt; secret &lt;PASSWORD&gt;</li> <li>● &lt;config&gt;# username &lt;WORD&gt; secret &lt;PASSWORD&gt;</li> <li>● &lt;config&gt;# username &lt;WORD&gt; secret encrypted &lt;PASSWORD&gt;</li> </ul>

### Example

```

FX2120# configure
FX2120(config)#
FX2120(config)# username carrie_1 privilege admin secret md123456
FX2120(config)#
FX2120(config)# username carrie_1 secret encrypted ca123456
Old password: *****
FX2120(config)#

```

## Telnet Command: vlan

Use this command to configure detailed settings for VLAN profile.

Before configuring, you have to access into next phase. See the following example:

```

FX2120# configure
FX2120(config)#

```

```
FX2120(config)# vlan 3
FX2120(config-vlan)#
```

### Syntax Items

vlan vlan-list  
 vlan mac-vlan group  
 vlan protocol-vlan group

### Description

Syntax Items	Description
vlan vlan-list	<p>Specify the index number of VLAN profile. To configure detailed settings, access into next level.</p> <p>&lt;vlan-list&gt; - The available range is 1 to 4094.</p> <p>&lt;config&gt;# vlan 33  &lt;config-vlan&gt;#</p> <p>Then, available sub-commands are:</p> <ul style="list-style-type: none"> <li>&lt;config-vlan&gt;#do</li> <li>&lt;config-vlan&gt;#end</li> <li>&lt;config-vlan&gt;#exit</li> <li>&lt;config-vlan&gt;#name</li> </ul>
	<p>Use the “do” command to run execution command in current mode.</p> <p>&lt;SEQUENCE&gt; -</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-vlan&gt;#do &lt;SEQUENCE&gt;</li> </ul>
	<p>Use the “end” command to finish current mode. Any changes in current mode will be saved.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-vlan&gt;#end</li> </ul>
	<p>Use the “exit” command to close the current CLI session or return to the previous mode without saving the settings.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-macl&gt;#exit</li> </ul>
	<p>Use the “name” command to add a VLAN profile.</p> <p>&lt;string&gt; - Enter the name of the VLAN profile.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config-vlan&gt;#name &lt;string&gt;</li> </ul>
vlan mac-vlan group	<p>Create a MAC-vlan group.</p> <p>&lt;1-2147483647&gt; - Specify a group ID.</p> <p>&lt;A:B:C:D:E:F&gt; - Enter the MAC address to be mapped.</p> <p>&lt;9-48&gt; - Enter a number representing the subnet mask.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# vlan mac-vlan group &lt;1-2147483647&gt;  &lt;A:B:C:D:E:F&gt; mask &lt;9-48&gt;</li> </ul>

vlan protocol-vlan group	<p>Create a protocol VLAN group with specified protocol type and value.</p> <p>&lt;1-8&gt; - Enter a number to specify a VLAN group.</p> <p>&lt;Ethernet_ii/ 11c_other/snap_1042&gt; - Specify a frame type by entering Ethernet_ii, 11c_other or snap_1042.</p> <p>&lt;value&gt; - Enter a value (0x0600~0xFFFF).</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# vlan protocol-vlan group &lt;1-8&gt; frame-type &lt;Ethernet_ii/ 11c_other/snap_1042&gt; protocol-value &lt;value&gt;</li> </ul>
--------------------------	---

### Example

```
FX2120# configure
FX2120(config)# vlan 3
FX2120 (config-vlan)#
FX2120 (config-vlan)# name vlan_friends
FX2120 (config-vlan)#
...
FX2120(config)# vlan mac-vlan group 33 00:50:17:22:12:ff mask 10
FX2120(config)# vlan group 1 frame-type ethernet_ii protocol-value 0x0600
FX2120(config)#

```

## Telnet Command: voice-vlan

Use this command to enable voice VLAN and configure settings for voice VLAN.

### Syntax Items

voice-vlan aging-time  
 voice-vlan cos  
 voice-vlan oui-table  
 voice-vlan vlan

### Description

Syntax Items	Description
voice-vlan aging-time	<p>Set the voice VLAN aging timeout interval.</p> <p>&lt;30-65536&gt; - The unit is minute. Default is 1440 (minutes).</p> <p>&lt;string&gt; - Enter the name of the VLAN profile.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# voice-vlan aging-time &lt;30-65536&gt;</li> </ul>
voice-vlan cos	<p>Set the voice VLAN cos value and remark function.</p> <p>Specify the class of service for voice VLAN.</p> <p>&lt;0-7&gt; - CoS value. Default is 6. Remark is disabled.</p> <p>remark - L2 user priority is remarked with the CoS value.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# voice-vlan cos &lt;0-7&gt; remark</li> </ul>
voice-vlan oui-table	Add or remove the selected OUI to/from the OUI table. In

---

	<p>default, there are 8 OUI addresses.</p> <p>&lt;A:B:C&gt; - Enter the OUI address.</p> <p>&lt;DESCRIPTION&gt; - Enter a brief description for the specified MAC address to the voice VLAN OUI table.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# voice-vlan cos &lt;0-7&gt; remark</li> </ul>
voice-vlan vlan	<p>Set the VLAN identifier of the voice VLAN.</p> <p>&lt;2-4094&gt; - Enter the number of VLAN ID.</p> <p>Related Syntax:</p> <ul style="list-style-type: none"> <li>● &lt;config&gt;# voice-vlan vlan &lt;2-4094&gt;</li> </ul>

---

### Example

```
FX2120# configure
FX2120(config)# voice-vlan aging-time 1000
FX2120(config)#
FX2120(config)# voice-vlan oui-table 22:30:ff test_01
FX2120(config)#
FX2120(config)# voice-vlan oui-table 00:01:E2 STAMP
FX2120(config)# exit
FX2120# show voice-vlan interfaces 10gigabitEthernet 1
Voice VLAN Aging      : 1000 minutes
Voice VLAN CoS        : 6
Voice VLAN 1p Remark: disabled
```

#### OUI table

OUI MAC		Description
00:E0:BB		3COM
00:03:6B		Cisco
00:E0:75		Veritel
00:D0:1E		Pingtel
00:01:E3		Siemens
00:60:B9		NEC/Philips
00:0F:E2		H3C
00:09:6E		Avaya
22:30:FF		test_01
00:01:E2		STAMP

Port		State		Port Mode		Cos Mode
gi1		Disabled		Auto		Src

### Telnet Command: webhook

Use this command to enable or disable the webhook service.

### Syntax Items

webhook active  
webhook host  
webhook interval  
webhook keep

### Description

Syntax Items	Description
webhook active	<enable/disable> - Enable or disable the webhook application. Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# webhook active &lt;enable/disable&gt;</li></ul>
webhook host	Specify the destination (URL, domain name, IP address) to receive the data transferred by VigorSwitch. ip <ADDRESS> - Enter the IP address of the destination. path <PATH> - Enter the path string (part of the composition of the URL) of the destination. port <number> - Enter a port number (1-65535). service <http/https> - Specify the protocol (http or https) of the destination. url <domain name> - Enter the domain name (e.g., draytek.com) of the destination. Note that it is not necessary to enter this information if IP address has been set first. Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# webhook host ip &lt;ADDRESS&gt;</li><li>● &lt;config&gt;# webhook host path &lt;PATH&gt;</li><li>● &lt;config&gt;# webhook host port &lt;number&gt;</li><li>● &lt;config&gt;# webhook host service &lt;http/https&gt;</li><li>● &lt;config&gt;# webhook host url &lt;domain name&gt;</li></ul>
webhook interval	<1-60> - Set the transmission interval (unit is minute). Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# webhook interval &lt;1-60&gt;</li></ul>
webhook keep	setings <enable/disable> - Enable or disable the function of keep webhook settings. Related Syntax: <ul style="list-style-type: none"><li>● &lt;config&gt;# webhook keep setings &lt;enable/disable&gt;</li></ul>

### Example

```
FX2120# configure
FX2120(config)# webhook host service https
FX2120(config)# webhook host url www.demo.com
FX2120(config)# webhook host path Draytek/demo
FX2120(config)# webhook host port 443
FX2120(config)# webhook interval 2
```

## A-2-4 Copy Configuration

Use this command to upgrade firmware image, configuration file, syslog file, language file and security certificate.

### Syntax Items

```
copy flash://  
copy tftp://  
copy startup-config
```

### Description

Syntax Items	Description
copy flash://	Related Syntax: <ul style="list-style-type: none"><li>● # copy flash:// flash://</li><li>● # copy flash:// tftp://</li></ul>
copy startup-config	running-config - Copy the startup configuration file to the running configuration. tftp:// - Copy the startup configuration file to remote TFTP server with a filename. <IP address> - Enter the IP address of TFTP sever. <filename> - Create a name to save the configuration file. Related Syntax: <ul style="list-style-type: none"><li>● # copy startup-config tftp://</li></ul>
copy tftp://	running-config - Get the running configuration from specified TFTP server. startup-config - Get the startup configuration from specified TFTP server. Related Syntax: <ul style="list-style-type: none"><li>● # copy tftp:// flash://</li><li>● # copy tftp:// startup-config</li><li>● # copy tftp:// tftp://</li></ul>

### Example

```
FX2120# copy startup-config tftp://172.16.3.8/test_da.cfg  
Uploading file. Please wait...  
Save configuration done.  
FX2120#
```

## A-2-5 Delete Configuration

Use this command to delete a file from the FLASH file system or restore the factory default settings of VigorSwitch.

### Syntax Items

```
delete flash:// startup-config  
delete startup-config
```

#### Description

Syntax Items	Description
delete flash://startup-config	Delete the startup configuration file in FLASH file system. Related Syntax: ● # delete flash://startup-config
delete startup-config	Restore the factory default settings of VigorSwitch. Related Syntax: ● # delete startup-config

#### Example

```
FX2120# delet flash://startup-config
Delete flash://startup-config [y/n] y
Do you want to reload the system to take effect? [y/n] y
...
```

## A-2-6 Disable Configuration

All commands used will be divided into EXEC mode and Privileged EXEC mode. This command is to turn off privileged mode command.

Default privilege level is 15 if no privilege level is specified on enable command.

Default privilege level is 1 if no privilege level is specified on disable command.

#### Syntax Items

disable

#### Description

Syntax Items	Description
disable	Enter a number to specify the privilege level. Related Syntax: ● # disable <1-14>

#### Example

```
FX2120# disable ?
<1-14> Privilege level
<cr>
FX2120# disable 3
FX2120#
<1-14> Privilege level
<cr>
FX2120# disable 3
FX2120#
```

## A-2-7 End Configuration

Use this command to end current mode.

**Syntax Items**

end

**Example**

```
FX2120(config)# interface GigabitEthernet 3
FX2120(config-if)# end
FX2120#
```

## A-2-8 Exit Configuration

Use this command to close current CLI session or return to previous mode.

**Syntax Items**

exit

**Example**

```
FX2120(config)# interface 10GigabitEthernet 3
FX2120(config-if)# exit
FX2120(config)#
```

## A-2-9 Hardware-Monitor Configuration

Use this command to execute the hardware fan test.

**Syntax Items**

hardware-monitor fan-test

**Example**

```
FX2120# hardware-monitor fan-test
Test Start...
fan1:
4825
Fan1 Success
Test Done.
FX2120#
```

## A-2-10 Ping Configuration

Use this command to send ICMP ECHO\_REQUEST to network hosts.

**Syntax Items**

ping

**Description**

Syntax Items	Description
ping	<p>&lt;HOSTNAME&gt; - Enter an IPv4/IPv6 address or a domain name to ping.</p> <p>&lt;1-999999999&gt; - Specify the number of repetitions of ping operation.</p> <p>Related Syntax:</p> <pre># ping &lt;HOSTNAME&gt; # ping &lt;HOSTNAME&gt; count &lt;1-999999999&gt;</pre>

#### Example

```
FX2120# ping 192.168.1.11 count 3
PING 192.168.1.11 (192.168.1.11): 56 data bytes
64 bytes from 192.168.1.11: icmp_seq=0 ttl=64 time=0.0 ms
64 bytes from 192.168.1.11: icmp_seq=1 ttl=64 time=0.0 ms
64 bytes from 192.168.1.11: icmp_seq=2 ttl=64 time=0.0 ms
--- 192.168.1.11 ping statistics ---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip min/avg/max = 0.0/0.0/0.0 ms
FX2120#
```

## A-2-11 Reboot Configuration

Use this command to perform a cold restart of VigorSwitch.

#### Syntax Items

reboot

#### Example

```
FX2120# reboot
FX2120#
```

## A-2-12 Renew Configuration

Use this command to renew DHCP Snooping database from backup file.

#### Syntax Items

renew ip dhcp snooping database

#### Example

```
FX2120# renew ip dhcp snooping database
FX2120#
```

## A-2-13 Restore-defaults Configuration

Use this command to restore the factory default settings for the system or for the selected port.

#### Syntax Items

restore-defaults

#### Description

Syntax Items	Description
restore-defaults	<1-12> - Enter the number (1 to 12) of LAN port. <1-8> - Enter the number of LAG port. Related Syntax: <ul style="list-style-type: none"><li>● # restore-defaults</li><li>● # restore-defaults interfaces 10GigabitEthernet &lt;1-12&gt;</li><li>● # restore-defaults interfaces LAG &lt;1-8&gt;</li></ul>

#### Example

```
FX2120# restore-defaults interfaces 10gigabitethernet 3
Interface gi3: restore factory defaults.
FX2120#
FX2120# restore-default
System: restore factory defaults. Do you want to reboot now? (y/n)y
```

## A-2-14 Save Configuration

Use this command to save configuration and activate the settings.

Note that this command has the same effect as "copy running-config startup-config".

#### Syntax Items

save

#### Example

```
FX2120# save
Success
FX2120#
```

## A-2-15 Show Configuration

After finished the command setting, use this command to display the configuration for all commands.

#### Syntax Items

show <command>

#### Example

```
FX2120# show acl utilization
Type: sys                                usage: 256
```

```

Type: IPSG                                usage: 128
Type: Auth                                 usage: 128
FX2120#
FX2120#
FX2120# show arp
Address          HWtype  HWaddress      Flags Mask       Iface
192.168.1.55    ether    00:1D:AA:F0:26:08  C           eth0
192.168.1.10    ether    00:05:5D:E4:D8:EE  C           eth0
FX2120# show voice-vlan interfaces gigabitethernet 3
Voice VLAN Aging     : 1440 minutes
Voice VLAN CoS       : 6
Voice VLAN 1p Remark: disabled
OUI table
  OUI MAC      | Description
-----+-----
  00:E0:BB    | 3COM
  00:03:6B    | Cisco
  00:E0:75    | Veritel
  00:D0:1E    | Pingtel
  00:01:E3    | Siemens
  00:60:B9    | NEC/Philips
  00:0F:E2    | H3C
  00:09:6E    | Avaya

  Port | State     | Port Mode   | Cos Mode
-----+-----+-----+-----
  gi3  | Disabled  | Auto        | Src
FX2120#

```

## A-2-16 SSL Configuration

Use this command to generate security certificate files such as RSA, DSA.

After entering the command of SSL, follow the onscreen questions to give the required information.

### Syntax Items

ssl

### Example

```

FX2120# ssl
Generating a 1024 bit RSA private key
.....+++++
.....+++++
writing new private key to '/mnt/ssh/ssl_key.pem_tmp'
-----
You are about to be asked to enter information that will be incorporated

```

into your certificate request.  
 What you are about to enter is what is called a Distinguished Name or a D  
 There are quite a few fields but you can leave some blank  
 For some fields there will be a default value,  
 If you enter '.', the field will be left blank.

-----  
 Country Name (2 letter code) [AU]:tw  
 State or Province Name (full name) [Some-State]:hs  
 Locality Name (eg, city) []:hschu  
 Organization Name (eg, company) [Internet Widgits Pty Ltd]:draytek  
 Organizational Unit Name (eg, section) []:marketing  
 Common Name (e.g. server FQDN or YOUR name) []:draytek  
 Email Address :carrie\_ni@draytek.com  
 FX2120#

## A-2-17 Terminal Configuration

Use this command to set the maximum line number that the terminal is able to print.

### Syntax Items

terminal

### Description

Syntax Items	Description
terminal	<0-24> - Enter the length value. 0 means no limit. Related Syntax: <input checked="" type="radio"/> # terminal length <0-24>

### Example

```
FX2120# terminal length 15
FX2120# show running-config
.....
```

## A-2-18 Traceroute Configuration

Use this command to execute network trace route diagnostic.

### Syntax Items

traceroute

### Description

Syntax Items	Description
traceroute	<HOSTNAME>- Enter the IP address or the hostname of the device for VigorSwitch to perform traceroute diagnostic. Related Syntax:

---

---

● # traceroute <HOSTNAME>

---

**Example**

```
FX2120# traceroute 192.168.1.224
traceroute to 192.168.1.224 (192.168.1.224), 30 hops max, 40 byte packets
 1  192.168.1.224 (192.168.1.224)  0 ms  0 ms  0 ms
FX2120#
```

## A-2-19 UDLD Configuration

Use this command to reset all interfaces disabled by the UniDirectional Link Detection (UDLD) and make data traffic begin passing through the interfaces again.

**Syntax Items**

traceroute

**Description**

Syntax Items	Description
udld	Reset all the interfaces which have been shut down by UDLD. Related Syntax: ● # udld reset

**Example**

```
FX2120# udld reset
FX2120#
```